

Quick Operation Guide

While holding down the [DEMO], [METRONOME], or [VOICE] button, press the highlighted keys shown below to select voice demos etc, or set parameters.

Voice Demo

Preset Song (50 greats for the Piano)

Voice (including the dual voice)

Reverb Type

Reverb Depth

Dual Octave Setting

Dual Balance

Metronome Volume


Metronome Time Signature

Metronome / Preset Song Tempo


Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters.


Tune Up: in about 0.2Hz steps (Press any highlighted key)

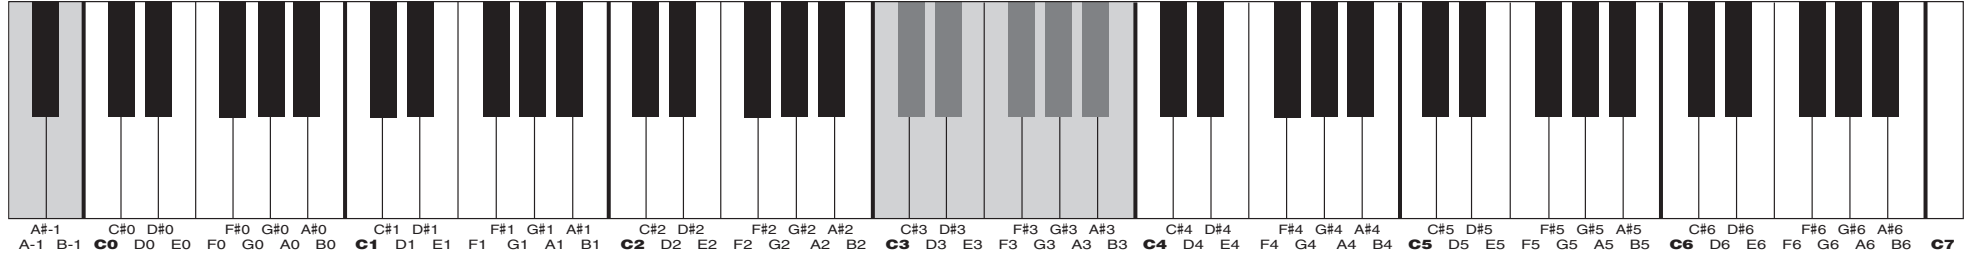

Tune Down: in about 0.2Hz steps (Press any highlighted key)

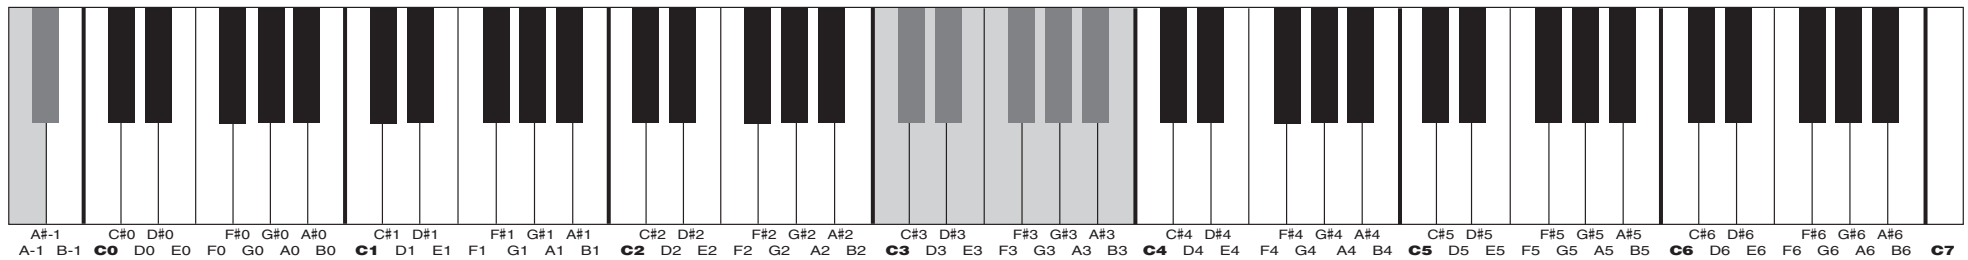

Standard pitch : 440.0 Hz (Press any highlighted key)

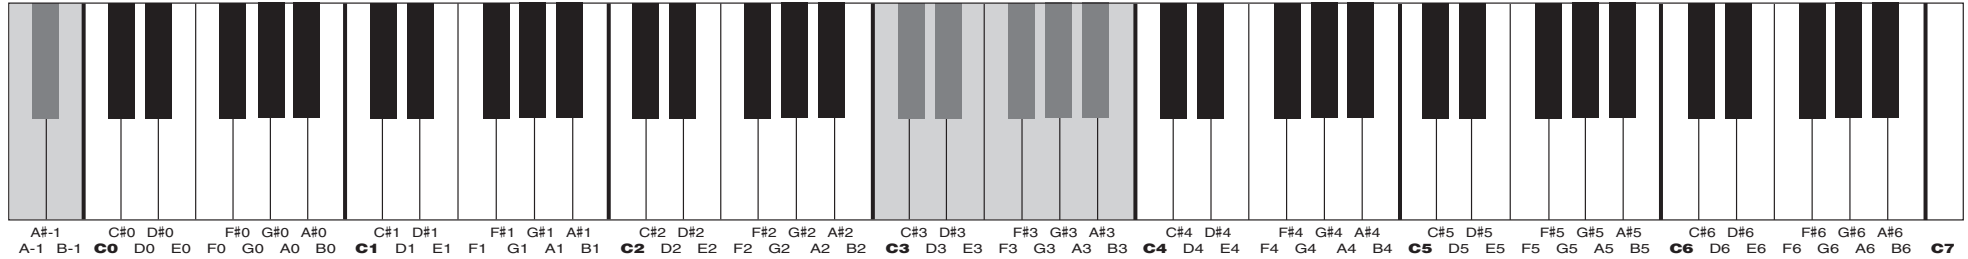

Program Change

MIDI Transmit Channel

Transpose

MIDI Receive Channel

Local Control

Control Change

