


# P-145, P-143 Kvikguide

Hold [GRAND PIANO/FUNCTION]-knappen nede, og tryk på en af de fremhævede tangenter, der er vist nedenfor, for at indstille en parameter.

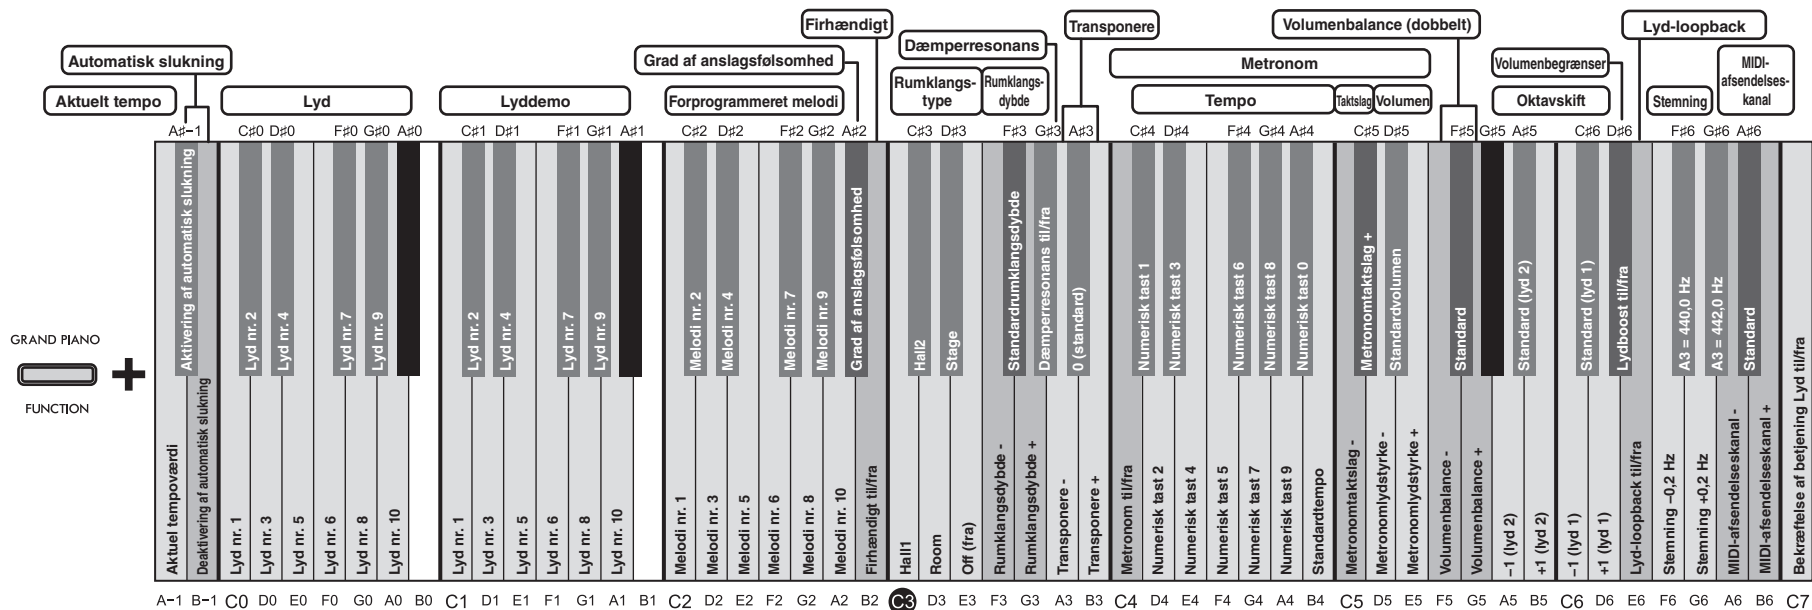

## Liste over lyde

Nr.	P-145	P-143
1	GRAND PIANO 1 (Flygel 1)	GRAND PIANO 1 (Flygel 1)
2	GRAND PIANO 2 (Flygel 2)	GRAND PIANO 2 (Flygel 2)
3	E. PIANO 1 (Elektrisk klaver 1)	E. PIANO 1 (Elektrisk klaver 1)
4	E. PIANO 2 (Elektrisk klaver 2)	E. PIANO 2 (Elektrisk klaver 2)
5	PIPE ORGAN 1 (Pibeorgel 1)	PIPE ORGAN 1 (Pibeorgel 1)
6	PIPE ORGAN 2 (Pibeorgel 2)	PIPE ORGAN 2 (Pibeorgel 2)
7	HARPSICHORD (Cembalo)	HARPSICHORD 1 (Cembalo 1)
8	ACCORDION (Akkordeon)	HARPSICHORD 2 (Cembalo 2)
9	DI ZI (Di zi)	VIBRAPHONE (Vibrafon)
10	STRINGS (Strygere)	STRINGS (Strygere)

## Liste over forprogrammerede melodier

Nr.	Titel	Komponist
1	Menuett G dur BWV Anh. 114	J. S. Bach
2	Turkish March	W. A. Mozart
3	Für Elise	L. v. Beethoven
4	Valse op.64-1 "Petit chien"	F. F. Chopin
5	Träumerei	R. Schumann
6	Dolly's Dreaming and Awakening	T. Oesten
7	Arabesque	J. F. Burgmüller
8	Humoresque	A. Dvořák
9	The Entertainer	S. Joplin
10	La Fille aux Cheveux de Lin	C. A. Debussy

© 2023 Yamaha Corporation  
Published 04/2023  
II-A0