

# YAMAHA *Clavinova*®

## CLP-134

Owner's Manual  
Bedienungsanleitung  
Mode d'emploi  
Manual de instrucciones

### IMPORTANT

#### Check your power supply

Make sure that your local AC mains voltage matches the voltage specified on the name plate on the bottom panel. In some areas a voltage selector may be provided on the rear panel of the main keyboard unit. Make sure that the voltage selector is set for the voltage in your area.

### WICHTIG

#### Überprüfung der Stromversorgung

Sicherstellen, daß die örtliche Netzspannung den Betriebsspannungswerten entspricht, die in die Plakette auf der Unterseite des Keyboards eingetragen sind. Für manche Bestimmungsländer ist das Keyboard mit einem Spannungswähler auf der Rückseite ausgerüstet. Darauf achten, daß der Spannungswähler auf die örtliche Netzspannung eingestellt ist.

### IMPORTANT

#### Contrôler la source d'alimentation

S'assurer que la tension secteur locale correspond à la tension indiquée sur la plaque d'identification située sur le panneau inférieur. Les modèles destinés à certaines régions peuvent être équipés d'un sélecteur de tension situé sur la plaque d'identification, sur le panneau arrière du clavier. Vérifier que le sélecteur est bien réglé pour la tension secteur utilisée.


### IMPORTANTE

#### Verifique la alimentación de corriente

Asegúrese de que el voltaje local de CA concuerde con el especificado en la placa de identificación del panel inferior. En algunas áreas, la unidad viene provista de un selector de voltaje en el panel posterior de la unidad de teclado principal. Asegúrese de que este selector esté en la posición correspondiente al voltaje de su área.

# SPECIAL MESSAGE SECTION

**PRODUCT SAFETY MARKINGS:** Yamaha electronic products may have either labels similar to the graphics shown below or molded/stamped facsimiles of these graphics on the enclosure. The explanation of these graphics appears on this page. Please observe all cautions indicated on this page and those indicated in the safety instruction section.

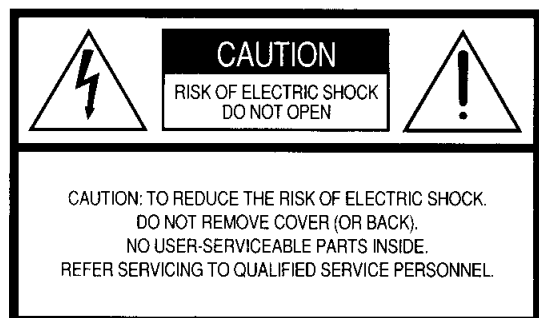

See bottom of Keyboard enclosure for graphic symbol markings



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.

**IMPORTANT NOTICE:** All Yamaha electronic products are tested and approved by an independent safety testing laboratory in order that you may be sure that when it is properly installed and used in its normal and customary manner, all foreseeable risks have been eliminated. DO NOT modify this unit or commission others to do so unless specifically authorized by Yamaha. Product performance and/or safety standards may be diminished. Claims filed under the expressed warranty may be denied if the unit is/has been modified. Implied warranties may also be affected.

**SPECIFICATIONS SUBJECT TO CHANGE:** The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

**ENVIRONMENTAL ISSUES:** Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:


**Battery Notice:** This product MAY contain a small non-rechargeable battery which (if applicable) is soldered in place. The average life span of this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

**Warning:** Do not attempt to recharge, disassemble, or incinerate this type of battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by applicable laws. Note: In some areas, the servicer is required by law to return the defective parts. However, you do have the option of having the servicer dispose of these parts for you.

**Disposal Notice:** Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc.

**NOTICE:** Service charges incurred due to lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

**NAME PLATE LOCATION:** The graphic below indicates the location of the name plate. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, serial number, and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

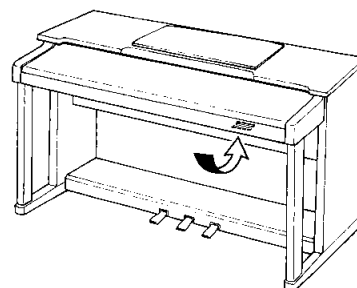

Model \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date \_\_\_\_\_

# *Clavinova*® **CLP-134**

---

**Owner's Manual**

Page 2 — 21

***English***

**Bedienungsanleitung**

Seite 22 — 41

***Deutsch***

**Mode d'emploi**

Pages 42 — 61

***Français***

**Manual de instrucciones**

Páginas 62 — 81

***Español***

# Introduction

---

Thank you for choosing a Yamaha CLP-134 Clavinova. Your Clavinova is a fine musical instrument that employs advanced Yamaha music technology. With the proper care, your Clavinova will give you many years of musical pleasure.

- Stereo sampling of the acoustic piano voices offers unmatched realism and expressive power, while the AWM (Advanced Wave Memory) tone generator system offers rich, realistic reproductions of all other voices.
- 32-note polyphony permits use of the most sophisticated playing techniques.
- Piano-like touch response — adjustable in 3 stages — provides extensive expressive control and outstanding playability.
- Dual play mode allows 2 voices to be played simultaneously.
- A number of built-in effects for wide-ranging sonic versatility.
- Unique Clavinova Tone voice provides a fresh sound for new musical expression.
- Damper pedal includes natural resonance effect for the piano voices, simulating the string and sound-board resonance of acoustic pianos.
- MIDI compatibility and a range of MIDI functions make the Clavinova useful in a range of advanced MIDI music systems.

In order to make the most of your Clavinova's performance potential and features, we urge you to read this Owner's Manual thoroughly, and keep it in a safe place for later reference.

## Taking Care Of Your Clavinova

---

Your Clavinova is a fine musical instrument, and deserves the most careful treatment. Observe the following points and your Clavinova will sound and look great for many years.

- 1** Never open the case and touch or tamper with the internal circuitry.
- 2** Always turn the POWER switch OFF after use, and close the key cover to protect the keyboard.
- 3** Clean the cabinet and keys of your Clavinova only with a clean, slightly damp cloth. A neutral cleanser may be used if desired. Never use abrasive cleansers, waxes, solvents or chemical dust cloths since these can dull or damage the finish.
- 4** Never place any vinyl products on your Clavinova. Contact with vinyl can cause irreversible damage to the finish.
- 5** Install your Clavinova in a place that is away from direct sunlight, excessive humidity or heat.
- 6** Never apply excessive force to the controls, connectors or other parts of your Clavinova, and avoid scratching or bumping it with hard objects.
- 7** Make sure that your local AC mains voltage matches the voltage specified on the name plate.\* In some areas a voltage selector may be provided on the rear panel of the main unit. Make sure that the voltage selector is set for the voltage in your area.


\* **Name Plate Location**

The CLP-134 name plate is located on the bottom panel.

# Contents

<b>The Control Panel</b> .....	4
<b>Connections</b> .....	6
<b>Selecting &amp; Playing Voices</b> .....	7
■ Playing the Demonstration Tunes .....	8
<b>The Dual Mode</b> .....	9
● Adjusting the Balance Between the Dual-mode Voices .....	9
● Shifting a Dual-mode Voice Up One Octave .....	9
● Slow-attack Strings .....	9
● Memorizing the Balance, Strings Type, & Octave Shift Settings .....	9
<b>Reverb</b> .....	10
● Adjusting Reverb Depth .....	10
● Memorizing the Reverb Type & Depth Settings .....	10
<b>Effects</b> .....	11
● Memorizing Effects for Each Voice .....	11
<b>The Pedals</b> .....	11
● Soft (Left) Pedal .....	11
● Sostenuto (Center) Pedal .....	11
● Damper (Right) Pedal .....	11
<b>Touch Sensitivity</b> .....	12
● Memorizing the Touch Sensitivity Setting .....	12
<b>Transposition</b> .....	12
<b>Pitch Control</b> .....	13
● Tuning Up .....	13
● Tuning Down .....	13
● To Restore Standard Pitch .....	13
<b>Individual Key Tuning</b> .....	14
● To Lower the Pitch of a Single Key .....	14
● To Raise the Pitch of a Single Key .....	14
● To Restore Standard Tuning For A Single Key .....	14
● To Turn the Individual Key Tune Mode ON or OFF .....	15
● To Restore Standard Tuning For All Keys .....	15
<b>Factory Preset Recall</b> .....	15
<b>MIDI Functions</b> .....	16
● A Brief Introduction to MIDI .....	16
● MIDI "Messages" Transmitted & Received by the Clavinova .....	16
● MIDI Transmit & Receive Channel Selection .....	17
● MIDI Transmit Transpose .....	17
■ Other MIDI Functions .....	18
● Local Control ON/OFF .....	18
● Program Change ON/OFF .....	18
● Control Change ON/OFF .....	19
● The Multi-Timbre Mode .....	19
● The MIDI Split & Left Local OFF Mode .....	20
● The MIDI Split & Right Local Off Mode .....	20
● Transmitting the Panel Settings .....	20
<b>Troubleshooting</b> .....	21
<b>Options &amp; Expander Modules</b> .....	21
<b>Keyboard Stand Assembly</b> .....	82
<b>MIDI Data Format</b> .....	90
<b>MIDI Implementation Chart</b> .....	92
<b>Specifications</b> .....	93

# The Control Panel

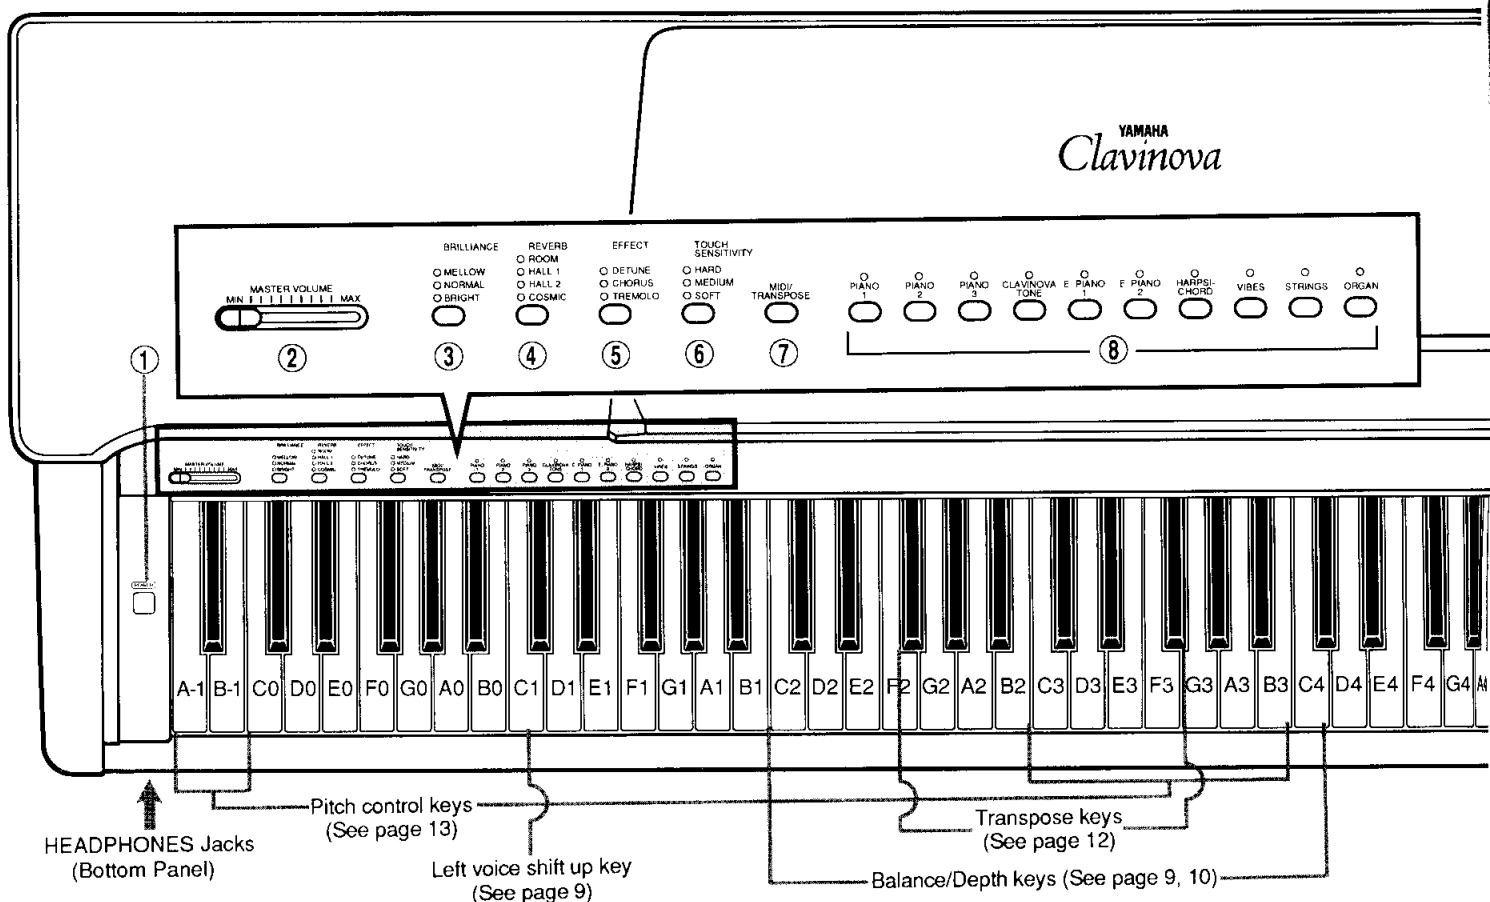

## ① [POWER] Switch

Press the [POWER] switch once to turn the power ON, a second time to turn the power OFF. When the power is initially turned ON, the [PIANO 1] voice selector LED will light.

## ② [MASTER VOLUME] Control

The [MASTER VOLUME] control adjusts the volume (level) of sound produced by the Clavinova's internal stereo sound system. The [MASTER VOLUME] control also adjusts headphone volume when a pair of headphones is plugged into the HEADPHONES jack (page 6).

## ③ [BRILLIANCE] Button

This button can be used to change the tonality or "timbre" of the selected voice. Three settings are provided: MELLOW, NORMAL, and BRIGHT. To select one of these settings, press the [BRILLIANCE] button a few times until the indicator corresponding to the desired setting lights. The NORMAL setting produces the "normal" tone of the selected voice. The BRIGHT setting creates a brighter or "sharper" tone, while the MELLOW setting produces a "rounder" more mellow tone.

## ④ [REVERB] Button

The [REVERB] button selects a number of digital reverb effects that you can use for extra depth and expressive power.

⇨ See page 10 for details.

## ⑤ [EFFECT] Button



The [EFFECT] button selects a range of three effects — detune, chorus, and tremolo — that you can use in addition to the REVERB effects.

⇨ See page 11 for details.

## ⑥ [TOUCH SENSITIVITY] Button

The [TOUCH SENSITIVITY] button selects three different types of keyboard touch sensitivity — HARD, MEDIUM or SOFT — to match different playing styles and preferences.

⇨ See page 12 for details.

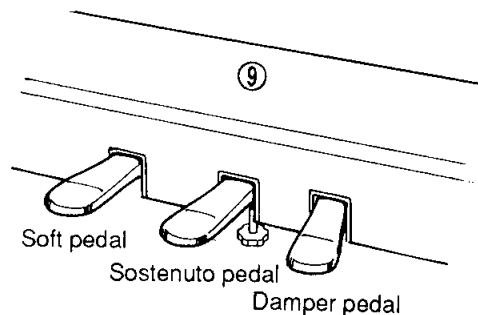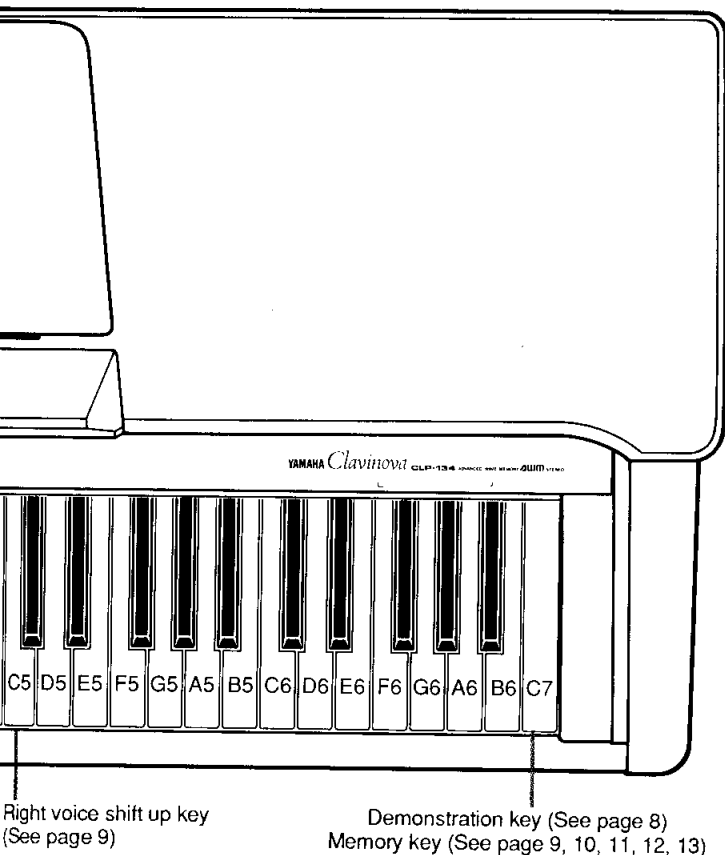

### 7 [MIDI/TRANPOSE] Button

The [MIDI/TRANPOSE] button allows access to the Clavinova's TRANSPOSE function (to shift the pitch of the entire keyboard up or down) and MIDI functions. For details refer to the "TRANSPOSITION" and "MIDI FUNCTIONS" sections on pages 12 and 16, respectively.

### 8 Voice Selectors

The CLP-134 has ten voice selectors. Simply press any of the voice selectors to select the corresponding voice. The LED indicator above the voice selector will light to indicate which voice is currently selected. The CLP-134 also has a DUAL mode in which two voices can be played simultaneously across the full range of the keyboard — see page 9 for details.


*Note: The PIANO 1 voice is automatically selected whenever the [POWER] switch is initially turned ON.*

### 9 Pedals

The CLP-134's soft (left), sostenuto (center), and damper (right) pedals provide a range of expressive control capabilities similar to the pedal functions on an acoustic piano.

↔ See page 11 for details.


### ● The Music Stand

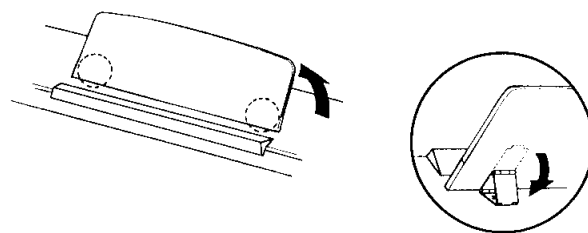


If you will be using sheet music with your Clavinova, raise the music stand built into its top panel by lifting the rear edge of the music stand, then flip down the music stand braces and engage them with the corresponding recesses.

The music stand can be lowered after slightly lifting it and folding the two brackets which support it against the back of the stand.

# Connections

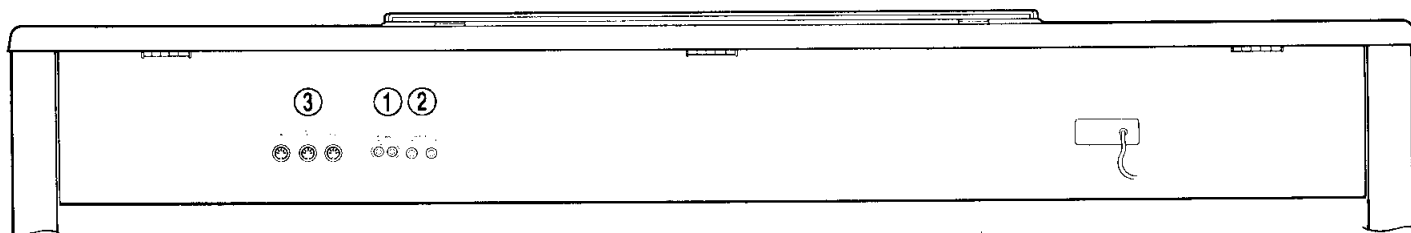


## ① OPTIONAL IN L/R Jacks

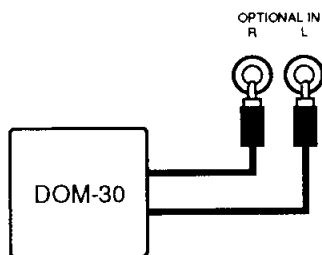

These jacks are intended for use with an external tone generator module such as the Yamaha DOM-30 Disk Orchestra Module. The stereo outputs from the external tone generator module are connected to the OPTIONAL IN L and R jacks, allowing the sound of the tone generator to be reproduced via the Clavinova's internal sound system and speakers.

## ② AUX OUT R and L/L+R Jacks

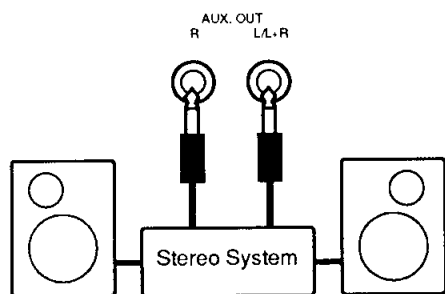


The AUX OUT R and L/L+R jacks deliver the output of the Clavinova for connection to an instrument amplifier, mixing console, PA system, or recording equipment. If you will be connecting the Clavinova to a monaural sound system, use only the L/L+R jack. When a plug is inserted into the L/L+R jack only, the left- and right-channel signals are combined and delivered via the L/L+R jack so you don't lose any of the Clavinova's sound.

### **The Internal Amplifier & Speaker System**

*The CLP-134 features a powerful stereo amplifier delivering 50 watts per channel, driving a bass-reflex speaker system that puts out exceptionally rich sound with natural response from powerful lows to shimmering highs. The speaker system includes two 16-centimeter speaker units, two 10-centimeter units, and two 5-centimeters speaker units.*

**Note:** The AUX OUT jack signal must never be returned to the OPTIONAL IN jacks, either directly or through external equipment.


## ③ MIDI IN, THRU and OUT Connectors

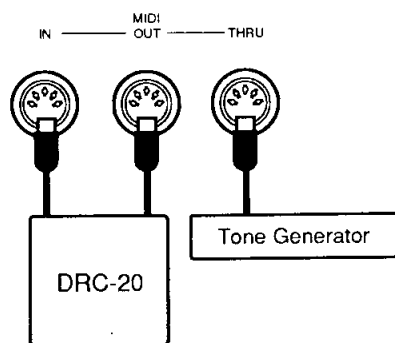

The MIDI IN connector receives MIDI data from an external MIDI device (such as the DRC-20 Disk Recorder, or DOM-30 Disk Orchestra Module) which can be used to control the Clavinova. The MIDI THRU connector re-transmits any data received at the MIDI IN connector, allowing "chaining" of several MIDI instruments or other devices. The MIDI OUT connector transmits MIDI data generated by the Clavinova (e.g. note and velocity data produced by playing the Clavinova keyboard).

More details on MIDI are given in "MIDI FUNCTIONS" on page 16.

## ● HEADPHONES Jacks (Bottom Panel)

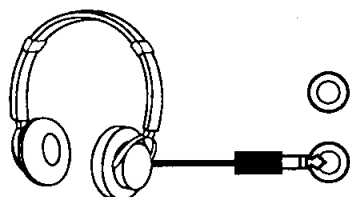


Two pairs of standard pair of stereo headphones can be plugged in here for private practice or late-night playing. The internal speaker system is automatically shut off when a pair of headphones is plugged into either of the HEADPHONES jacks.



# Selecting & Playing Voices
 
## 1 Turn Power On



After making sure that the Clavinova's AC plug is properly inserted into a convenient AC wall outlet, press the [POWER] switch located to the left of the keyboard to turn the power ON.

When the power is turned ON, the [PIANO 1] voice selector LED will light (the PIANO 1 voice is automatically selected whenever the power is turned ON).


## 2 Set the Volume



Initially set the [MASTER VOLUME] control about half way between the "MIN" and "MAX" settings. Then, when you start playing, re-adjust the [MASTER VOLUME] control for the most comfortable listening level.

## 3 Select a Voice

Select the desired voice by pressing one of the voice selectors.

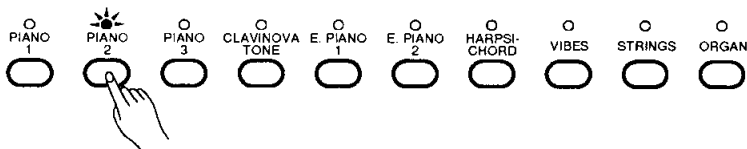


## 4 Play



All CLP-134 voices have 32-note polyphony, which means you can play up to 32 notes at once. The Clavinova also offers keyboard touch response, so the volume and timbre of notes played can be controlled according to how "hard" you play the keys. The amount of variation available depends on the selected voice.

\* The total number of notes that can be played simultaneously is reduced from 32 to 16 when the DUAL play mode is used. See page 9 for information on the DUAL play mode.

## 5 Adjust Tone & Add Effects As Required

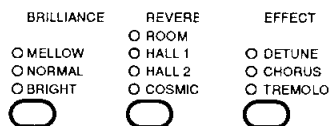


You can also change the overall tone or add reverb and/or effects as desired by using the [BRILLIANCE], [REVERB] and [EFFECT] buttons (see page 4 for [BRILLIANCE] button operation, "Reverb" on page 10, and "Effects" on page 11).

# Selecting & Playing Voices

## Playing the Demonstration Tunes


The CLP-134 features 10 demonstration tunes that effectively demonstrate it's sound capabilities. Here's how you can select and play the demo tunes.

### 1 Engage the Demo Mode

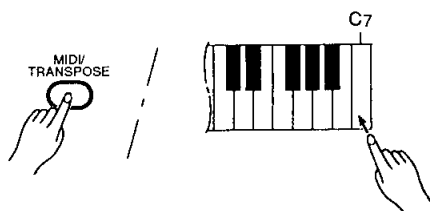


Press the C7 key while holding the [MIDI/TRANSPOSE] button. The voice selectors will begin flashing in sequence to indicate that the demo mode is engaged.

### 2 Select a Demo Tune

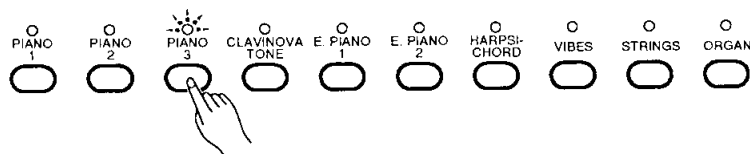


The 10 demo tunes are selected via the voice selectors. Press a selector to start playback of the corresponding tune, featuring the voice normally selected by that voice selector button. The demo tunes will play in sequence until stopped, starting with the selected tune. The voice selector indicator will flash during demo playback.

### 3 Set the Volume

 

Use the [MASTER VOLUME] control to adjust the volume, and play along on the keyboard if you like.

### 4 Stop the Demo

 

Press the [MIDI/TRANSPOSE] button when you want to stop demo playback and return to the normal play mode.

#### The Demo Tunes


- [PIANO 1] ..... "Grande valse brillante" by F. F. Chopin
- [PIANO 2] ..... "Lake Louise" by Yuhki Kuramoto
- [CLAVINOVA TONE] ..... "Rêverie" by Debussy
- [HARPSICHORD] ..... "Invention 3" by J. S. Bach
- [ORGAN] ..... "Symphonie pour orgue No.5" by Widor

- The demonstration pieces listed above are short excerpts from the original compositions. All other demo songs are original (© 1993 by YAMAHA CORPORATION).

# The Dual Mode

The DUAL mode makes it possible to play two voices simultaneously across the entire range of the keyboard. To activate the DUAL mode simply press two voice selectors at the same time (or press one voice selector while holding another). The voice indicators of both selected voices will light when the DUAL mode is active. To return to the normal single-voice play mode, press any single voice selector.


## ● Adjusting the Balance Between the Dual-mode Voices

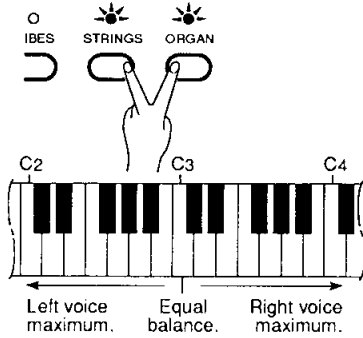

The volume levels of the two voices combined in the DUAL mode are normally set automatically to produce a pleasing balance (see “Default Settings” below). The balance can be adjusted manually by using the C2 through C4 keys on the keyboard while pressing the two voice selectors corresponding to the voices to be combined in the DUAL mode.

The C3 key produces equal (50:50) balance between the two voices, while keys to the left of C3 increase the volume of the left voice in relation to the right voice, and keys to the right of C3 increase the volume of the right voice in relation to the left voice. By “left” and “right” voice we refer to the relative positions of the voice selectors — i.e. in a STRINGS/ORGAN combination STRINGS is the left voice and ORGAN is the right voice.


## ● Shifting a Dual-mode Voice Up One Octave

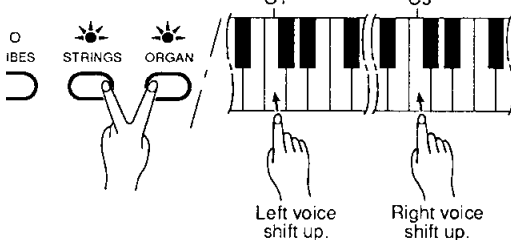

Depending on which voices you combine using the DUAL mode, the combination may sound better if one of the voices is shifted up an octave. To shift the right voice, press the C5 key while pressing the two voice selectors corresponding to the voices to be combined in the DUAL mode. Press C5 again to shift the voice back to its normal range. Use the C1 key in the same way to shift the left voice.


Default octave settings are provided for all voice combinations, as listed in the “Default Settings” chart, below.

## ● Slow-attack Strings

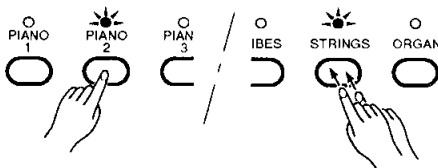

In a DUAL mode voice combination using STRINGS and any other voice, it is possible to switch the STRINGS voice to a slow-attack variation when initially selecting the voices by pressing the [STRINGS] selector twice while holding the other voice selector.

## ● Memorizing the Balance, Strings Type, & Octave Shift Settings

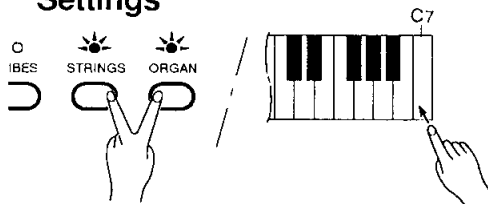

Press the C7 key while holding any two voice selectors to memorize all balance, STRINGS voice attack variation, and octave shift settings made since the power was turned on. The memorized settings will be retained in memory for about one week after the power is turned off, then the default settings will be restored. To keep the memorized settings for longer periods, turn the power on briefly at least once a week.

If these settings are not memorized as described above, they are retained in memory only until the Clavinova is turned off.

### Default Settings

		Balance									
		PIANO 1	PIANO 2	PIANO 3	CLAVINOVA TONE	E. PIANO 1	E. PIANO 2	HARPSICHORD	VIBES	STRINGS	ORGAN
Octave Shift	PIANO 1		C3	C3	C3	C3	C3	C3	C3	F2	E2
	PIANO 2	0		C3	C3	C3	C3	C3	C3	F2	E2
	PIANO 3	0	0		C3	C3	C3	C3	C3	F2	E2
	CLAVINOVA TONE	0	0	0		C3	C3	C3	C3	F2	F2
	E. PIANO 1	0	0	0	0		C3	C3	C3	F2	E2
	E. PIANO 2	0	0	0	0	0		A2	C3	F2	F2
	HARPSICHORD	0	0	0	0	0	0		C3	F2	G2
	VIBES	R	R	R	R	R	R	R		B2	B2
	STRINGS	0	0	0	0	0	0	0	L		C3
	ORGAN	0	0	0	0	0	0	0	L	0	

C2 ... C4: Balance keys    0: Normal octave    L: Left voice up one octave    R: Right voice up one octave

# Reverb

The [REVERB] button selects a number of digital reverb effects that you can use for extra depth and expressive power.

To select a reverb type press the [REVERB] button a few times until the indicator corresponding to the desired type lights (the indicators light in sequence each time the [REVERB] button is pressed). No reverb is produced when all indicators are off.


**ROOM** ..... This setting adds a continuous reverb effect to the sound that is similar to the type of acoustic reverberation you would hear in a medium-size room.

**HALL 1** ..... For a “bigger” reverb sound, use the HALL 1 setting. This effect simulates the natural reverberation of a medium-size concert hall.

**HALL 2** ..... For a really spacious reverb sound, use the HALL 2 setting. This effect simulates the natural reverberation of a large concert hall.

**COSMIC** ..... The COSMIC reverb effect produces an echo-plus-reverb sound that can add life and animation to your music.

## ● Adjusting Reverb Depth

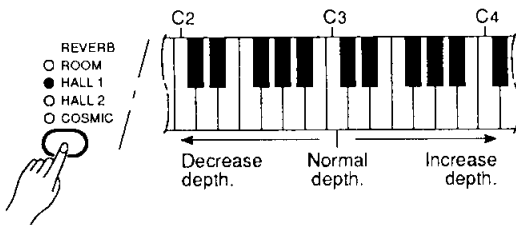

The depth of the selected reverb effect can be adjusted for the current voice by using the C2 through C4 keys on the keyboard while holding the [REVERB] button. The C3 key sets the “normal” depth for the selected effect. Keys to the left of C3 decrease the reverb depth, while keys to the right of the C3 key increase the reverb depth. Separate reverb settings can be made for each effect and voice.

The default reverb depth settings are given in the “Default Settings” chart, below


### Default Settings

	ROOM	HALL 1	HALL 2	COSMIC
STRINGS, ORGAN	C3	C3	F3	E3

\* All effect types set to C3 for all other voices.

\* The default reverb type is OFF.

## ● Memorizing the Reverb Type & Depth Settings

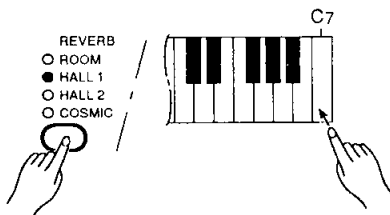

Press the C7 key while holding the [REVERB] button to memorize the current effect type and all depth settings made since the power was turned on. The memorized settings will be retained in memory for about one week after the power is turned off, then the default settings will be restored. To keep the memorized settings for longer periods, turn the power on briefly at least once a week.

If these settings are not memorized as described above, they are retained in memory only until the Clavinova is turned off.

# Effects

The [EFFECT] button selects a range of three effects that you can use in addition to the REVERB effects.


To select an effect press the [EFFECT] button a few times until the indicator corresponding to the desired effect lights (the indicators light in sequence each time the [EFFECT] button is pressed). No effect is produced when all indicators are off.

**DETUNE** .....DETUNE delivers a thick, multi-instrument sound by producing two notes of slightly different pitch for every single note you play on the keyboard — i.e. the two notes are slightly “detuned.”

**CHORUS** .... This produces an animated “shimmering” effect that both thickens the sound and gives it a more lively feel.

**TREMOLO** ... TREMOLO is a gentle variation in volume that gives the sound a more dynamic feel. The tremolo speed is independently preset for each voice.

## ● Memorizing Effects for Each Voice

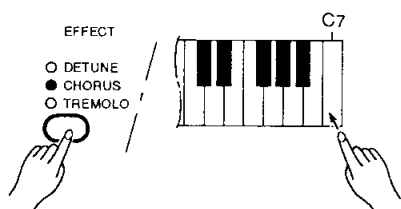

The CLP-134 allows different effects to be set for each voice so that the appropriate effect is automatically recalled whenever a voice is selected.

The initial effect assignments when the CLP-134 power is turned on are given in the chart below.

These settings can be changed by selecting the desired voice and effects, and then pressing the C7 key while holding the [EFFECT] button. All settings made since the power was turned on are memorized. The memorized settings will be retained in memory for about one week after the power is turned off, then the default settings will be restored. To keep the memorized settings for longer periods, turn the power on briefly at least once a week.

If these settings are not memorized as described above, they are retained in memory only until the Clavinova is turned off.

Voice	PIANO 1	PIANO 2	PIANO 3	CLAVINOVA TONE	E. PIANO 1	E. PIANO 2	HARPSI-CHORD	VIBES	STRINGS	ORGAN
Power-on Effect	OFF	OFF	OFF	OFF	OFF	CHORUS	OFF	TREMOLO	OFF	OFF

# The Pedals

The CLP-134 has three foot pedals that produce a range of expressive effects similar to those produced by the pedals on an acoustic piano.

- **Soft (Left) Pedal** Pressing the soft pedal reduces the volume and slightly changes the timbre of notes played. The soft pedal actually functions in eight levels, depending on how hard it is pressed.
- **Sostenuto (Center) Pedal** If you play a note or chord on the keyboard and press the sostenuto pedal while the note(s) are held, those notes will be sustained as long as the pedal is held (as if the damper pedal had been pressed) but all subsequently played notes will not be sustained. This makes it possible to sustain a chord, for example, while other notes are played “staccato.”
- **Damper (Right) Pedal** The damper pedal functions in the same way as a damper pedal on an acoustic piano. When the damper pedal is pressed notes played have a long sustain. When a piano voice is selected the damper pedal also produces a special “resonance” that simulates the ring of the strings and the sound board of an acoustic piano. Releasing the pedal immediately stops (damps) any sustained notes. The CLP-134 damper pedal additionally features continuous damping. This allows you to create shorter effects by pressing the damper pedal down only part of the way.

# Touch Sensitivity

The [TOUCH SENSITIVITY] button selects three different types of keyboard touch sensitivity — HARD, MEDIUM or SOFT — to match different playing styles and preferences.


To select a touch sensitivity setting press the [TOUCH SENSITIVITY] button a few times until the indicator corresponding to the desired setting lights (the indicators light in sequence each time the [TOUCH SENSITIVITY] button is pressed).

**HARD** .....The HARD setting requires the keys to be played quite hard to produce maximum loudness.

**MEDIUM** ....The MEDIUM setting produces a fairly “standard” keyboard response. This is the initial factory default setting.

**SOFT**.....The SOFT setting allows maximum loudness to be produced with relatively light key pressure.

## ● Memorizing the Touch Sensitivity Setting

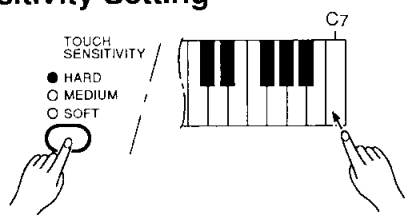


Press the C7 key while holding the [TOUCH SENSITIVITY] button to memorize the current touch sensitivity setting. The memorized setting will be retained in memory for about one week after the power is turned off, then the default setting will be restored. To keep the memorized setting for longer periods, turn the power on briefly at least once a week.

If this settings is not memorized as described above, it is retained in memory only until the Clavinova is turned off.

# Transposition

The Clavinova's TRANSPOSE function makes it possible to shift the pitch of the entire keyboard up or down in semitone intervals up to a maximum of six semitones. “Transposing” the pitch of the Clavinova keyboard facilitates playing in difficult key signatures, and you can easily match the pitch of the keyboard to the range of a singer or other instrumentalist.

The [MIDI/TRANSPOSE] button and keys F#2 through F#3 on the keyboard are used for transposition.

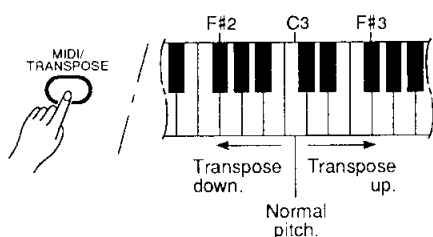


- 1 Press and hold the [MIDI/TRANSPOSE] button.
- 2 Press a key between F#2 and F#3 according to the desired amount of transposition.\*
- 3 Release the [MIDI/TRANSPOSE] button.

\* Pressing the C3 key produces normal keyboard pitch. Pressing the key to the left of C3 (B2) transposes the pitch of the keyboard down a semitone, the next key to the left (Bb2) transposes down a whole tone (two semitones), etc., down to the F#2 key which transposes down 6 semitones. Upward transposition is accomplished in the same way using the keys to the right of C3, up to F#3 which transposes up 6 semitones.

# Pitch Control


Pitch control makes it possible to tune the Clavinova over a  $\pm 50$ -cent range in approximately 1.2-cent intervals. A hundred "cents" equals one semitone, so the tuning range provided allows fine tuning of overall pitch over a range of approximately a semitone. Pitch control is useful for tuning the Clavinova to match other instruments or recorded music.

## ● Tuning Up

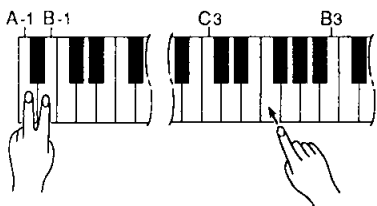


- 1** To tune up (raise pitch), hold the **A-1** and **B-1** keys simultaneously.
- 2** Press any key between **C3** and **B3**. Each time a key in this range is pressed the pitch is increased by approximately 1.2 cents, up to a maximum of 50 cents above standard pitch.
- 3** Release the **A-1** and **B-1** keys.

## ● Tuning Down

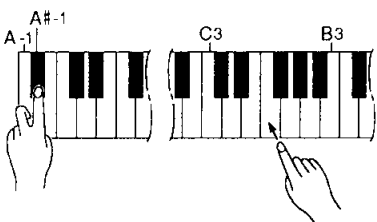


- 1** To tune down (lower pitch), hold the **A-1** and **A#-1** keys simultaneously.
- 2** Press any key between **C3** and **B3**. Each time a key in this range is pressed the pitch is decreased by approximately 1.2 cents, up to a maximum of 50 cents below standard pitch.
- 3** Release the **A-1** and **A#-1** keys.

## ● To Restore Standard Pitch\*

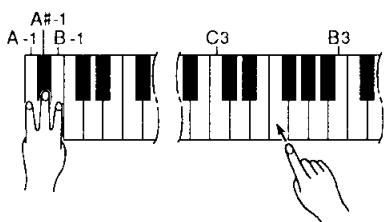

- 1** To restore standard pitch ( $A_3 = 440$  Hz), hold the **A-1**, **A#-1** and **B-1** keys simultaneously.
- 2** Press any key between **C3** and **B3**.
- 3** Release the **A-1**, **A#-1** and **B-1** keys.

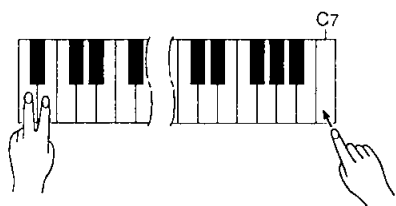


\* Standard pitch ( $A_3 = 440$  Hz) is set when the **[POWER]** switch is initially turned ON. The power-on pitch setting can be changed, however, by pressing the **C7** key while still holding the **A-1/B-1**, **A-1/A#-1**, or **A-1/A#-1/B-1** key combinations after setting the desired pitch. Settings changed in this way are retained in internal memory for approximately one week if the power is not turned on during that time. If the backup period is exceeded, the original factory setting is restored. To keep the memorized settings for longer periods, turn the power on briefly at least once a week.

**Note:** The **PITCH CONTROL** function has no effect when **LOCAL OFF** is active (see "MIDI FUNCTIONS," page 18).

# Individual Key Tuning


When used in ensemble with other keyboards and particularly acoustic pianos, however, slight tuning discrepancies can arise. The CLP-134 is equipped with an individual key tuning feature that allows such differences to be accurately compensated for. The individual key tuning feature also makes it possible to tune the CLP-134 to completely different standards, if required. The pitch of each key can be raised or lowered by a maximum of 50 cents from the standard pitch.

## ● To Lower the Pitch of a Single Key

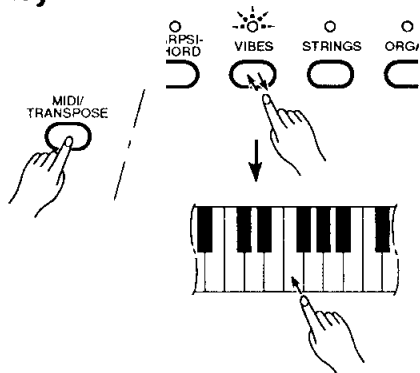


- 1 Hold the [MIDI/TRANPOSE] button.
- 2 Press and release the [VIBES] voice selector (do not release the [MIDI/TRANPOSE] button). The [VIBES] indicator will flash.
- 3 While still holding the [MIDI/TRANPOSE] button, press the desired key as many times as necessary to lower its pitch by the required amount (each press lowers pitch by approximately 1.2 cents). The [ORGAN] indicator will light to indicate that the Individual Key Tune mode is ON.
- 4 Release the [MIDI/TRANPOSE] button.

## ● To Raise the Pitch of a Single Key

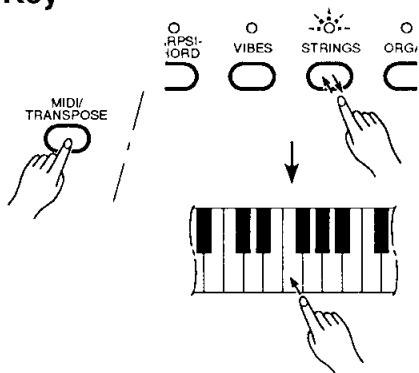

- 1 Hold the [MIDI/TRANPOSE] button.
- 2 Press and release the [STRINGS] voice selector (do not release the [MIDI/TRANPOSE] button). The [STRINGS] indicator will flash.
- 3 While still holding the [MIDI/TRANPOSE] button, press the desired key as many times as necessary to raise its pitch by the required amount (each press raises pitch by approximately 1.2 cents). The [ORGAN] indicator will light to indicate that the Individual Key Tune mode is ON.
- 4 Release the [MIDI/TRANPOSE] button.


## ● To Restore Standard Tuning For A Single Key

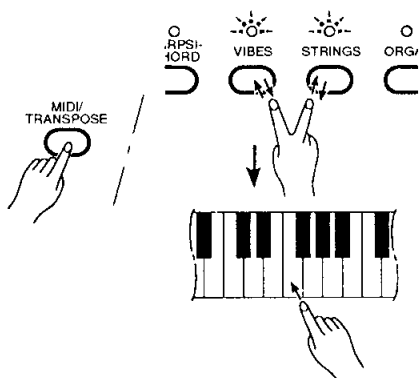

- 1 Hold the [MIDI/TRANPOSE] button.
- 2 Press and release the [VIBES] and [STRINGS] voice selectors simultaneously (do not release the [MIDI/TRANPOSE] button). The [VIBES] and [STRINGS] indicators will flash.
- 3 While still holding the [MIDI/TRANPOSE] button, press the key you want to restore to normal pitch.
- 4 Release the [MIDI/TRANPOSE] button.



## ● To Turn the Individual Key Tune Mode ON or OFF

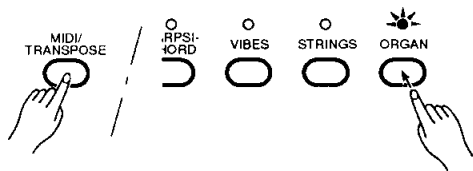


The individual key tuning settings described above can be turned on or off (normal tuning) while retaining the settings in memory. Individual key tuning is always turned off when the power is initially turned on, but any previous settings are retained in memory and can be recalled if the power has not been off for longer than about a week. To keep the memorized settings for longer periods, turn the power on briefly at least once a week.

- 1** Hold the [MIDI/TRANPOSE] button.
- 2** Press the [ORGAN] voice selector to turn the Individual Key Tune mode ON ([ORGAN] indicator on) or OFF ([ORGAN] indicator off).
- 3** Release the [MIDI/TRANPOSE] button.


*Note: The INDIVIDUAL KEY TUNING function has no effect when LOCAL OFF is active (see "MIDI FUNCTIONS," page 18).*

## ● To Restore Standard Tuning For All Keys

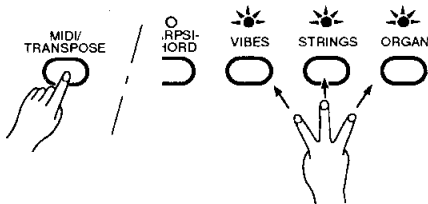

- 1** Hold the [MIDI/TRANPOSE] button.
- 2** Press and release the [VIBES], [STRINGS], and [ORGAN] voice selectors simultaneously. The [VIBES], [STRINGS], and [ORGAN] indicators will light.
- 3** Release the [MIDI/TRANPOSE] button.


# Factory Preset Recall

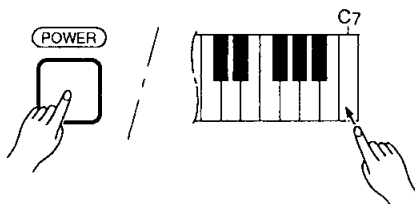


All dual mode, reverb, effect, touch sensitivity, pitch control, and individual key tune settings can be restored to their original factory preset (default) values by holding the C7 key while turning the [POWER] switch ON.

# MIDI Functions

## ● A Brief Introduction to MIDI

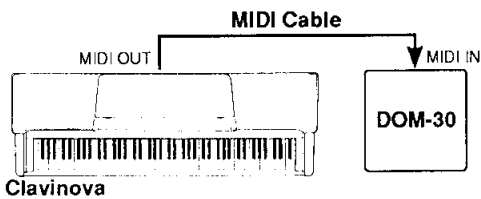

MIDI, the Musical Instrument Digital Interface, is a world-standard communication interface that allows MIDI-compatible musical instruments and equipment to share musical information and control one another. This makes it possible to create “systems” of MIDI instruments and equipment that offer far greater versatility and control than is available with isolated instruments. For example, most MIDI keyboards (including the Clavinova, of course) transmit note and velocity (touch response) information via the MIDI OUT connector whenever a note is played on the keyboard. If the MIDI OUT connector is connected to the MIDI IN connector of a second keyboard (synthesizer, etc.) or a tone generator (essentially a synthesizer with no keyboard), the second keyboard or tone generator will respond precisely to notes played on the original transmitting keyboard. The result is that you can effectively play two instruments at once, providing thick multi-instrument sounds.

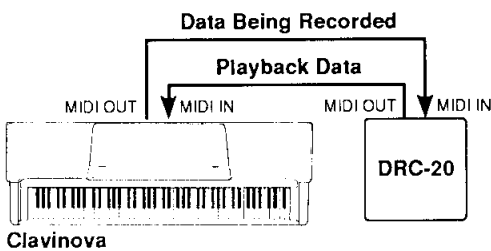

This same type of musical information transfer is used for MIDI sequence recording. A sequence recorder such as the Yamaha DRC-20 Disk Recorder can be used to “record” MIDI data received from a Clavinova, for example. When the recorded data is played back, the Clavinova automatically “plays” the recorded performance in precise detail.

The examples given above really only scratch the surface. MIDI can do much, much more. The CLP-134 offers a number of MIDI functions that allows it to be used in fairly sophisticated MIDI systems.

*Note: Always use a high-quality MIDI cable to connect MIDI OUT to MIDI IN terminals. Never use MIDI cables longer than about 15 feet, since cables longer than this can pick up noise which can cause data errors.*

## ● MIDI “Messages” Transmitted & Received by the Clavinova

The MIDI information (messages) transmitted and received by the CLP-134 Clavinova are as follows:

### Note and Velocity Data

This information tells the receiving keyboard or tone generator to play a certain note (specified by the MIDI note number) at a certain dynamic level (specified by the MIDI velocity value). Note and velocity data is transmitted by the Clavinova whenever a key is pressed, and the Clavinova’s internal AWM tone generator will “play” the corresponding note(s) whenever note and velocity data is received from an external MIDI device.


### Program Change Numbers

The CLP-134 transmits a MIDI program change number between 0 and 10 when one of its voice selectors is pressed. This normally causes the correspondingly numbered voice to be selected on a receiving MIDI device. The Clavinova will respond in the same way, automatically selecting the appropriate voice when a MIDI program change number is received. See “Program Change ON/OFF” on page 18 for information on turning program change number reception and transmission ON or OFF.

### Control Change Numbers

Control Change data representing Soft, Sostenuto and Damper pedal operations is transmitted by the Clavinova whenever one of these pedals is used. If the receiving device is a tone generator or another keyboard, it will respond in the same way as the Clavinova’s internal tone generator when one of the pedals is used. The Clavinova also receives and responds to the appropriate control change data. See “Control Change ON/OFF” on page 19 for information on turning control change number reception and transmission ON or OFF.

## ● MIDI Transmit & Receive Channel Selection

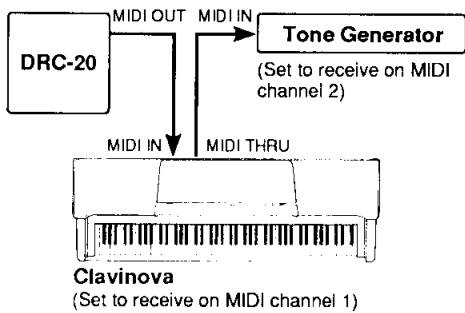

The MIDI system allows transmission and reception of MIDI data on 16 different channels. Multiple channels have been implemented to allow selective control of certain instruments or devices connected in series. For example, a single MIDI sequence recorder could be used to “play” two different instruments or tone generators. One of the instruments or tone generators could be set to receive only on channel 1, while the other is set to receive on channel 2. In this situation the first instrument or tone generator will respond only to channel-1 information transmitted by the sequence recorder, while the second instrument or tone generator will respond only to channel-2 information. This allows the sequence recorder to “play” two completely different parts on the receiving instruments or tone generators.


In any MIDI control setup, the MIDI channels of the transmitting and receiving equipment must be matched for proper data transfer. An “OMNI” receive mode is also available, which allows reception on all 16 MIDI channels. In the OMNI mode it is not necessary to match the receive channel of the receiving device to the transmit channel of the transmitting device (except when receiving mode messages).

### Setting the Clavinova MIDI Channels

- 1** Press and hold the [MIDI/TRANPOSE] button.
- 2** Press the key on the keyboard corresponding to the desired MIDI transmit or receive channel.\*
- 3** Release the [MIDI/TRANPOSE] button.

\* Keys **C1** through **D#2** on the keyboard are used to set the MIDI transmit channel, and keys **C4** through **D#5** are used to turn the OMNI mode OFF and set the MIDI receive channel as shown in the illustration to the left. The **E5** key sets the OMNI receive mode and basic receive channel 1.

**Note:** When the power is initially turned ON, MIDI receive is set to the OMNI mode and the transmit channel is set to 1.

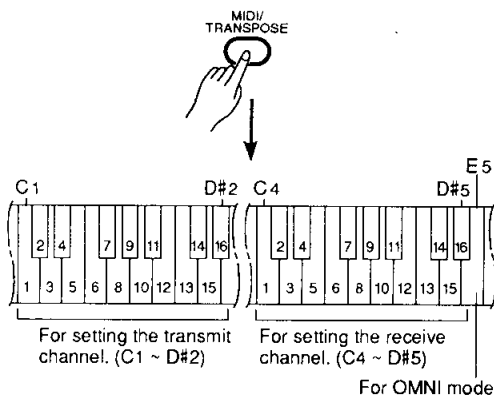

## ● MIDI Transmit Transpose


This function allows the MIDI note data transmitted by the Clavinova to be transposed up or down in semitone increments by up to plus or minus 6 semitones. The pitch of the Clavinova itself is not affected.

### Setting the MIDI Transpose Function

- 1** Press and hold the [MIDI/TRANPOSE] button.
- 2** Press the key on the keyboard corresponding to the desired amount of transposition.\*
- 3** Release the [MIDI/TRANPOSE] button.

\* Keys **F#5** through **F#6** on the keyboard are used to set the MIDI transmit transpose function as shown in the illustration to the left.

**Note:** When the power is turned ON, MIDI transmit transpose is set to 0 (no transposition).

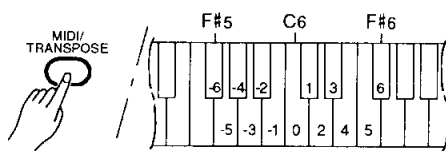

## Other MIDI Functions

The MIDI functions listed to the right are engaged by holding down the [MIDI/TRANSCOPE] button and pressing the corresponding voice selector. Full details are given in the following pages.

### MIDI FUNCTION CHART


Function	CLP-134 Voice Selector
Local Control ON/OFF	[PIANO 1]
Program Change ON/OFF	[PIANO 2]
Control Change ON/OFF	[PIANO 3]
Multi-Timbre Mode	[CLAVINOVA TONE ]
MIDI Split & Left Local OFF	[E.PIANO 1]
MIDI Split & Right Local OFF	[E.PIANO 2]
Panel Data Transmit	[HARPSICHORD]

### ● Local Control ON/OFF

“Local Control” refers to the fact that, normally, the Clavinova keyboard controls its internal tone generator, allowing the internal voices to be played directly from the keyboard. This situation is “Local Control ON” since the internal tone generator is controlled locally by its own keyboard.

Local control can be turned OFF, however, so that the Clavinova keyboard does not play the internal voices, but the appropriate MIDI information is still transmitted via the MIDI OUT connector when notes are played on the keyboard. At the same time, the internal tone generator responds to MIDI information received via the MIDI IN connector.

When using the DOM-30 Disk Orchestra Module with the Clavinova, for example, Local Control should be turned OFF when recording using the DOM-30 voices only, and ON when recording the Clavinova voices while listening to playback of the DOM-30 voices.

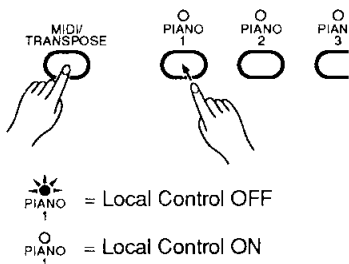


- 1** Hold down the [MIDI/TRANSCOPE] button.
- 2** Press the [PIANO 1] voice selector. If the PIANO 1 LED is lit when the [PIANO 1] voice selector is pressed, you have turned local control OFF. If the PIANO 1 LED is not lit when the [PIANO 1] voice selector is pressed, you have turned local control ON.
- 3** Release the [MIDI/TRANSCOPE] button.

### ● Program Change ON/OFF

Normally the Clavinova will respond to MIDI program change numbers received from an external keyboard or other MIDI device, causing the correspondingly numbered Clavinova voice to be selected. The Clavinova will normally also send a MIDI program change number whenever one of its voices is selected, causing the correspondingly numbered voice or program to be selected on the external MIDI device if the device is set up to receive and respond to MIDI program change numbers.

This function makes it possible to cancel program change number reception and transmission so that voices can be selected on the Clavinova without affecting the external MIDI device, and vice versa.

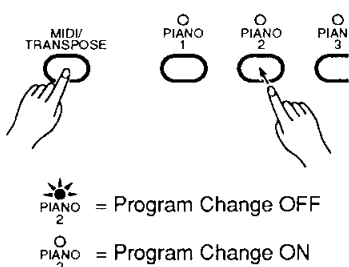


- 1** Hold down the [MIDI/TRANSCOPE] button.
- 2** Press the [PIANO 2] voice selector. If the PIANO 2 LED is lit when the [PIANO 2] voice selector is pressed, you have turned program change reception/transmission OFF. If the PIANO 2 LED is not lit when the [PIANO 2] voice selector is pressed, you have turned program change reception/transmission ON.
- 3** Release the [MIDI/TRANSCOPE] button.

## ● Control Change ON/OFF

Normally the Clavinova will respond to MIDI control change data received from an external MIDI device or keyboard, causing the selected Clavinova voice to be affected by pedal and other “control” settings received from the controlling device. The Clavinova also transmits MIDI control change information when one of its pedals are operated.


This function makes it possible to cancel control change data reception and transmission if you do not want the Clavinova voices to be affected by control change data received from an external device or vice versa.

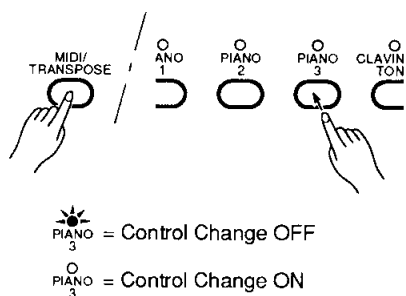

- 1** Hold down the [MIDI/TRANSPOSE] button.
- 2** Press the [PIANO 3] voice selector. If the PIANO 3 LED is lit when the [PIANO 3] voice selector is pressed, you have turned control change reception/transmission OFF. If the PIANO 3 LED is not lit when the [PIANO 3] voice selector is pressed, you have turned control change reception/transmission ON.
- 3** Release the [MIDI/TRANSPOSE] button.

## ● The Multi-Timbre Mode


The Multi-Timbre mode is a special mode in which the Clavinova voices can be independently controlled on different MIDI channel numbers (1 through 10) by an external MIDI device such as the Yamaha DRC-20 Disk Recorder. The Multi-Timbre mode can be activated as follows:

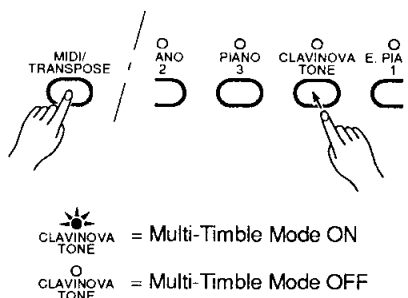

- 1** Hold down the [MIDI/TRANSPOSE] button.
- 2** Press the [CLAVINOVA TONE] voice selector. If the CLAVINOVA TONE LED is lit when the [CLAVINOVA TONE] voice selector is pressed, you have turned the Multi-Timbre mode ON. If the CLAVINOVA TONE LED is not lit when the [CLAVINOVA TONE] voice selector is pressed, you have turned the Multi-Timbre mode OFF.
- 3** Release the [MIDI/TRANSPOSE] button.

### A Multi-timbre Example

Here's an example of how you could use the Multi-Timbre mode to record two different parts on the DRC-20 Disk Recorder that will play different voices on the Clavinova when played back.

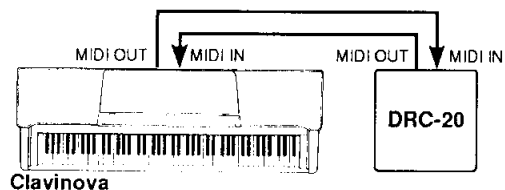


- 1** Connect the DRC-20 to the Clavinova as shown to the left.
- 2** Activate the Clavinova Multi-Timbre mode.
- 3** Set the DRC-20 track 1 to record.
- 4** Select a voice and record the first part on the DRC-20.
- 5** Set the DRC-20 track 2 to record.
- 6** Select a voice and record the second part on the DRC-20.
- 7** Still in the Multi-Timbre mode, play back the DRC-20. The recorded parts will be played back using the individual voices selected during recording, providing a full ensemble sound.

# MIDI Functions

## ● The MIDI Split & Left Local OFF Mode

In the MIDI split mode one section of the Clavinova keyboard is used to play a Clavinova voice in the normal way, while the remaining section is used to play a second MIDI keyboard or tone generator such as the Yamaha DOM-30 Disk Orchestra Module. In this mode the right-hand section of the keyboard is used to play an internal Clavinova voice, while the left-hand section of the keyboard plays the external keyboard or tone generator. Playing the left-hand section of the keyboard produces no sound from the Clavinova. The “split point,” or the key that divides the left- and right-hand sections of the keyboard can be set at any desired key.

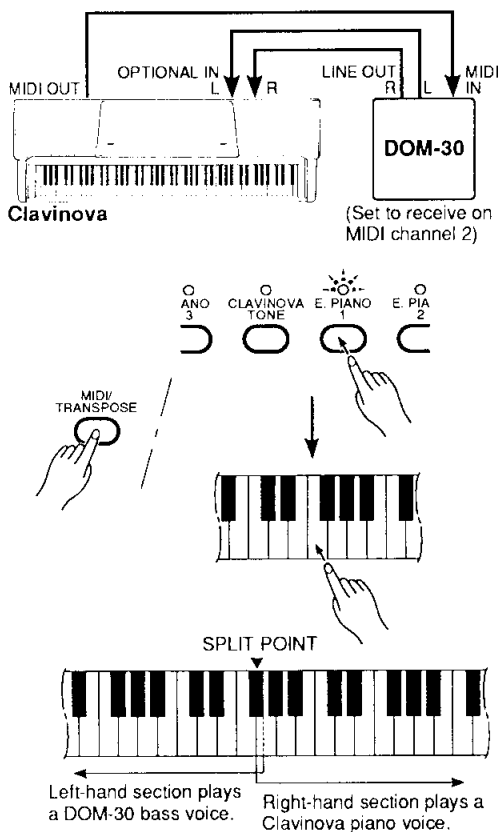

The MIDI split mode is useful if, for example, you want to play a piano (Clavinova) voice with the right hand while playing a synthesizer bass line or string section with the left hand.

When the MIDI split mode is activated, notes played on the left-hand section are transmitted via the Clavinova MIDI OUT connector on MIDI channel 2. Notes played on the right-hand section are transmitted on the “basic channel” (i.e. the channel set using the MIDI channel selection function described previously).

- 1** Press the [E.PIANO 1] voice selector while holding down the [MIDI/TRANPOSE] button. The E.PIANO 1 LED will flash.
- 2** While still holding the [MIDI/TRANPOSE] button, press the key on the keyboard at which you want to set the split point. The E.PIANO 1 LED will light continuously. The split-point becomes the first key of the left-hand section.
- 3** Release the [MIDI/TRANPOSE] button.
- 4** To return to the normal full-keyboard mode, hold the [MIDI/TRANPOSE] button and press the [E.PIANO 1] voice selector, then release both buttons.


*Note: When the power is turned ON the default split point key — F#2 — will be automatically selected. If a new split point is selected it remains active until the power is turned OFF or a different split point is selected.*

## ● The MIDI Split & Right Local Off Mode

In the CLP-134 either the right- or left-hand section of the keyboard can be assigned to control an external keyboard or tone generator. Assigning the left-hand section to external tone generator control was described in the previous section. To assign the right-hand section to external tone generator control while playing the Clavinova voices with the left hand, press the [E.PIANO 2] voice selector instead of the [E.PIANO 1] voice selector when activating the Split mode (see the preceding section). All other operations are exactly the same as described in the previous section.

## ● Transmitting the Panel Settings

This function causes all the current Clavinova control settings (selected voice, etc) to be transmitted via the MIDI OUT terminal. This is particularly useful if you will be recording performances to a MIDI sequence recorder which will be used to control the Clavinova on playback. By transmitting the Clavinova panel settings and recording them on the MIDI sequence recorder prior to the actual performance data, the Clavinova will be automatically restored to the same settings when the performance is played back.

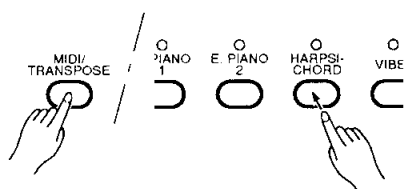

- 1** Hold down the [MIDI/TRANPOSE] button.
- 2** Press the [HARPSICHORD] voice selector.
- 3** Release the [MIDI/TRANPOSE] button.



# Troubleshooting

If you encounter what appears to be a malfunction, please check the following points before assuming that your Clavinova is faulty.

## 1. No Sound When the Power is Turned ON

Is the AC plug properly connected to an AC wall outlet? Check the AC connection carefully. Is the MASTER VOLUME control turned up to a reasonable listening level?

## 2. The Clavinova Reproduces Radio or TV Sound

This can occur if there is a high-power transmitter in your vicinity. Contact your Yamaha dealer.

## 3. Intermittent Static Noise

This is usually due to turning ON or OFF a household appliance or other electronic equipment which is fed by the same AC mains line as your Clavinova.

## 4. Interference Appears On Radio or TV Sets Located Near the Clavinova

The Clavinova contains digital circuitry which can generate radio-frequency noise. The solution is to move the Clavinova further away from the affected equipment, or vice versa.

## 5. Distorted Sound When the Clavinova is Connected to An External Amplifier/Speaker System

If the Clavinova is connected to a stereo system or instrument amplifier and the sound is distorted, reduce the setting of the Clavinova volume control to a level at which the distortion ceases.



# Options & Expander Modules

## ● Options

### BC-8 Bench

A comfortable bench styled to match your Yamaha Clavinova.

### HPE-160 Stereo Headphones


High-performance lightweight dynamic headphones with extra-soft ear pads.

## ● Expander Modules

**DRC-20**     **Disk Recorder**

**DOM-30**     **Disk Orchestra Module**

These state-of-the-art Expander Modules can dramatically expand the musical scope of your Clavinova.

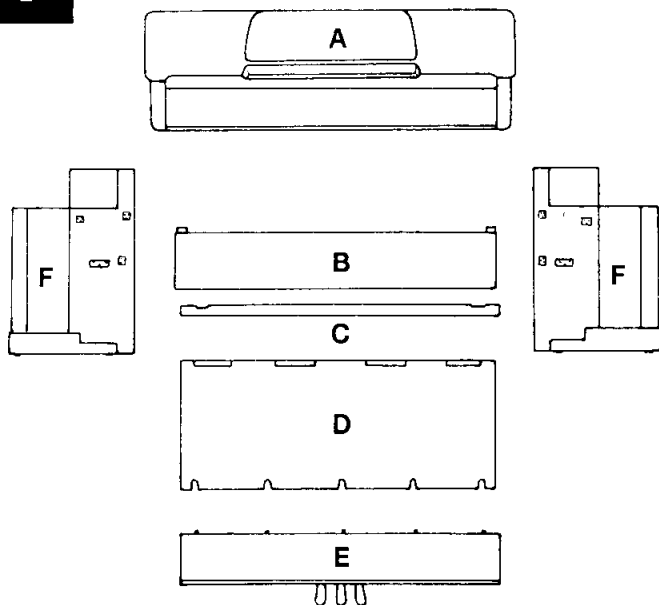**1**

## Keyboard Stand Assembly

*Note: We do not recommend attempting to assemble the Clavinova alone. The job can be easily accomplished, however, with only two people.*

### 1 Open the box and remove all the parts.

On opening the box you should find the parts shown in the illustration. Check to make sure that all the required parts are provided.

### 2 Unwrap the pedal cord.

Invert the pedal box (E) and unwrap the pedal cord.

### 3 Attach the side panels (F) to the pedal box (E).

Attach the side panels (F) to the corresponding ends of the pedal box (E). Each side panel is attached to the pedal box using four medium-size black screws ① inserted from inside the pedal box.

## Zusammenbau und Aufstellung

*Hinweis: Wir raten davon ab, das Clavinova alleine zusammenzubauen und aufzustellen. Zwei Personen können diese Arbeit jedoch problemlos ausführen.*

### 1 Öffnen Sie den Karton und nehmen Sie alle Teile heraus.

Im Karton sollten die in der Abbildung aufgeführten Teile enthalten sein. Prüfen Sie zunächst bitte, ob alle Teile vollständig vorhanden sind.

### 2 Wickeln Sie das Pedalkabel ab.

Drehen Sie den Pedalkasten (E) um, und wickeln Sie dann das Pedalkabel ab.



### 3 Schrauben Sie die Seitenwände (F) und den Pedalkasten (E) zusammen.

Schrauben Sie die Seitenwände (F) an den beiden Enden des Pedalkastens (E) fest. Die beiden Seitenwände werden mit jeweils vier mittelgroßen schwarzen Schrauben ① befestigt, die innen im Pedalkasten einzusetzen sind.



**2**

Pedal cord  
 Pedalkabel  
 Cordon du pédalier  
 Cable de pedales

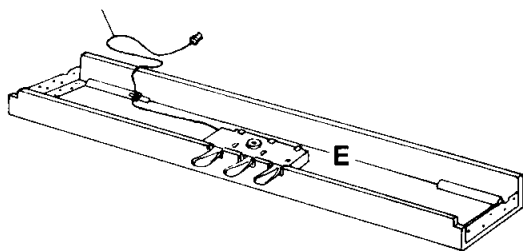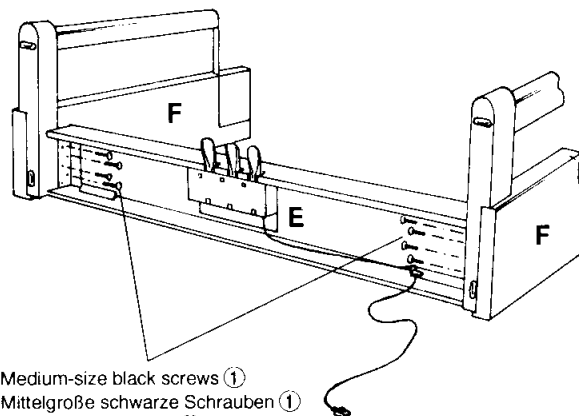**3**

Medium-size black screws ①  
 MittelfgroÙe schwarze Schrauben ①  
 Vis moyennes noires ①  
 Tornillos negros de tamaÙo medio ①

## Assemblage du support de clavier

*Remarque: Nous ne vous conseillons pas d'essayer d'assembler le Clavinova tout seul. Toutefois, ce travail peut être facilement exécuté par deux personnes.*

### 1 Ouvrez le carton et retirez toutes les pièces

Les pièces indiquées sur l'illustration devraient toutes se trouver dans le carton. Vérifiez qu'il n'en manque aucune.

### 2 Déballez le cordon du pédalier

Retournez le pédalier (E) et déballez le cordon du pédalier.

### 3 Fixez les panneaux latéraux (F) au pédalier (E)

Fixez les panneaux latéraux (F) aux bords correspondants du pédalier (E). Chaque panneau latéral est fixé au pédalier à l'aide de quatre vis moyennes noires ① qui doivent être vissées depuis l'intérieur du pédalier.

## Conjunto del soporte del teclado

*Nota: No le recomendamos que intente montar la Clavinova usted solo. El trabajo puede ser realizado fácilmente entre dos personas.*

### 1 Abra la caja y extraiga todas las partes.


Al abrir la caja deberá encontrar todas las partes mostradas en la ilustración. Compruebe para asegurarse que se proporcionan todas las partes necesarias.

### 2 Desenvuelva el cable de los pedales.

Dé la vuelta a la caja de los pedales (E) y desenvuelva el cable de pedales.

### 3 Acople los paneles laterales (F) en la caja de pedales (E).

Acople los paneles laterales (F) a los extremos correspondientes de la caja de pedales (E). Cada panel lateral se acopla a la caja de pedales usando cuatro tornillos negros de tamaño medio ① insertados desde dentro de la caja de pedales.

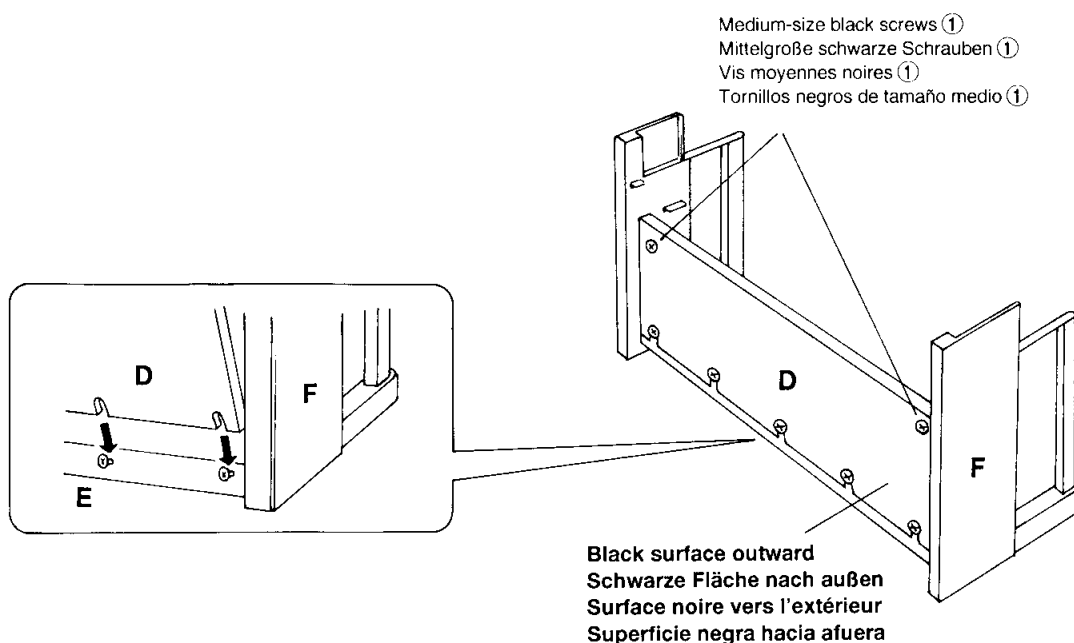**4****4 Attach the rear panel (D).**

With the black surface of the rear panel facing outward and the panel angled slightly as shown in the illustration, lower it onto the screws protruding from the rear of the pedal box so that the screws fit into the corresponding slots in the lower edge of the rear panel. Then, while eliminating any gaps between the rear and side panels, secure the top of the rear panel to the side panel brackets using two medium-size black screws ①. Finally, tighten the screws holding the rear panel to the pedal box.

**5 Install the metal brace (C).**


Place the long metal brace on top of the upper brackets at the front (pedal side) of the side panels, with the flanged edges of the brace facing upward. Attach the brace with one small black screw ② at each end.

**4 Schrauben Sie die Rückwand (D) an.**

Setzen Sie die Rückwand mit der schwarzen Fläche nach außen und wie in der Abbildung leicht abgewinkelt so auf die Schrauben hinten am Pedalkasten, daß die Schrauben in die Aussparungen an der Unterkante der Rückwand greifen. Richten Sie die Rückwand danach so aus, daß keine Zwischenräume zwischen ihr und den Seitenwänden verbleiben, und schrauben Sie die Rückwand in dieser Lage oben mit zwei mittelgroßen schwarzen Schrauben ① an die Halterungen der Seitenwände. Ziehen Sie abschließend noch die Schrauben im Pedalkasten fest an.

**5 Montieren Sie die Metallstrebe (C).**

Legen Sie die lange Metallstrebe mit der flachen Seite nach unten auf die oberen Winkelbleche an der Vorderseite (Pedalseite) der Seitenwände. Machen Sie die Metallstrebe mit jeweils einer kleinen schwarzen Schraube ② an beiden Enden fest.

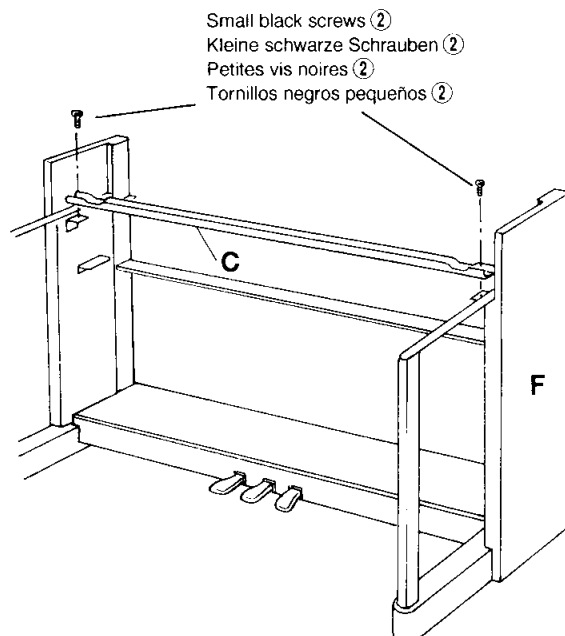**5****4 Fixez le panneau arrière (D)**

La surface noire du panneau arrière étant dirigée vers l'extérieur et le panneau étant légèrement incliné comme représenté sur l'illustration, abaissez-le sur les vis sortant de l'arrière du pédalier de sorte que les vis s'insèrent dans les fentes correspondantes sur le bord inférieur du panneau arrière. Puis, tout en éliminant les espaces entre les panneaux arrière et latéraux, fixez le haut du panneau arrière aux ferrures des panneaux latéraux à l'aide de deux vis moyennes noires ①. Finalement, serrez les vis maintenant le panneau arrière au pédalier.

**5 Posez la traverse métallique (C)**


Placez la traverse métallique sur les ferrures supérieures à l'avant (côté pédales) des panneaux latéraux, avec les bords recourbés dirigés vers le haut. Fixez la traverse métallique à chaque extrémité à l'aide d'une petite vis noire ②.

**4 Acople el panel posterior (D).**

Con la superficie negra del panel posterior encarada hacia afuera y el panel puesto un poco inclinado como se muestra en la ilustración, bájelo a los tornillos que sobresalen por detrás de la caja de pedales de forma que los tornillos se acoplen en las ranuras correspondientes del borde inferior del panel posterior. Entonces, mientras suprime las holguras entre los paneles posterior y laterales, fije la parte superior del panel posterior a las ménsulas de los paneles laterales usando dos tornillos negros de tamaño medio ①. Finalmente, apriete los tornillos que retienen el panel posterior a la caja de pedales.

**5 Instale la abrazadera metálica (C).**

Ponga la abrazadera metálica larga en la parte superior de las ménsulas superiores de la parte frontal (lado de los pedales) de los paneles laterales, con los bordes abrisagrados de la abrazadera encarados hacia afuera. Adapte la abrazadera con un tornillo negro pequeño ② en cada extremo.

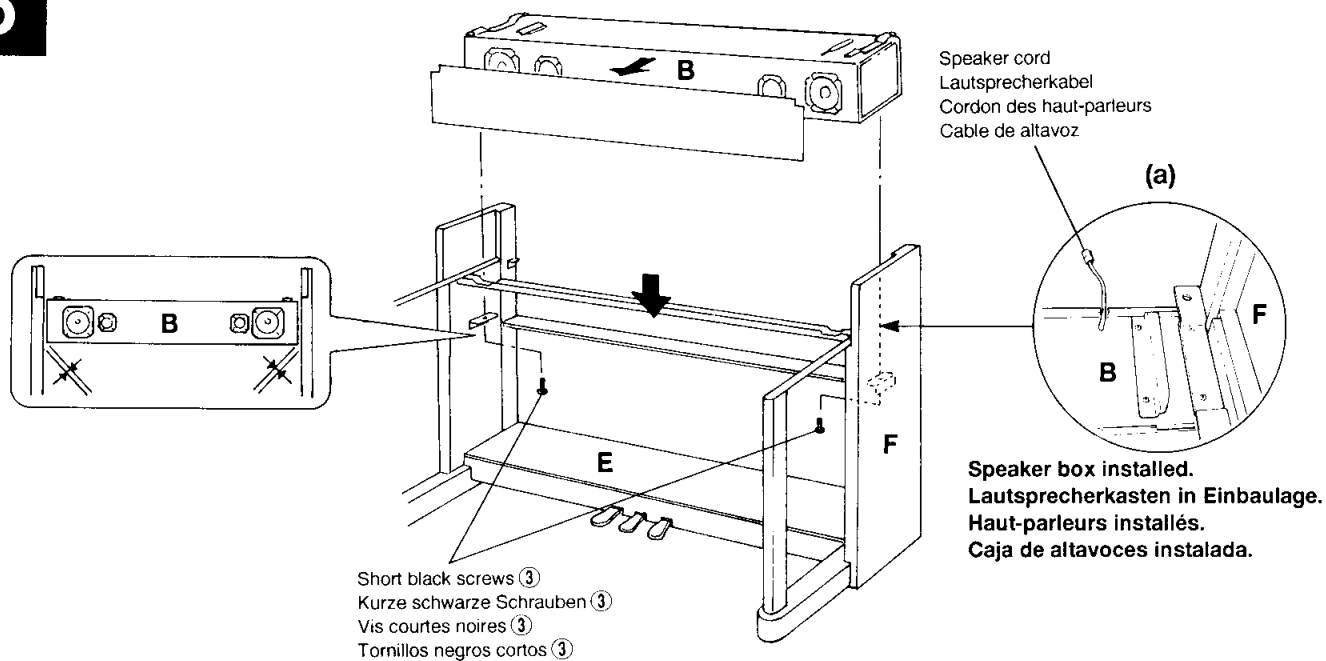**6**

## 6 Attach the speaker box (B) to the side panels (F).

**CAUTION!** Be careful not to catch your fingers between the speaker box and stand assembly when lowering the speaker box into place!

Before attaching the speaker box, remove the speaker grille (the speaker grille is attached by “magic tape” and can be easily pulled away from the speaker box). The grille side of the speaker box must be installed facing the same direction as the pedals on the pedal box (E). Lower the speaker box (B) into place between the tops of the side panels (F), center the speaker box to produce equal clearance on the right and left sides, then attach each side (from below) using two short black screws ③, one on either end.

Make sure that the speaker cord rests in the groove and extends over the back of the speaker box, as shown in the illustration “a”.

## 7 Install the main unit (A).

Rest the main unit (A) on the brackets on the side panels (F), then slide the main unit backward firmly until it stops (so that there is no clearance between the main unit side panels and the stand, as shown in the illustration “b”).

**WATCH YOUR FINGERS WHILE DOING THIS!!**

There is slight horizontal play between the main unit and side panels, so center the main unit, as shown in the illustration “c”, then attach each side of the main unit with two short flat-head black screws ④ and one long black screw ⑤ in front of the rear panel, and one short black screw ③ behind the rear panel (see illustrations). After the screws have been properly installed, re-attach the speaker grille to the speaker box with the recessed corners facing upwards (push it into place).

## 6 Befestigen Sie den Lautsprecherkasten (B) an den Seitenwänden (F).

**VORSICHT!** Klemmen Sie beim Absenken und Einpassen des Lautsprecherkastens zwischen den beiden Seitenwänden nicht Ihre Finger ein!

Entfernen Sie vor dem Einpassen des Lautsprecherkastens den Lautsprechergrill (der Grill wird von Klebband gehalten und kann einfach abgezogen werden). Der Lautsprecherkasten muß so montiert werden, daß die Seite mit den Lautsprechern in dieselbe Richtung weist wie die Pedale am Pedalkasten (E). Setzen Sie den Lautsprecherkasten (B) von oben her zwischen den Seitenwänden (F) auf die beiden Winkelbleche, und richten Sie den Kasten dann mittig zwischen den beiden Seitenwänden aus, bevor Sie ihn mit jeweils zwei kurzen schwarzen Schrauben ③ unten an beiden Enden festschrauben.


Legen Sie das Lautsprecherkabel in die zugehörige Nut, so daß es hinten über den Lautsprecherkasten hinaus hängt, wie in Abbildung “a” gezeigt.

## 7 Montieren Sie die Tastatureinheit (A).


Setzen Sie die Tastatureinheit (A) auf die Winkelbleche der beiden Seitenwände (F), und schieben Sie sie dann bis zum Anschlag nach hinten (zwischen der Tastatureinheit und den Seitenwänden darf an dem in Abbildung “b” gezeigten Punkt kein Zwischenraum verbleiben). **KLEMMEN SIE IHRE FINGER DABEI NICHT EIN!!**

Die Tastatureinheit hat zwischen den beiden Seitenwänden etwas Spiel. Richten Sie die Tastatureinheit gemäß Abbildung “c” mittig aus, und machen Sie sie dann an beiden Seiten mit jeweils zwei kurzen schwarzen Senkschrauben ④ und einer langen schwarzen Schraube ⑤ vor der Rückwand sowie einer kurzen schwarzen Schraube ③ hinter der Rückwand fest (siehe Abbildung). Nach Montieren der Tastatureinheit bringen Sie dann den Lautsprechergrill wieder mit den beiden ausgeschnittenen Ecken nach oben am Lautsprecherkasten an (der Grill wird einfach angesetzt und festgedrückt).



7

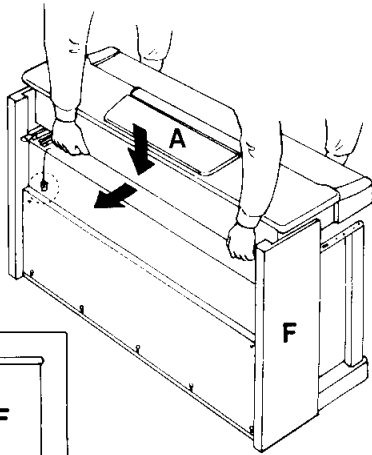

(b)

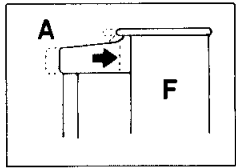

(c)

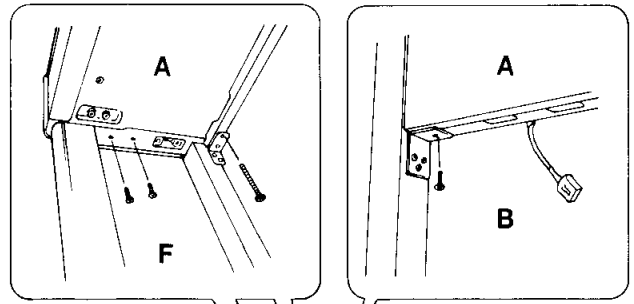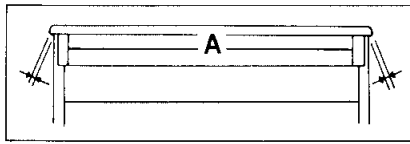

Short flat-head black screws ④  
 Kurze schwarze Senkschrauben ④  
 Vis courtes à tête plate noires ④  
 Tornillos negros cortos de cabeza plana ④

Long black screws ⑤  
 Lange schwarze Schrauben ⑤  
 Vis longues noires ⑤  
 Tornillos negros largos ⑤

Short black screws ③  
 Kurze schwarze Schrauben ③  
 Vis courtes noires ③  
 Tornillos negros cortos ③

## 6 Fixez les haut-parleurs (B) aux panneaux latéraux (F)

**ATTENTION!** En abaissant les haut-parleurs, faites attention de ne pas vous prendre les doigts entre les haut-parleurs et la traverse métallique!

Avant de poser les haut-parleurs, enlevez la grille frontale (celle-ci est fixée à l'aide de ruban adhésif et peut être séparée facilement des haut-parleurs). Le côté grille des haut-parleurs doit être dirigé dans le même sens que les pédales sur le pédalier (E). Abaissez les haut-parleurs (B) entre les panneaux latéraux (F) et centrez les haut-parleurs de manière à obtenir un jeu égal du côté gauche et du côté droit, puis fixez chaque côté (à partir du dessous) à l'aide de deux vis courtes noires ③, une à chaque extrémité.

Veillez à ce que le cordon des haut-parleurs soit bien placé dans la rainure et dépasse de l'arrière des haut-parleurs, comme représenté sur l'illustration "a".

## 7 Posez le clavier (A)

Posez le clavier (A) sur les ferrures des panneaux latéraux (F), puis faites glisser le clavier vers l'arrière jusqu'à ce qu'il vienne en butée (de sorte qu'il n'y ait aucun jeu entre les panneaux latéraux du clavier et le support, comme représenté sur l'illustration "b"). **FAITES ATTENTION A VOS DOIGTS EN EXECUTANT CETTE OPERATION!!**

Du fait qu'il y a un léger jeu horizontal entre le clavier et les panneaux latéraux, vous devez d'abord centrer le clavier, comme représenté sur l'illustration "c", puis fixer chaque côté du clavier à l'aide de deux vis courtes à tête plate noires ④, une vis longue noire ⑤ à l'avant du panneau arrière et une vis courte noire ③ à l'arrière du panneau arrière (voyez les illustrations). Une fois que les vis sont en place, reposez la grille frontale des haut-parleurs avec les coins en creux dirigés vers le haut (la pousser pour la mettre en place).

## 6 Acople la caja de los altavoces (B) en los paneles laterales (F).

**PRECAUCION:** ¡Tenga cuidado de no pillarse los dedos entre la caja de altavoces y el conjunto del soporte cuando baje la caja de los altavoces en su lugar!


Antes de acoplar la caja de los altavoces, extraiga la rejilla de los altavoces (la rejilla de los altavoces está coplada por medio de "cinta mágica" y puede ser separada fácilmente de la caja de los altavoces). El lado de la rejilla de la caja de los altavoces debe instalarse encarado hacia la misma dirección que los pedales de la caja de pedales (E). Baje la caja de los altavoces (B) en su lugar entre las partes superiores de los paneles laterales (F), centre la caja de los altavoces para producir una holgura igual en los lados derecho e izquierdo, después acople cada lado (desde abajo) usando dos tornillos negros cortos ③, uno en cada lado.

Asegúrese de que los cables de altavoces reposan en las ranuras apropiadas y se extienden por encima de la parte posterior de la caja de los altavoces, como se muestra en la ilustración "a".

## 7 Instale la unidad principal (A).

Apoye la unidad principal (A) en las ménsulas de los paneles laterales (F), después deslice la unidad principal hacia atrás firmemente hasta que se pare (de forma que no haya holgura entre los paneles laterales de la unidad principal y el soporte, como se muestra en la ilustración "b"). **¡TENGA CUIDADO CON SUS DEDOS MIENTRAS LO HACE!**

Existe un ligero juego horizontal entre la unidad principal y los paneles laterales, por eso centre la unidad principal como se muestra en la ilustración "c", después acople cada lado la unidad principal con dos tornillos negros cortos de cabeza plana ④ y un tornillo negro largo ⑤ en la parte frontal del panel posterior, y dos tornillos negros cortos ③ detrás del panel posterior (vea la ilustración). Después de haber instalado correctamente los tornillos, vuelva a acoplar la rejilla de los altavoces en la caja de altavoces con las esquinas con huecos encaradas hacia arriba (presionando en su lugar).

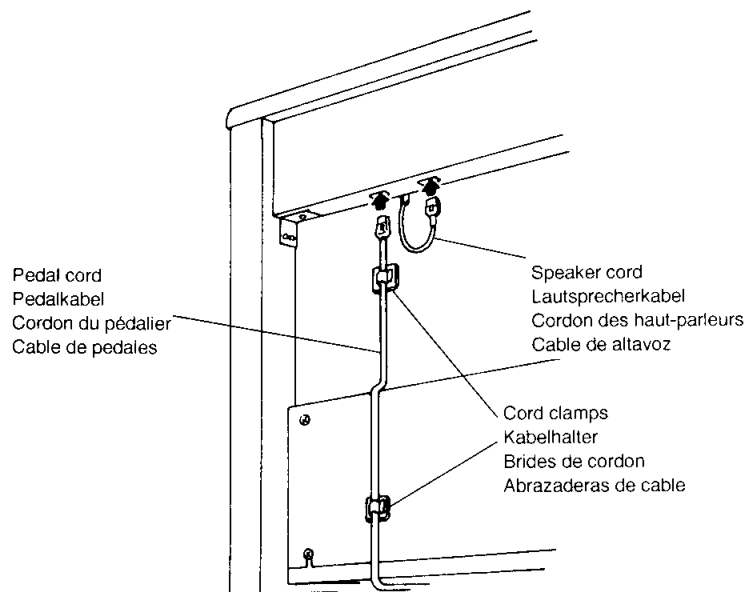

## 8 Connect the cords.

The pedal and speaker cord plugs must be plugged into the corresponding connectors in the main unit. The plugs only go in one way (the lugs on the connectors should face the rear of the unit, as shown in the illustration), so don't try to force them in the wrong way around. Once connected, attach the cord clamps to the rear panel as shown, then clip the pedal cord into the clamps.

## 9 Be sure to set the adjuster.

For stability, an adjuster is provided on the bottom of the pedal box (E). Rotate the adjuster until it comes in firm contact with the floor surface. The adjuster ensures stable pedal operation and facilitates pedal effect control. If the adjuster is not in firm contact with the floor surface, distorted sound may result.

**Important:** Check once more to make sure that all screws have been securely tightened and that no parts are left over.


## 8 Schließen Sie die Kabel an.

Das Pedal- und das Lautsprecherkabel müssen an die zugehörigen Buchsen der Tastatureinheit angeschlossen werden. Die Stecker sind mit einer Führungsnase versehen, die beim Einstecken zur Rückseite des Instruments weisen muß (siehe Abbildung). Drücken Sie die Stecker nicht mit Gewalt falsch herum in die Buchsen. Bringen Sie nach dem Anschluß die Kabelhalter wie in der Abbildung an der Rückwand an, und sichern Sie die Kabel dann in den Haltern.

## 9 Justieren Sie schließlich noch den Höhenversteller.

Zur Stabilisierung ist an der Unterseite des Pedalkastens (E) ein Höhenversteller vorgesehen. Schrauben Sie den Höhenversteller heraus, bis er fest auf dem Fußboden steht. Der Höhenversteller sorgt für stabile Pedalbetätigung und ermöglicht eine präzise Regelung des Betätigungshubs. Wenn er nicht fest auf dem Boden steht, können beim Treten der Pedale Klangverzerrungen auftreten.

**Wichtiger Hinweis:** Vergewissern Sie sich abschließend noch einmal davon, daß alle Schrauben fest angezogen und keine Teile übrig sind.

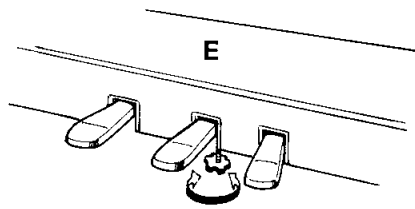**9**

## 8 Connectez les cordons

Les fiches du cordon du pédalier et du cordon des haut-parleurs doivent être branchées aux connecteurs correspondants du clavier. Les fiches ne peuvent être branchées que dans un sens (la languette du connecteur doit être dirigée vers l'arrière du clavier, comme représenté sur l'illustration) et vous ne devez donc pas essayer de les forcer pour les brancher du mauvais côté. Une fois que les cordons sont connectés, fixez les brides de cordon au panneau arrière comme illustré, puis insérez le cordon du pédalier dans les brides.

## 9 N'oubliez pas de régler la hauteur du pédalier

Pour assurer la stabilité du pédalier (E), un dispositif de réglage a été prévu à sa partie inférieure. Tournez ce dispositif jusqu'à ce qu'il soit en contact ferme avec la surface du sol. Ce dispositif assure la stabilité du pédalier lors de son utilisation et facilite la commande au pied des effets. Si ce dispositif n'est pas en contact ferme avec le sol, une distorsion du son peut se produire.

**Important:** Vérifiez à nouveau que toutes les vis sont bien serrées à fond et qu'il ne reste aucune pièce.

## 8 Conecte los cables.

Las clavijas de los cables de los pedales y altavoces deben enchufarse en los conectores correspondientes de la unidad principal. Las clavijas se enchufan en un sentido (las lengüetas de los conectores deben estar encaradas hacia la parte posterior de la unidad, como se muestra en la ilustración), por eso no trate de forzarlos en la dirección errónea. Una vez conectados, acople las abrazaderas de los cables en el panel posterior como se muestra, y fije el cable de pedales a las abrazaderas.

## 9 Asegúrese de ajustar el ajustador.

Para la estabilidad del aparato, se proporciona un ajustador en la parte inferior de la caja de pedales (E). Gire el ajustador hasta que contacte firmemente con el suelo. El ajustador asegura una operación estable de los pedales y facilita el control del efecto de los pedales. Si el ajustador no contacta firmemente con el suelo, puede resultar en sonido distorsionado.

**Importante:** Compruebe una vez más para asegurarse de que todos los tornillos se han apretado bien y que no se haya olvidado de ninguna pieza.

# MIDI Data Format/MIDI-Datenformat

## Format des données MIDI/Formato de datos MIDI

If you're already very familiar with MIDI, or are using a computer to control your music hardware with computer-generated MIDI messages, the data provided in this section can help you to control the Clavinova.

Falls Sie bereits mit MIDI vertraut sind oder einen Computer zur Erzeugung von MIDI-Steuermeldungen für die Instrumente verwenden, können Sie sich zur Steuerung des Clavinovas nach den im folgenden Abschnitt aufgeführten Spezifikationen richten.

Si vous êtes très familier avec l'interface MIDI ou si vous utilisez un ordinateur pour commander votre matériel de musique au moyen de messages MIDI générés par ordinateur, les données suivantes vous seront utiles et vous aideront à commander le Clavinova.

Si usted está ya familiarizado con MIDI, o si emplea una computadora para controlar sus aparatos musicales con mensajes MIDI generados por computadora, los datos proporcionados en esta sección le ayudarán a controlar la Clavinova.

### 1. NOTE ON/OFF

Data format: [9nH] -> [kk] -> [vv]

9nH = Note ON/OFF event (n = channel number)  
 kk = Note number (Transmit: 15 ~ 114 = D#-1 ~ F#7 /  
 Receive: 21 ~ 108 = A-1 ~ C7)  
 vv = Velocity (Key ON = 1 ~ 127. Key OFF = 0)

Data format: [8nH] -> [kk] -> [vv]

8nH = Note OFF event (n = channel number)  
 kk = Note number (21 ~ 108 = A-1 ~ C7)  
 vv = Velocity (Key OFF = 0 ~ 127)

\* Note OFF event format [8nH] -> [kk] also recognized (reception only).

### 2. CONTROL CHANGE & MODE MESSAGES

Data format: [BnH] -> [cc] -> [vv]

BnH = Control event (n = channel number)  
 cc = Control number  
 vv = Control value

cc	CONTROL	VALUE [vv]
07H	Volume (reception only)	00000000 : -∞ 01101111 : -3dB 01111111 : ±0dB
0AH	Pan Pot (reception only)	00H ~ 17H LEFT 6 18H ~ 1FH 5 20H ~ 27H 4 28H ~ 2FH 3 30H ~ 37H 2 38H ~ 3FH 1 40H ~ 47H CENTER 48H ~ 4FH SCALING PAN 50H ~ 57H RIGHT 1 58H ~ 5FH 2 60H ~ 67H 3 68H ~ 6FH 4 70H ~ 77H 5 78H ~ 7FH 6
0BH	Expression (reception only)	00000000 : -∞ 01101111 : -3dB 01111111 : ±0dB
40H	Damper Pedal	00H ~ 7FH : eight levels
42H	Sostenuto Pedal	00H ~ 3FH : OFF 40H ~ 7FH : ON
43H	Soft Pedal	00H ~ 7FH, eight levels
5BH	Reverb Depth	00H ~ 7FH

79H	Reset All Controller (reception only)	00H
7AH	Local Control ON/OFF (reception only)	00H : OFF 7FH : ON
7BH	All Notes OFF (reception only)	00H
7CH	Omni OFF/All Notes OFF (reception only)	00H
7DH	Omni ON/All Notes OFF (reception only)	00H

### 3. PROGRAM CHANGE

Data format: [CnH] -> [pp]

CnH = program event (n = channel number)  
 pp = Program number

pp	VOICE NAME
00	PIANO 1
01	PIANO 2
02	PIANO 3
03	CLAVINOVA TONE
04	E. PIANO 1
05	E. PIANO 2
06	HARPSICHORD
07	VIBES
08	STRINGS
09	ORGAN
10	STRINGS SLOW ATTACK (reception only)

### 4. SYSTEM REALTIME MESSAGES

Active Sensing (FEH)

Transmitted every 200 milliseconds. If not received for more than 400 milliseconds a NOTE OFF occurs.

### 5. SYSTEM EXCLUSIVE MESSAGES

(1) YAMAHA MIDI Format

Data format: [F0H] -> [43H] -> [xn] -> [ff] . . . [F7H]

43H : Yamaha  
 xn : Substatus + channel number.  
 ff : Format number.

x	ff	Information
2	7CH	Panel Data Send occurs when this data received.
2	7DH	Name Data Send occurs when this data received.



## (2) Clavinova MIDI Format

Data format: [F0H] -> [43H] -> [73H] -> [33H] -> [yy] -> [F7H]

43H : Yamaha ID  
73H : Clavinova ID  
33H : CLP-134 ID  
yy : Substatus

### yy Information

13 Multi-timbre mode OFF.  
15 Multi-timbre mode ON.  
7cH All notes OFF; receive channel = c+1; omni OFF.

## (3) Special Control

Data format: [F0H] -> [43H] -> [73H] -> [33H] -> [11H] -> [0nH] -> [cc] -> [vv] -> [F7H]

43H : Yamaha ID  
73H : Clavinova ID  
33H : CLP-134 ID  
11H : Clavinova special control  
0nH : Control MIDI change + channel number  
cc : Control number  
vv : Value

cc	Control	Value [vv]
08H	Dual Balance	00H : Left Voice Max. 7FH : Right Voice Max.
26H	Touch Sensitivity	00H : Medium 01H : Soft 02H : Hard
27H	2nd Voice Effect	00H : Off 01H : Detune 02H : Chorus 03H : Tremolo
58H	Brilliance	00H : Normal 01H : Mellow 02H : Bright
59H	Reverb	00H : Off 01H : Room 02H : Hall-1 03H : Hall-2 04H : Cosmic
5AH	Dual Mode	00H : Dual Off 01H : Dual On (Normal) 02H : Dual On (Left voice 1 octave up) 03H : Dual On (Right voice 1 octave up)
5BH	Effect	00H : Off 01H : Detune 02H : Chorus 03H : Tremolo
5CH	Dual Voice	[vv] : Dual Voice
5EH	Individual Key Pitch	[vv] : Key number (Channel number = 0FH only) vv = 1: Individual key tune mode off vv = 2: Individual key tune mode on
5FH	Individual Key Pitch	[vv] : Pitch Data (Channel number = 0FH only)

## PANEL DATA SEND FORMAT

F0H, 43H, 0nH, 7CH, 00H, 19H (n: channel number)  
53H, 4BH, 20H, 20H (SK)  
43H, 4CH, 50H, 31H, 32H, 34H (CLP-134)  
3xH, 3yH (x, y: version number)  
[PANEL DATA]  
[CHECK SUM (1byte)] = 0-(53H+4BH+20H+.....+Data end)  
F7H

### • Panel Data Contents

- (1) VOICE
- (2) DUAL VOICE
- (3) DUAL ON/OFF
- (4) DUAL BALANCE
- (5) BRILLIANCE
- (6) EFFECT
- (7) DUAL VOICE EFFECT
- (8) REVERB NUMBER
- (9) REVERB DEPTH
- (10) TOUCH SENSITIVITY
- (11) LEFT PEDAL
- (12) SPLIT POINT
- (13) INDIVIDUAL KEY TUNE MODE ON/OFF

## INDIVIDUAL KEY TUNING DATA BULK DUMP FORMAT

F0H, 43H, 73H  
33H (CLP-134 ID)  
06H  
00H, 00H, 08H, 00H: (DATA LENGTH)  
[BULK DATA]  
[CHECK SUM (1byte)]  
F7H

## MODEL ID CODE SEND FORMAT

F0H, 43H, 0nH, 7DH, 00H, 10H (n: channel number)  
53H, 4BH, 20H, 20H (SK)  
43H, 4CH, 50H, 31H, 32H, 34H (CLP-134)  
3xH, 3yH, 20H, 20H, 20H, 20H (x, y: version number)  
[CHECK SUM (1byte)] = 0-(53H+4BH+20H+.....+20H)  
F7H

YAMAHA [ Clavinova ]  
 Model CLP-134 MIDI Implementation Chart

Date : 04/29, 1992  
 Version : 1.0

Function	Transmitted	Recognized	Remarks
Basic Default	: 1	: 1	
Channel Changed	: 1-16	: 1-16	
Mode Default	: 3	: 1	
Mode Messages	: X	: OMNIon, OMNIoff	
	: *****	: X	
Note Number : True voice	: 15-114	: 0-127	
	: *****	: 21-108	
Velocity Note on	: 0 9nH, v=1-127	: 0 v=1-127	
Velocity Note off	: X 9nH, v=0	: X	
After Touch	: X	: X	
Key's Ch's	: X	: X	
Pitch Bender	: X	: X	
Control Change	: X	: 0	: Volume
	: X	: 0	: Pan pot
	: X	: 0	: Expression
	: 0	: 0	: Damper
	: 0	: 0	: Sostenuto
	: 0	: 0	: Soft Pedal
	: 0	: 0	: Reverb Depth
	: 121	: X	: 0
			: Reset All
			: Controllers
Program Change : True #	: 0 0-10	: 0 0-10	
	: *****	: 0-10	
System Exclusive	: 0	: 0	
System : Song Pos	: X	: X	
System : Song Sel	: X	: X	
Common : Tune	: X	: X	
System : Clock	: X	: X	
Real Time:Commands	: X	: X	
Aux : Local ON/OFF	: X	: 0	
Aux : All Notes OFF	: X	: 0	(123-125) *1
Mes- : Active Sense	: 0	: 0	
sages:Reset	: X	: X	
Notes : *1 = receive (123) if omni off or multi-timbre on			
Mode 1 : OMNI ON, POLY	Mode 2 : OMNI ON, MONO	0 : Yes	
Mode 3 : OMNI OFF, POLY	Mode 4 : OMNI OFF, MONO	X : No	

# Specifications/Technische Daten/Caractéristiques techniques/Especificaciones

	CLP-134
<b>KEYBOARD</b>	88 KEYS (A-1 ~ C7)
<b>VOICE SELECTORS</b>	PIANO1, PIANO2, PIANO 3, CLAVINOVA TONE, E. PIANO 1, E. PIANO 2, HARPSICHORD, VIBES, STRINGS, ORGAN
<b>BRILLIANCE</b>	MELLOW, NORMAL, BRIGHT
<b>REVERB</b>	ROOM, HALL 1, HALL 2, COSMIC
<b>EFFECT</b>	DETUNE, CHORUS, TREMOLO
<b>TOUCH SENSITIVITY</b>	HARD, MEDIUM, SOFT
<b>PEDAL CONTROLS</b>	SOFT, SOSTENUTO, DAMPER
<b>OTHER CONTROLS</b>	MASTER VOLUME, MIDI/TRANPOSE
<b>JACKS/CONNECTORS</b>	HEADPHONES x 2, AUX. OUT R & L/L+R, OPTIONAL IN R/L, MIDI IN/OUT/THRU
<b>INPUT &amp; OUTPUT LEVEL/IMPEDANCE</b>	AUX. OUT: 600 $\Omega$ OPTIONAL IN: 22 k $\Omega$ /-10 dBm (for nominal output level)
<b>MAIN AMPLIFIERS</b>	50W x 2
<b>SPEAKERS</b>	16 cm x 2, 10 cm x 2, 5 cm x 2
<b>DIMENSIONS (W x D x H)</b>	1439.8 x 486.2 x 835 mm (56-3/4" x 19-1/8" x 32-7/8")
<b>WEIGHT</b>	66.0 kg (145.5 lbs.)

\* Specifications subject to change without notice.

\* Änderungen ohne Vorankündigung vorbehalten.

\* Sous toute réserve de modification des caractéristiques sans préavis.

\* Especificaciones sujetas a cambios sin previo aviso.

Wichtiger Hinweis für die Benutzung in der Bundesrepublik Deutschland.

### Bescheinigung des Importeurs

Hiermit wird bescheinigt, daß der/die/das  
*Electronic Piano Typ: CLP-134*

(Gerät, Typ, Bezeichnung)

in Übereinstimmung mit den Bestimmungen der  
VERFÜGUNG 1046/84

(Amtsblattverfügung)

funk-entstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen  
dieses Gerätes angezeigt und die Berechtigung zur Überprüfung  
der Serie auf Einhaltung der Bestimmungen eingeräumt.

Yamaha Europa GmbH

Name des Importeurs

• Dies bezieht sich nur auf die von der Yamaha Europa GmbH vertriebenen Produkte.

### IMPORTANT NOTICE FOR THE UNITED KINGDOM

#### Connecting the Plug and Cord

IMPORTANT. The wires in this mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL  
BROWN : LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Making sure that neither core is connected to the earth terminal of the three pin plug.

• This applies only to products distributed by Yamaha-Kemble Music (U.K.) Ltd.

### CANADA

THIS DIGITAL APPARATUS DOES NOT EXCEED THE "CLASS B" LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS SET OUT IN THE RADIO INTERFERENCE REGULATION OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

LE PRESENT APPAREIL NUMERIQUE N'EMET PAS DE BRUITS RADIOELECTRIQUES DEPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMERIQUES DE LA "CLASSE B" PRESCRITES DANS LE REGLEMENT SUR LE BROUILLAGE RADIOELECTRIQUE EDICTE PAR LE MINISTERE DES COMMUNICATIONS DU CANADA.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**ATTENTION:** POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

• This applies only to products distributed by Yamaha Canada Music Ltd.  
• Ceci ne s'applique qu'aux produits distribués par Yamaha Canada Musique Ltée.

Dit produkt is gefabriceerd in overeenstemming met de radiostoringsvoorschriften van de Richtlijn van de Raad (82/499/EEG).

ΑΥΤΗ Η ΣΥΣΚΕΥΗ ΑΝΤΑΠΟΚΡΙΝΕΤΑΙ ΣΤΙΣ ΑΠΑΙΤΗΣΕΙΣ ΤΩΝ ΟΔΗΓΙΩΝ ΤΗΣ ΕΥΡΩΠΑΙΚΗΣ ΟΙΚΟΝΟΜΙΚΗΣ ΚΟΙΝΟΤΗΤΑΣ 82/499/Ε.Ο.Κ..

Este produto está de acordo com o radio de interferencia frequente requeridos do Conselho Diretivo 82/499/EEC.

Dette apparat overholder det gældende EF-direktiv vedrørende radiostøj.

Cet appareil est conforme aux prescriptions de la directive communautaire 87/308/CEE.

Diese Geräte entsprechen der EG-Richtlinie 82/499/EWG und/oder 87/308/EWG.

This product complies with the radio frequency interference requirements of the Council Directive 82/499/EEC and/or 87/308/EEC.

Questo apparecchio è conforme al D.M.13 aprile 1989 (Direttiva CEE/87/308) sulla soppressione dei radiodisturbi.

Este producto está de acuerdo con los requisitos sobre interferencias de radio frecuencia fijados por el Consejo Directivo 87/308/CEE.

**YAMAHA CORPORATION**

## FCC INFORMATION (U.S.A.)

**1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

**2. IMPORTANT:** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

**3. NOTE:** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA90620

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

\* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

# IMPORTANT SAFETY INSTRUCTIONS

## INFORMATION RELATING TO PERSONAL INJURY, ELECTRICAL SHOCK, AND FIRE HAZARD POSSIBILITIES HAS BEEN INCLUDED IN THIS LIST.

**WARNING-** When using any electrical or electronic product, basic precautions should always be followed. These precautions include, but are not limited to, the following:

**1.** Read all Safety Instructions, Installation Instructions, Special Message Section items, and any Assembly Instructions found in this manual **BEFORE** making any connections, including connection to the main supply.

**2.** **Main Power Supply Verification:** Yamaha products are manufactured specifically for the supply voltage in the area where they are to be sold. If you should move, or if any doubt exists about the supply voltage in your area, please contact your dealer for supply voltage verification and (if applicable) instructions. The required supply voltage is printed on the name plate. For name plate location, please refer to the graphic found in the Special Message Section of this manual.

**3.** This product may be equipped with a polarized plug (one blade wider than the other). If you are unable to insert the plug into the outlet, turn the plug over and try again. If the problem persists, contact an electrician to have the obsolete outlet replaced. Do **NOT** defeat the safety purpose of the plug.

**4.** Some electronic products utilize external power supplies or adapters. Do **NOT** connect this type of product to any power supply or adapter other than one described in the owners manual, on the name plate, or specifically recommended by Yamaha.

**5.** **WARNING:** Do not place this product or any other objects on the power cord or place it in a position where anyone could walk on, trip over, or roll anything over power or connecting cords of any kind. The use of an extension cord is not recommended! If you must use an extension cord, the minimum wire size for a 25' cord (or less) is 18 AWG. **NOTE:** The smaller the AWG number, the larger the current handling capacity. For longer extension cords, consult a local electrician.

**6.** **Ventilation:** Electronic products, unless specifically designed for enclosed installations, should be placed in locations that do not interfere with proper ventilation. If instructions for enclosed installations are not provided, it must be assumed that unobstructed ventilation is required.

**7.** **Temperature considerations:** Electronic products should be installed in locations that do not significantly contribute to their operating temperature. Placement of this product close to heat sources such as; radiators, heat registers and other devices that produce heat should be avoided.

**8.** This product was **NOT** designed for use in wet/damp locations and should not be used near water or exposed to rain. Examples of wet/damp locations are; near a swimming pool, spa, tub, sink, or wet basement.

**9.** This product should be used only with the components supplied or; a cart, rack, or stand that is recommended by the manufacturer. If a cart, rack, or stand is used, please observe all safety markings and instructions that accompany the accessory product.

**10.** The power supply cord (plug) should be disconnected from the outlet when electronic products are to be left unused for extended periods of time. Cords should also be disconnected when there is a high probability of lightening and/or electrical storm activity.

**11.** Care should be taken that objects do not fall and liquids are not spilled into the enclosure through any openings that may exist.

**12.** Electrical/electronic products should be serviced by a qualified service person when:

- The power supply cord has been damaged; or
- Objects have fallen, been inserted, or liquids have been spilled into the enclosure through openings; or
- The product has been exposed to rain; or
- The product does not operate, exhibits a marked change in performance; or
- The product has been dropped, or the enclosure of the product has been damaged.

**13.** Do not attempt to service this product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.

**14.** This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. **DO NOT** operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist. **IMPORTANT:** The louder the sound, the shorter the time period before damage occurs.

**15.** Some Yamaha products may have benches and/or accessory mounting fixtures that are either supplied as a part of the product or as optional accessories. Some of these items are designed to be dealer assembled or installed. Please make sure that benches are stable and any optional fixtures (where applicable) are well secured **BEFORE** using. Benches supplied by Yamaha are designed for seating only. No other uses are recommended.

## PLEASE KEEP THIS MANUAL

**YAMAHA**

YAMAHA CORPORATION  
P.O.Box 1, Hamamatsu, Japan

VR11700 JDBAROP05.2CP Printed in Japan