



Scale Tuner Owner's Manual

- The software and this owner's manual are exclusive copyrights of Yamaha Corporation.
- Copying of the software or reproduction of this manual in whole or in part by any means is expressly forbidden without the written consent of the manufacturer.
- Yamaha makes no representations or warranties with regard to the use of the software and documentation and cannot be held responsible for the results of the use of this manual and the software.

- The screen displays as illustrated in this Owner's Manual are for instructional purposes, and may appear somewhat different from the screens which appear on your devices.
- Apple, iPad, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- The company names and product names in this Owner's Manual are the trademarks or registered trademarks of their respective companies.

 
© 2011 Yamaha Corporation. All rights reserved.

What is Scale Tuner?


This application lets you tune each note of the MIDI instrument individually from your iPod touch, iPhone, iPad. In addition to the conventional Equal Temperament, you can play various ethnic scales, such as those for Arabic and Indian music.

NOTE


The compatible instruments can be checked on the iTunes Store.

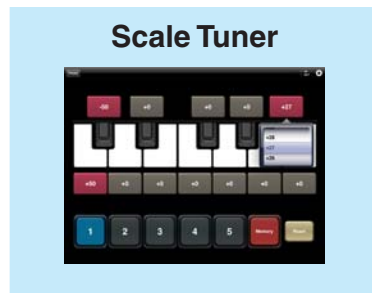


iPod touch
iPhone
iPad

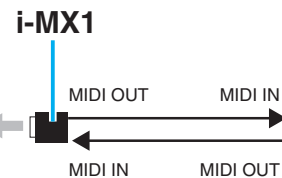 


MIDI Instrument

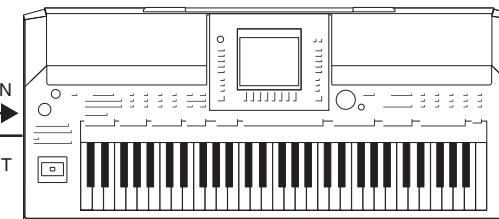 

 
By using a Yamaha i-MX1, connect the instrument to an iPod touch, iPhone, iPad.

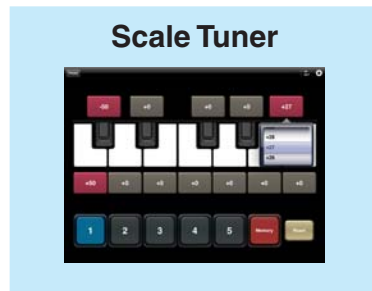

 iPad with Apple
iPad Camera
Connection Kit



MIDI Instrument

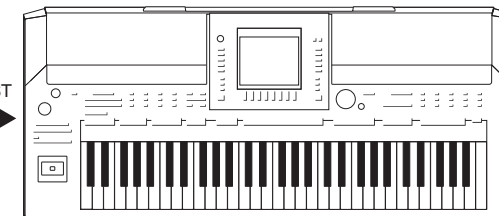 

Scale Tuner

For selecting a Preset scale.

Each lamp flashes according to the MIDI in/out messages.

Produces the piano sound of your iPod touch, iPhone, iPad.

Tapping here lets you set the pitch value for the corresponding note alternatively to either +0 (default) or the value set via the Default Detune Amount in the Utility window.

To call up the scale you've created and memorized to 1 – 5, tap the desired number.

To memorize your original scale to 1 – 5, tap here, then tap the desired number.

Resets all pitch values to +0.

To call up data entry, hold down the value indication at each note.

Tapping this opens or closes the **Utility window**.

Menu items in the Utility window

Model Information:
When a compatible instrument is connected, the model name is displayed.

Part Setting:
Determines the target part of the Scale Tuner.
Depending on the particular instrument connected, the Transmit Channel of the Scale Tuner can also be set here. The Transmit Channel number should be same as the MIDI Receive Channel number of the instrument. For details about the MIDI Receive Channel, refer to the respective manuals of the instruments.

Base Note:
Determines the Root Note of the current scale. According to the note set here, all pitch values will be shifted.

Default Detune Amount:
Determines the pitch value which is called up by tapping the value indication. This setting allows you to call up often used pitches quickly and easily.