



MusicCast

SURROUND / STEREO

Setup Manual

設定手順書

Tap your language


English

日本語

Introduction

1. MusicCast Surround (PP.6-22)


Build a MusicCast Surround wireless 5.1ch-channel system. Use MusicCast Surround-capable wireless speakers as surround speakers for MusicCast Surround-capable AV receivers and sound bars.

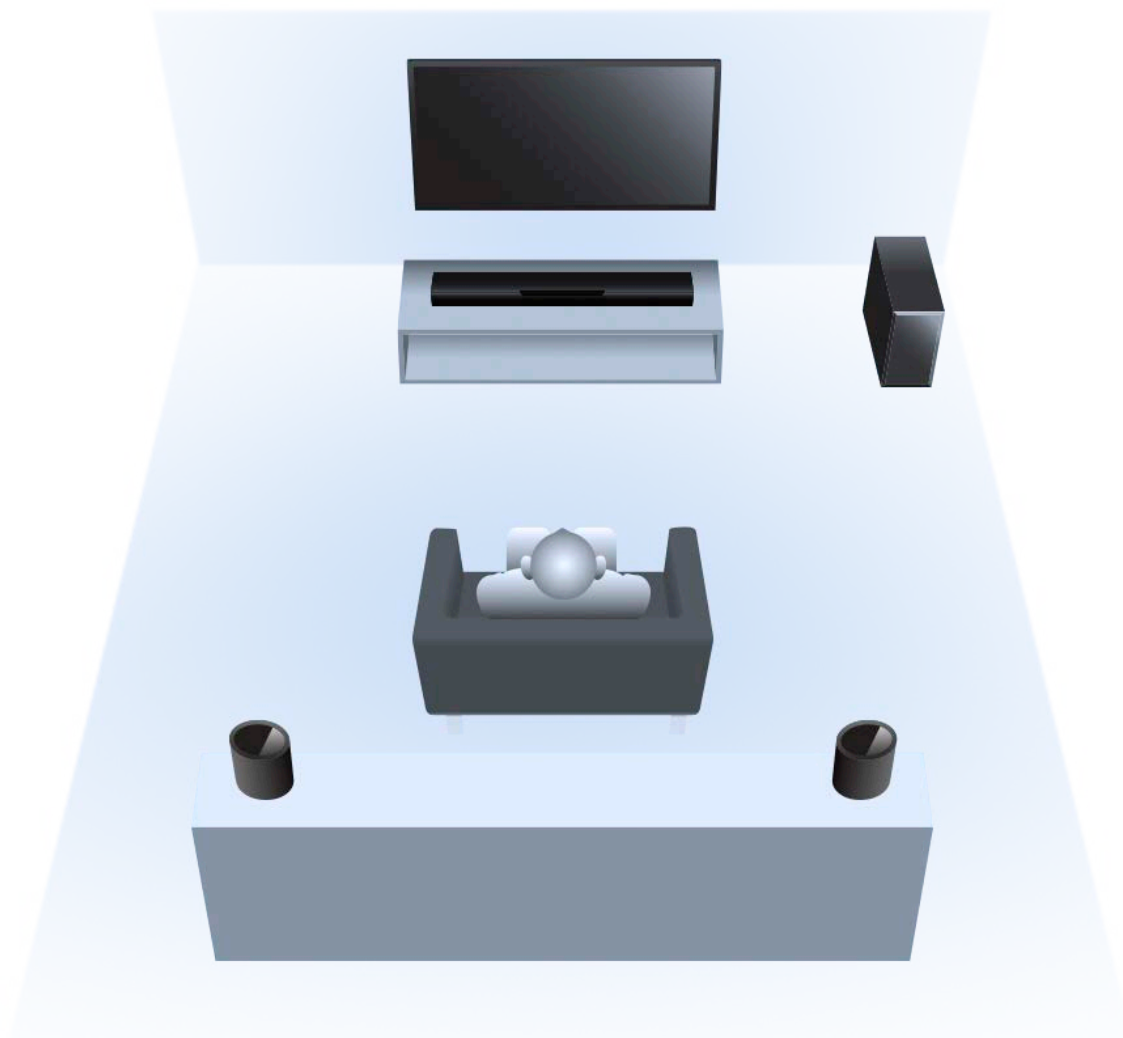

Introduction


2. MusicCast Stereo (PP.23-38)

Build a MusicCast Stereo wireless 2.1-channel system with MusicCast Stereo-capable wireless speakers.

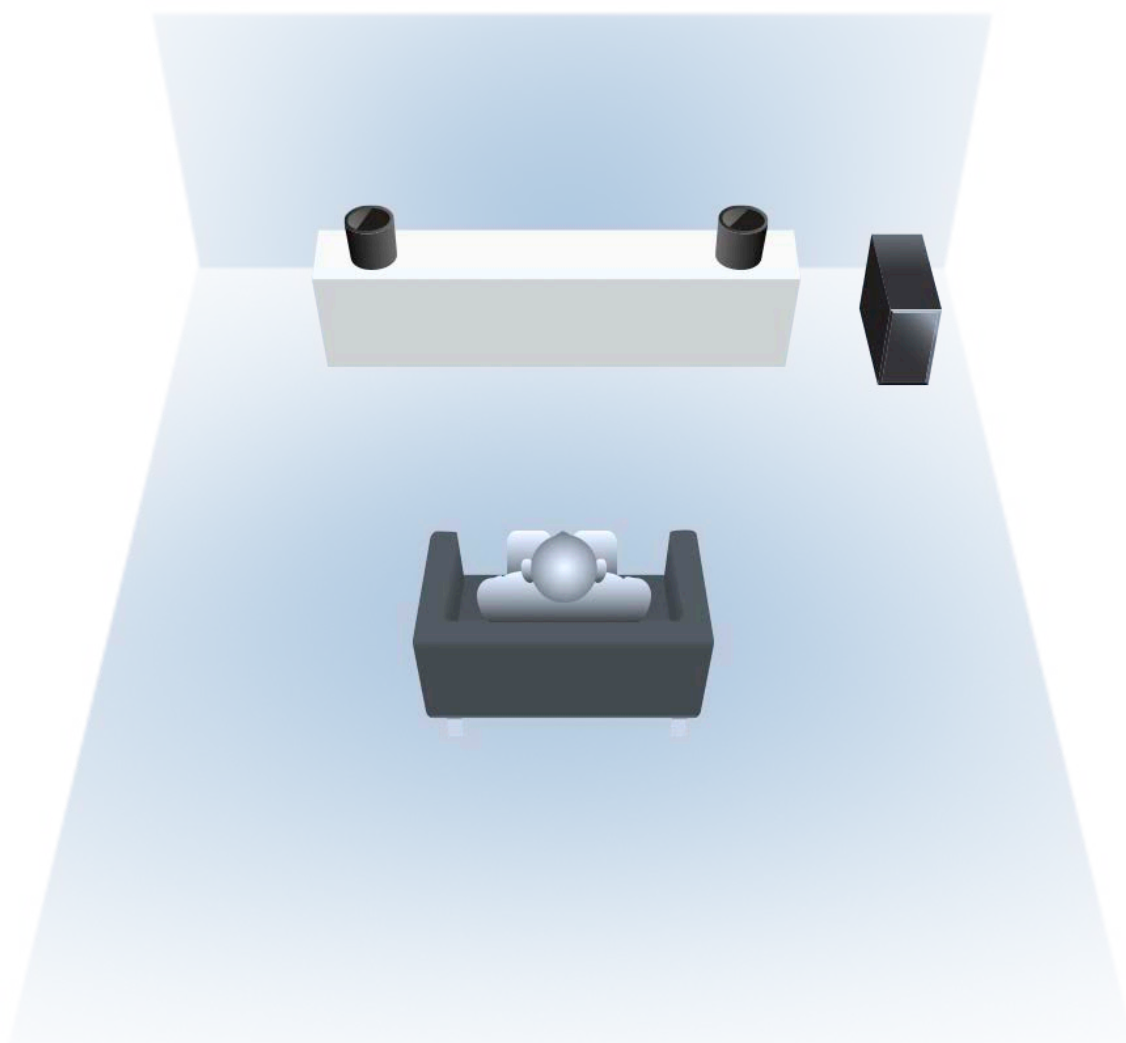


Preparation

1. Update the MusicCast Controller app to the latest version.

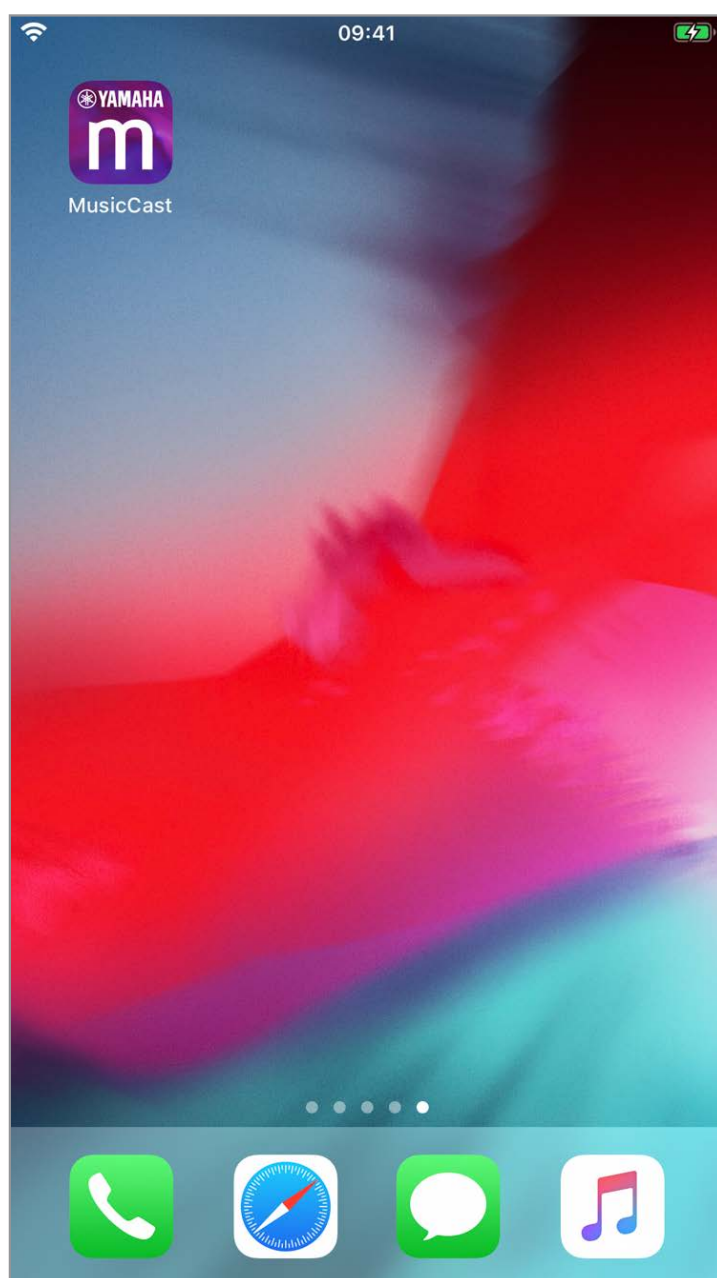

Preparation

2. Make sure all desired devices are registered in the same location, as shown below.

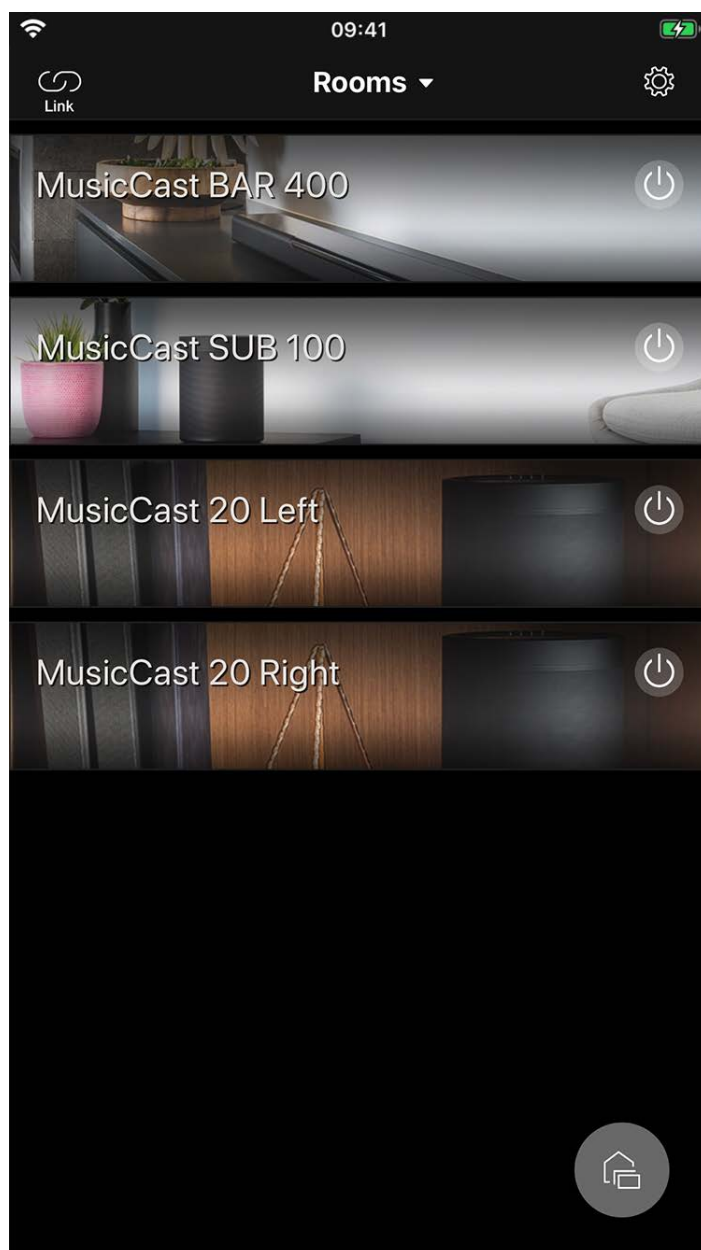


*Adding "left" or "right" to the room names for surround/stereo speakers may make following setup easier.

How to set up MusicCast Surround

Step 1

MusicCast CONTROLLER App

Open the MusicCast Controller app.

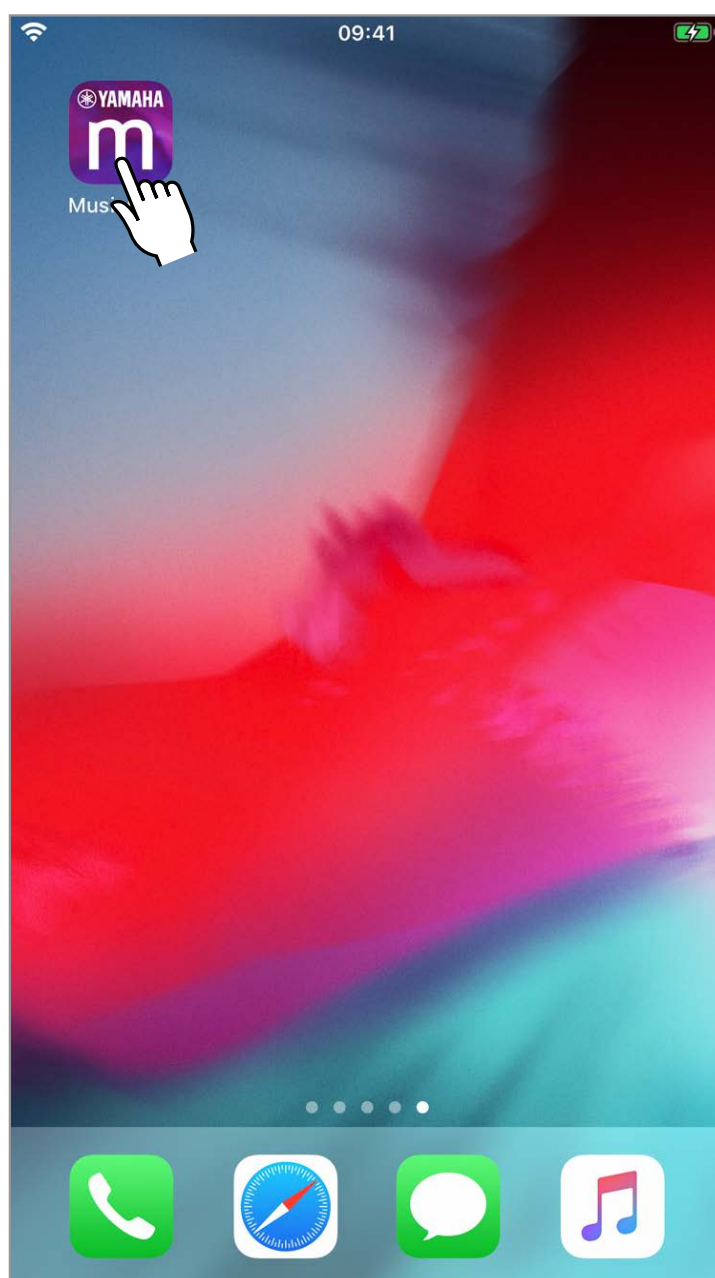


English

日本語

Step 2

MusicCast CONTROLLER App


Tap the settings icon on the home screen to open settings.

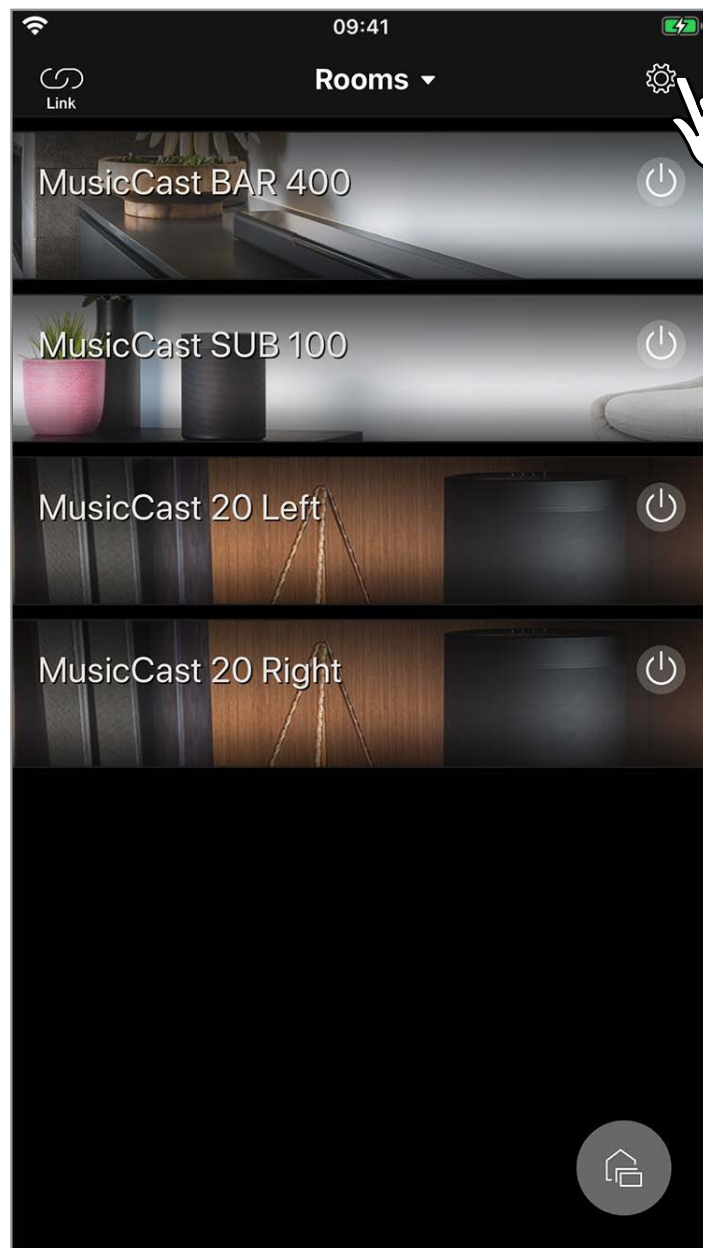

Step 3

MusicCast CONTROLLER App


Check to make sure the firmware for each device is up to date. If the following message appears, tap it since updating is required.

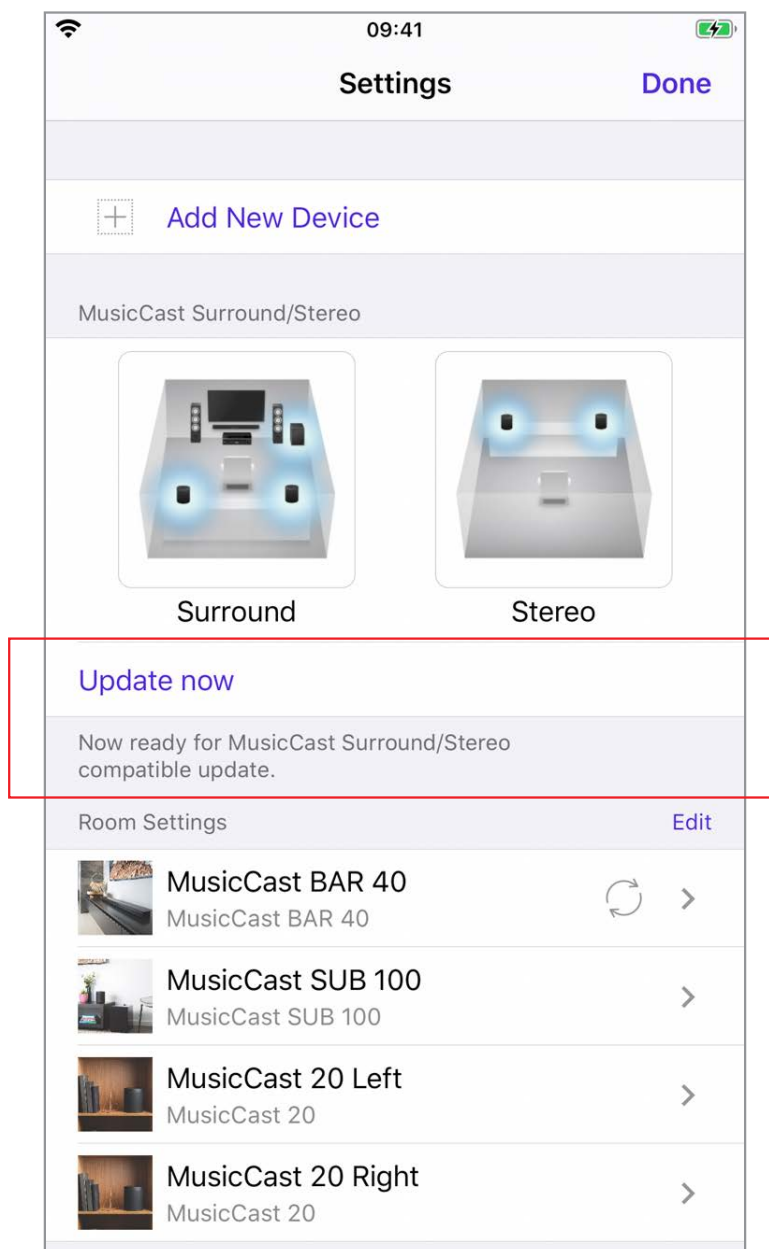

Step 4

MusicCast CONTROLLER App


Tap “MusicCast Surround/Stereo.”

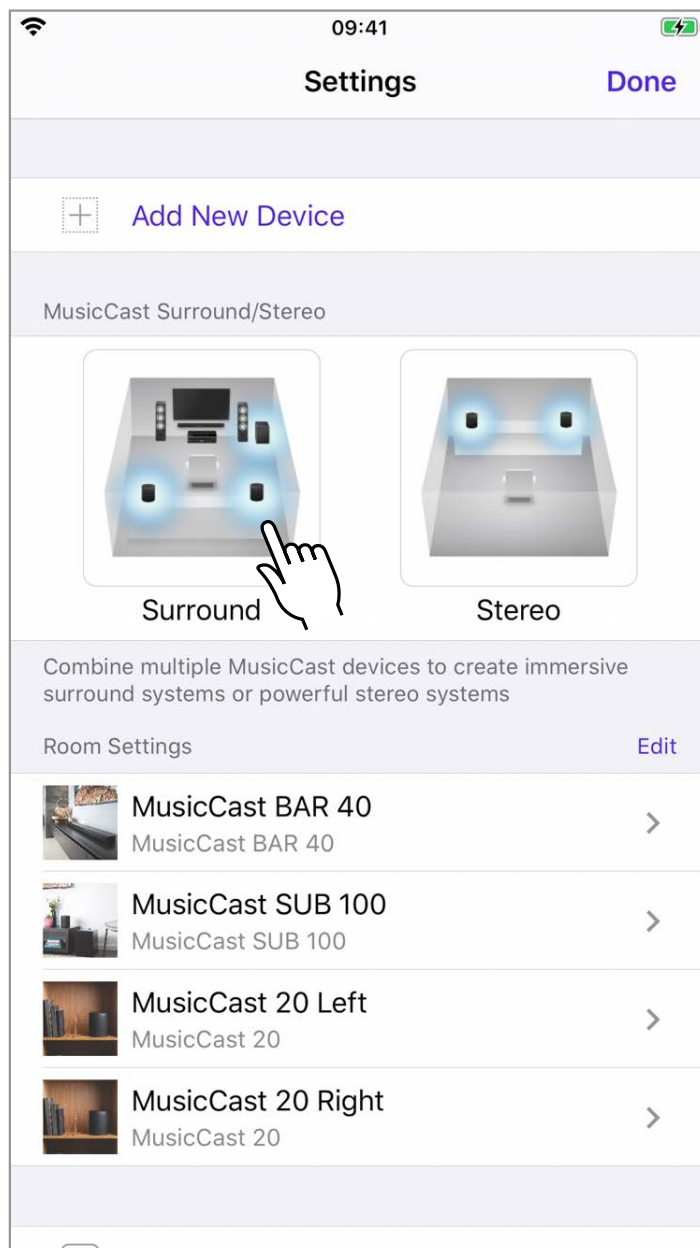

Step 5

MusicCast CONTROLLER App


Select the front devices used to build the MusicCast Surround system.

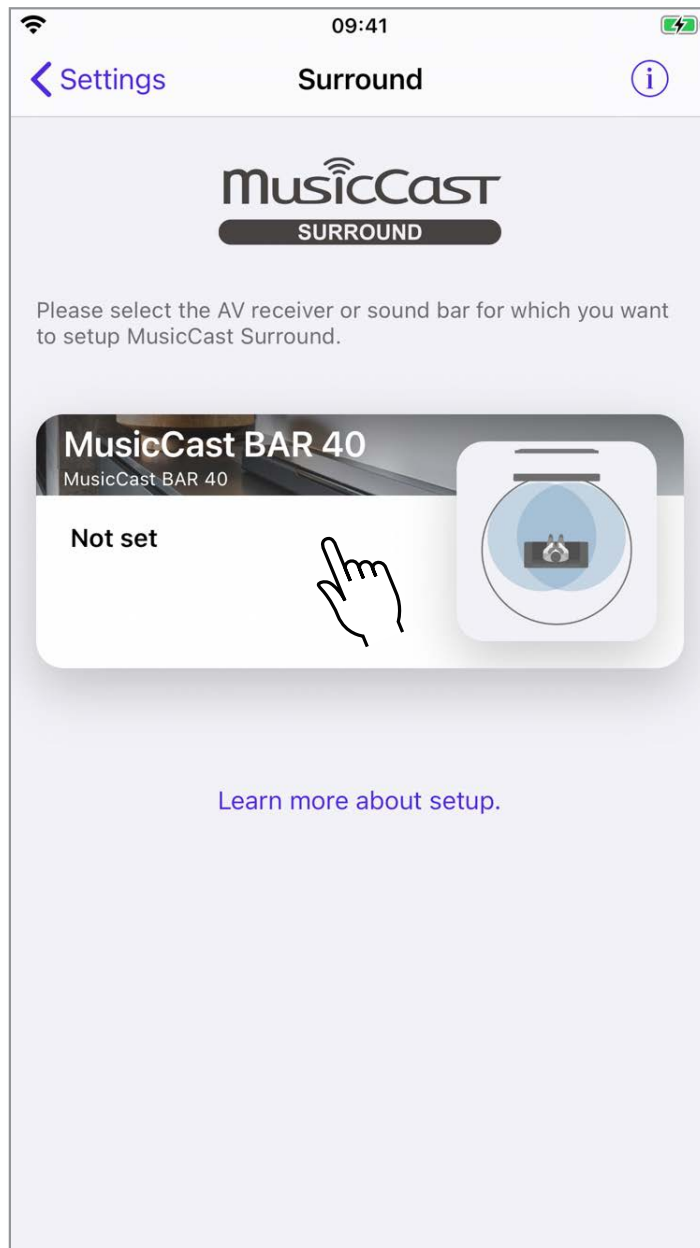

Step 6

MusicCast CONTROLLER App


Tap “Setup Speakers.”

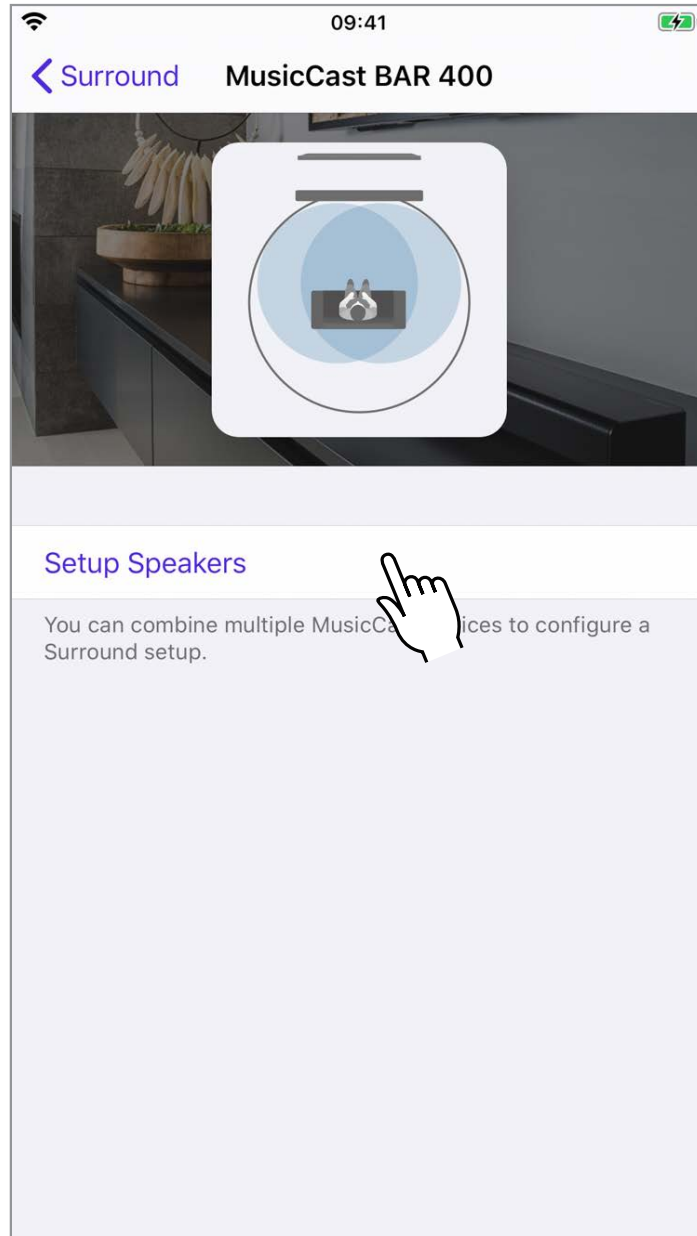

Step 7

MusicCast CONTROLLER App


Tap “Surround Speaker L/R” to enable it.

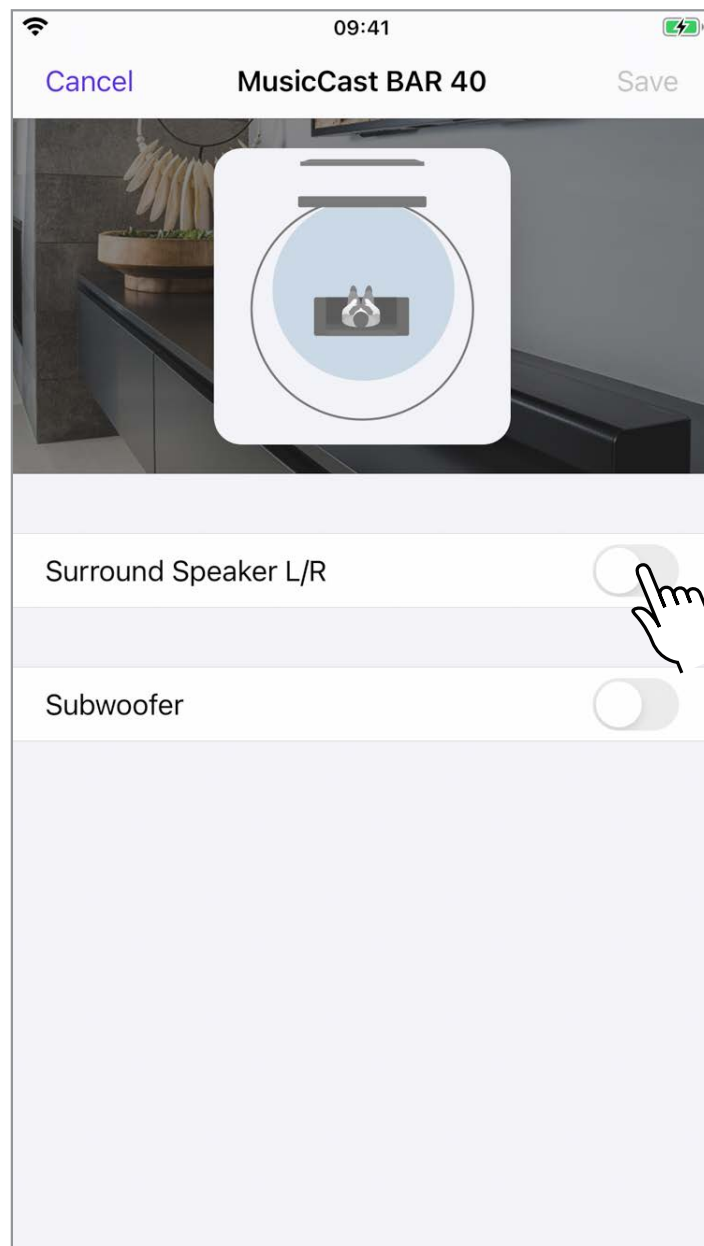

Step 8

MusicCast CONTROLLER App


Follow the on-screen instructions to specify the number of speakers and set up the surround speakers.

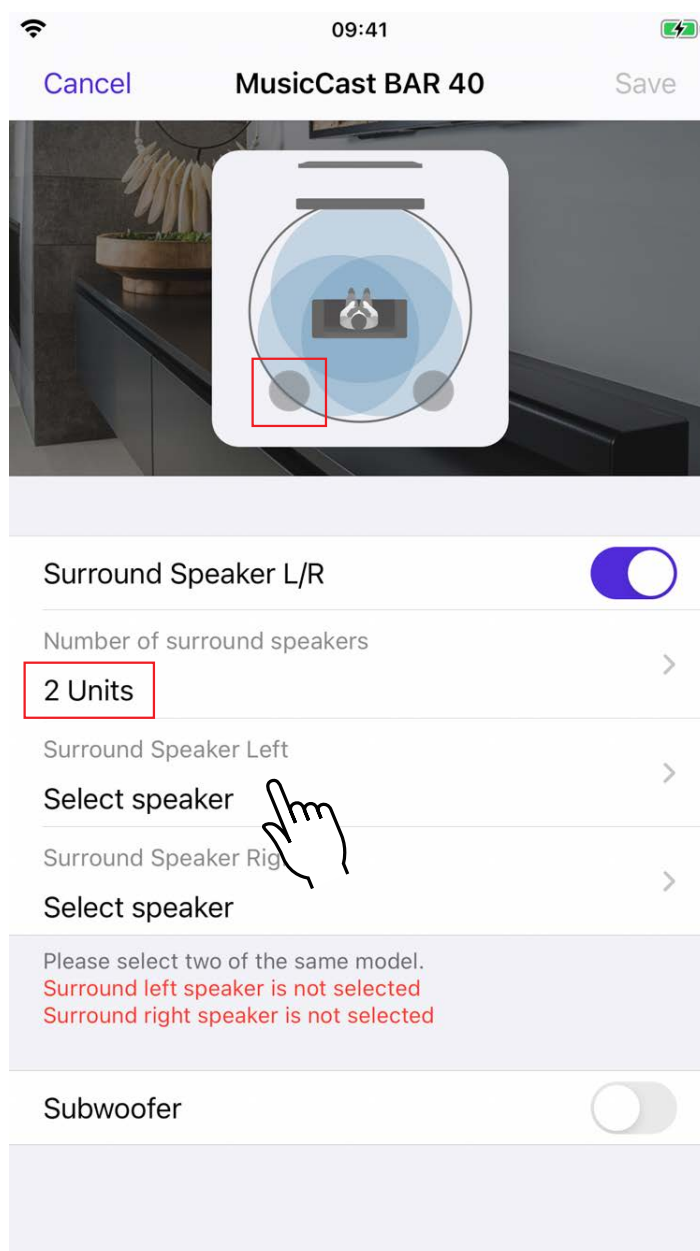

Step 9

MusicCast CONTROLLER App



Select the device for the left Surround speaker.

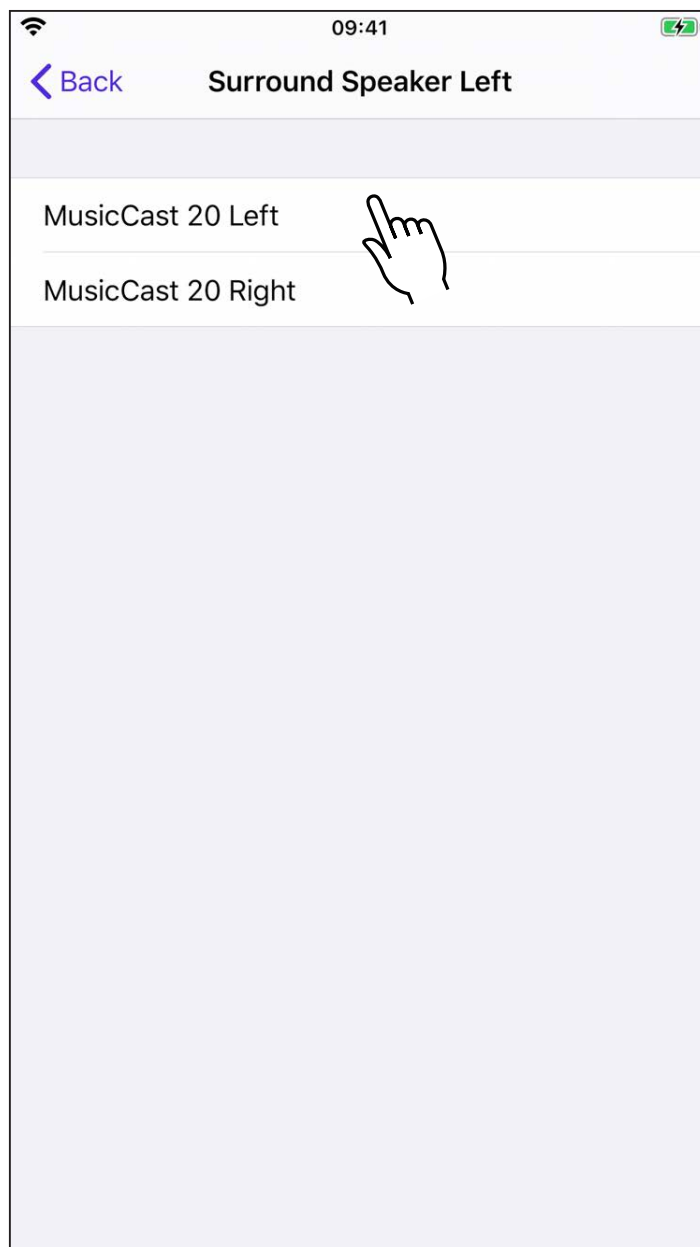

Step 10

MusicCast CONTROLLER App


Follow the same steps for the right Surround speaker.

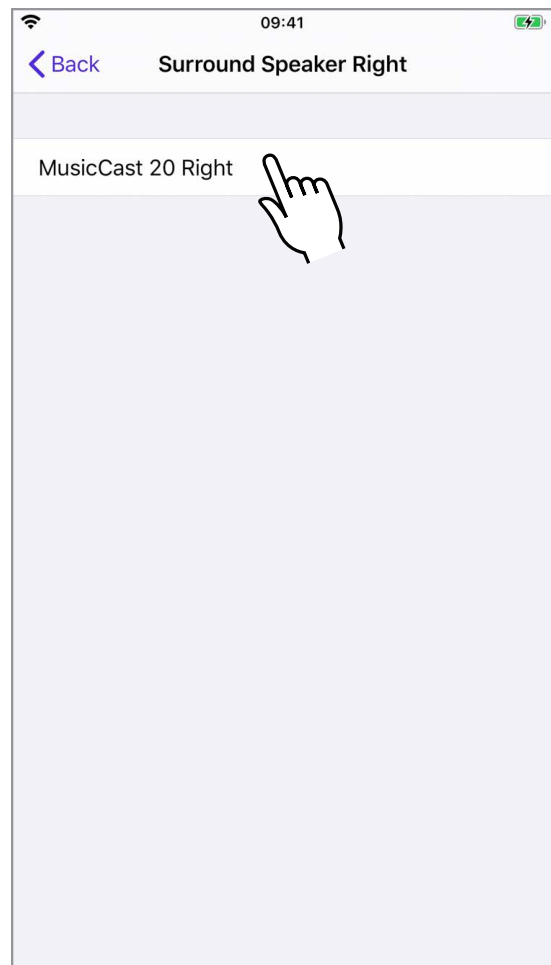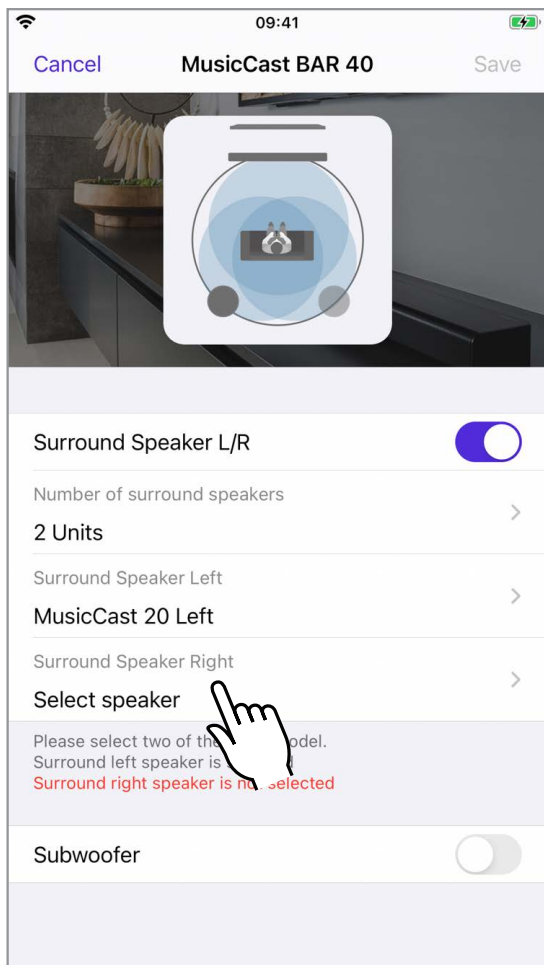

Step 11

MusicCast CONTROLLER App

Tap “Subwoofer” to set up your MusicCast Surround-capable subwoofer.

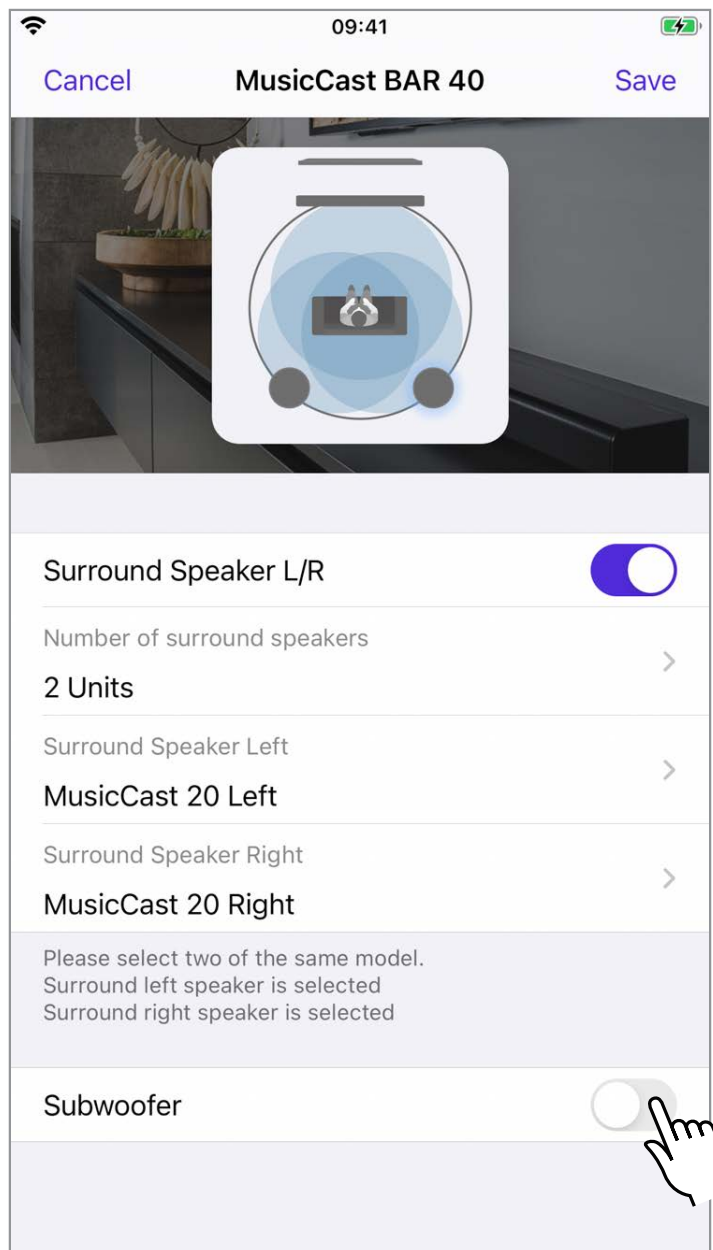


* Tapping ● in the image causes the LEDs of the corresponding device to light up. Doing this allows you to look at the devices to check the position that a speaker is set to.

Step 12

MusicCast CONTROLLER App


Tap “Select speaker.”

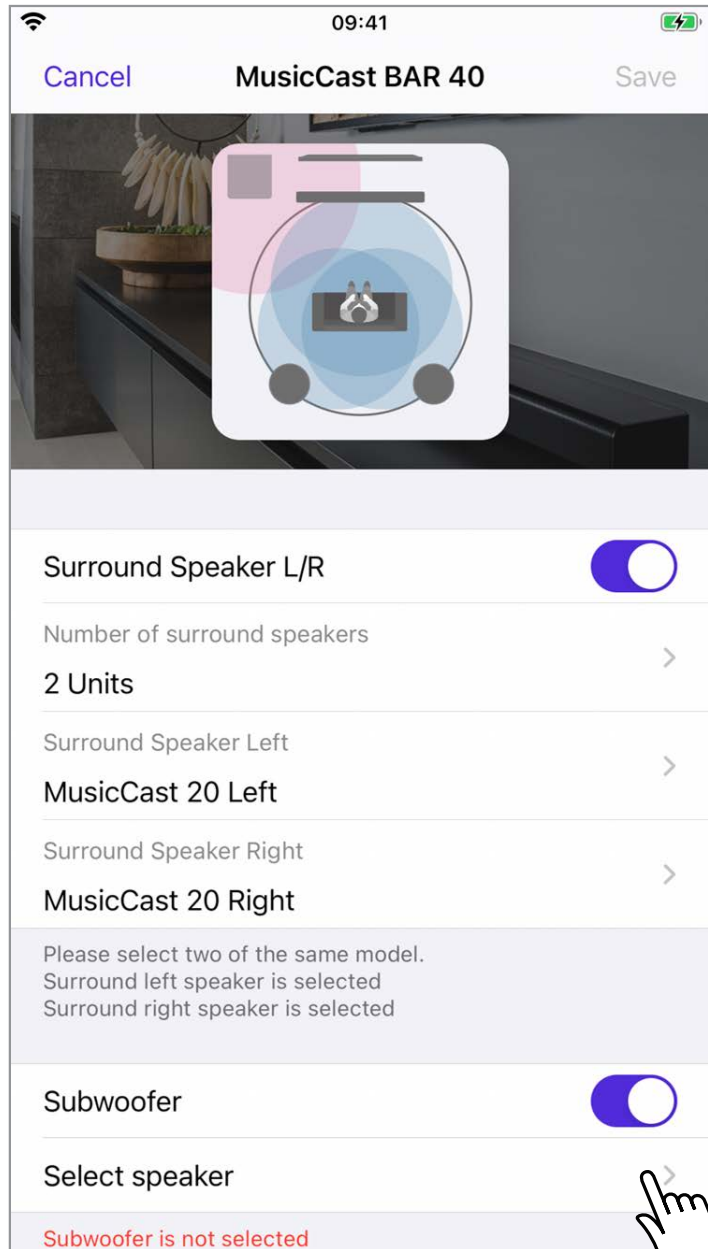

Step 13

MusicCast CONTROLLER App


Select desired subwoofer.

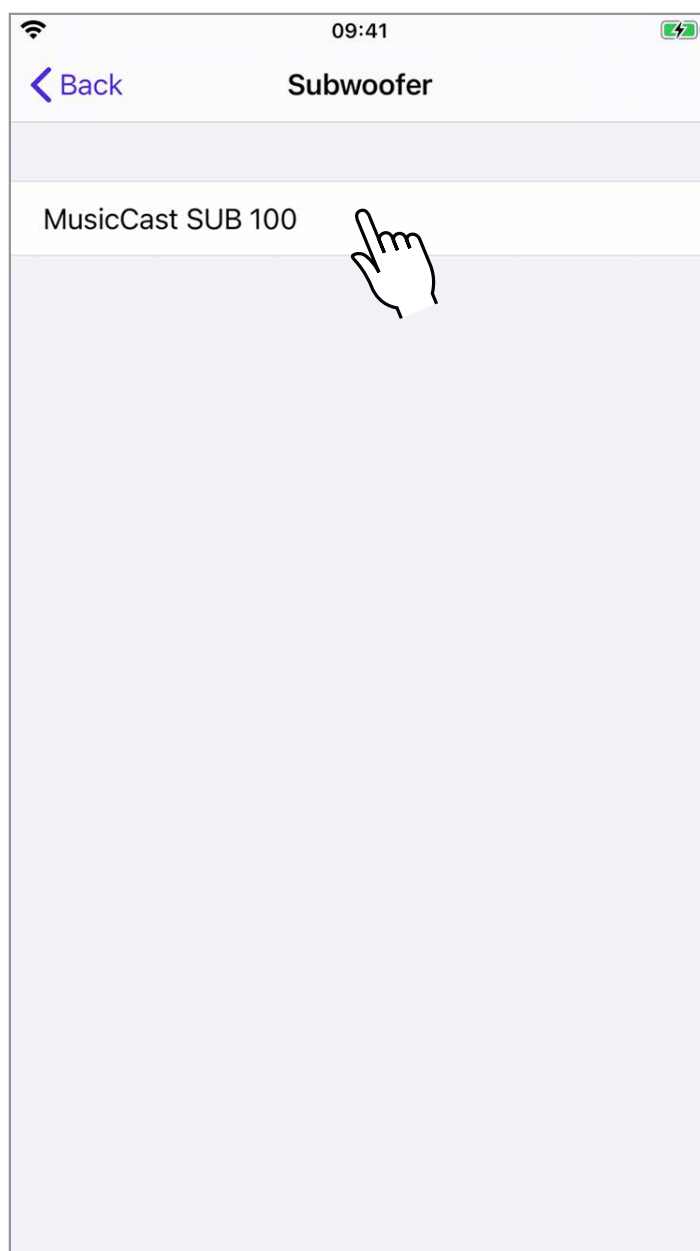

Step 14

MusicCast CONTROLLER App



Tap “Save.”

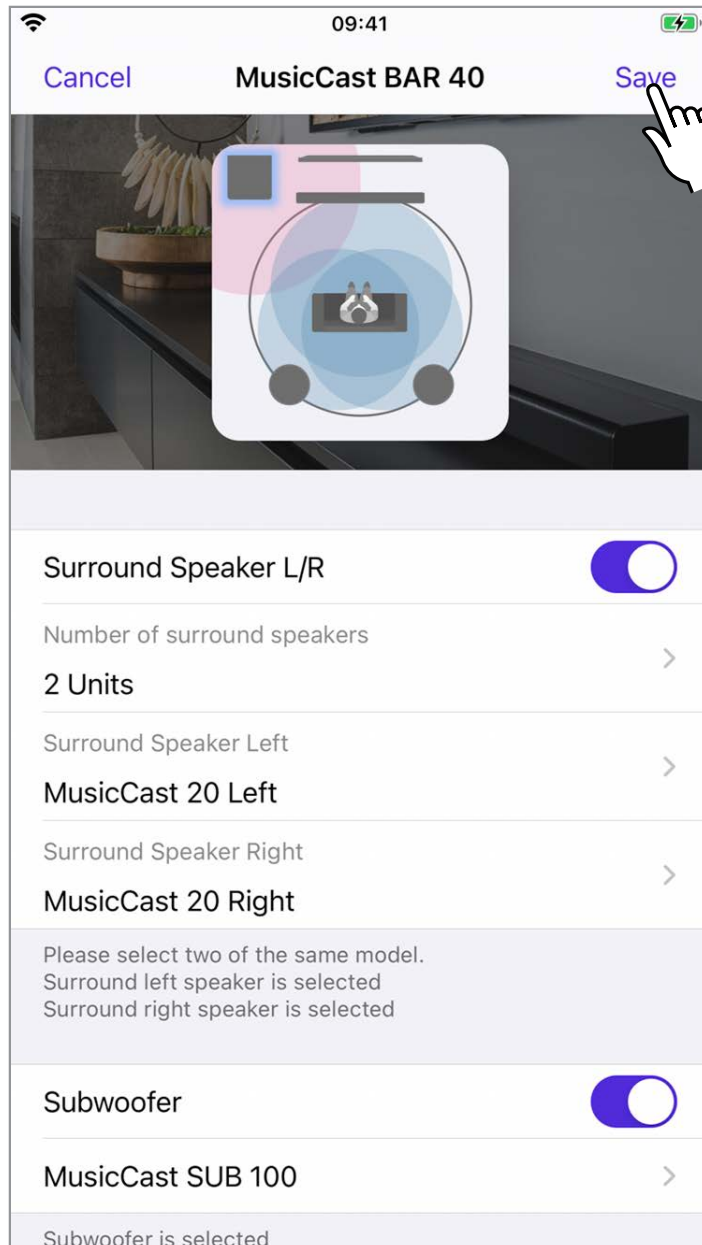

Step 15

MusicCast CONTROLLER App


Your setup will now begin establishing.
Tap OK upon Setup success.

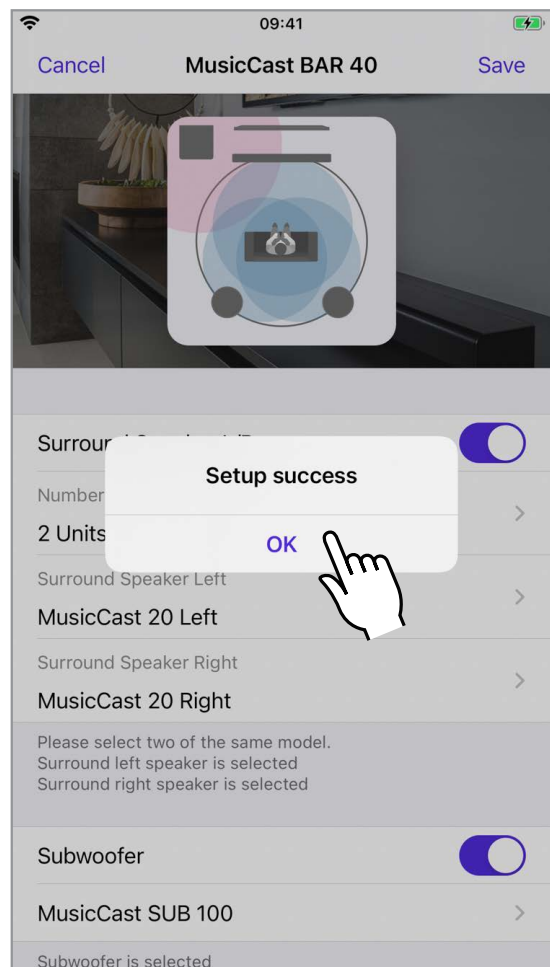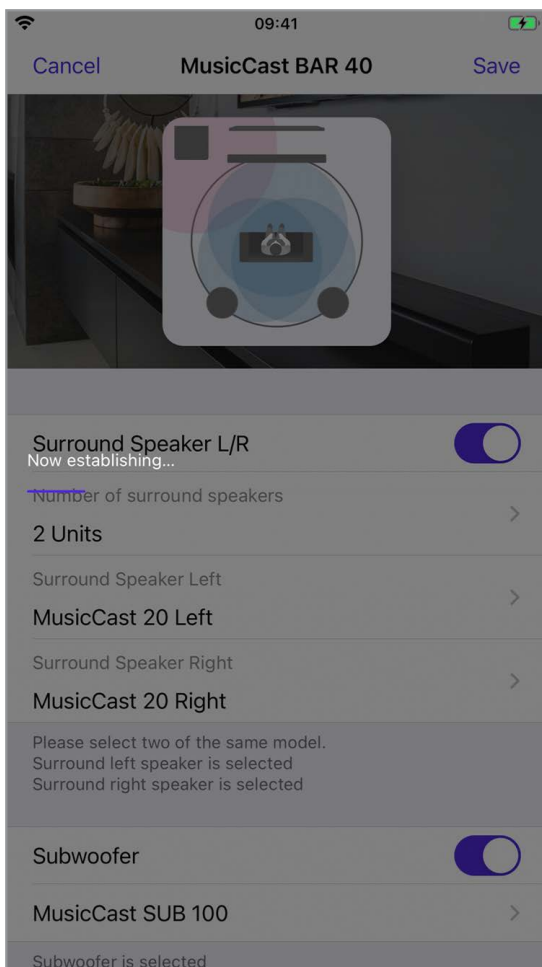

Step 16

MusicCast CONTROLLER App

Tap “Surround” to close the setup screen.

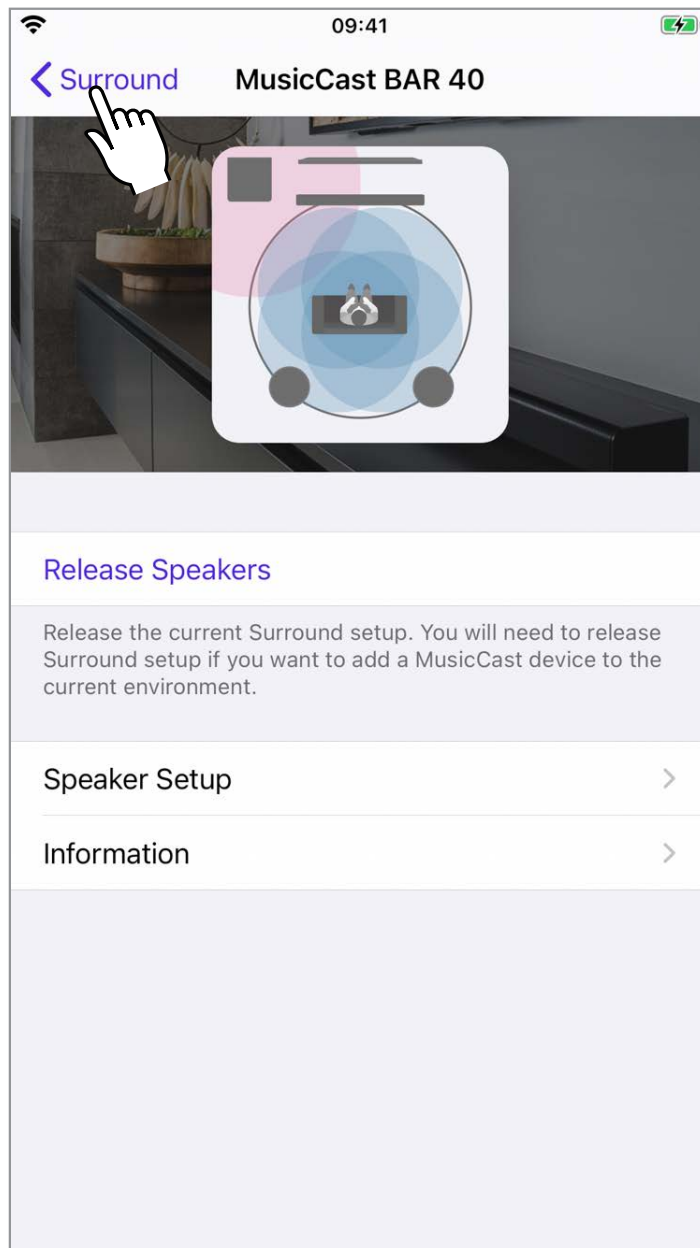


* To cancel the MusicCast Surround settings, tap “Release Speakers”.

Step 17

MusicCast CONTROLLER App

Setup complete!

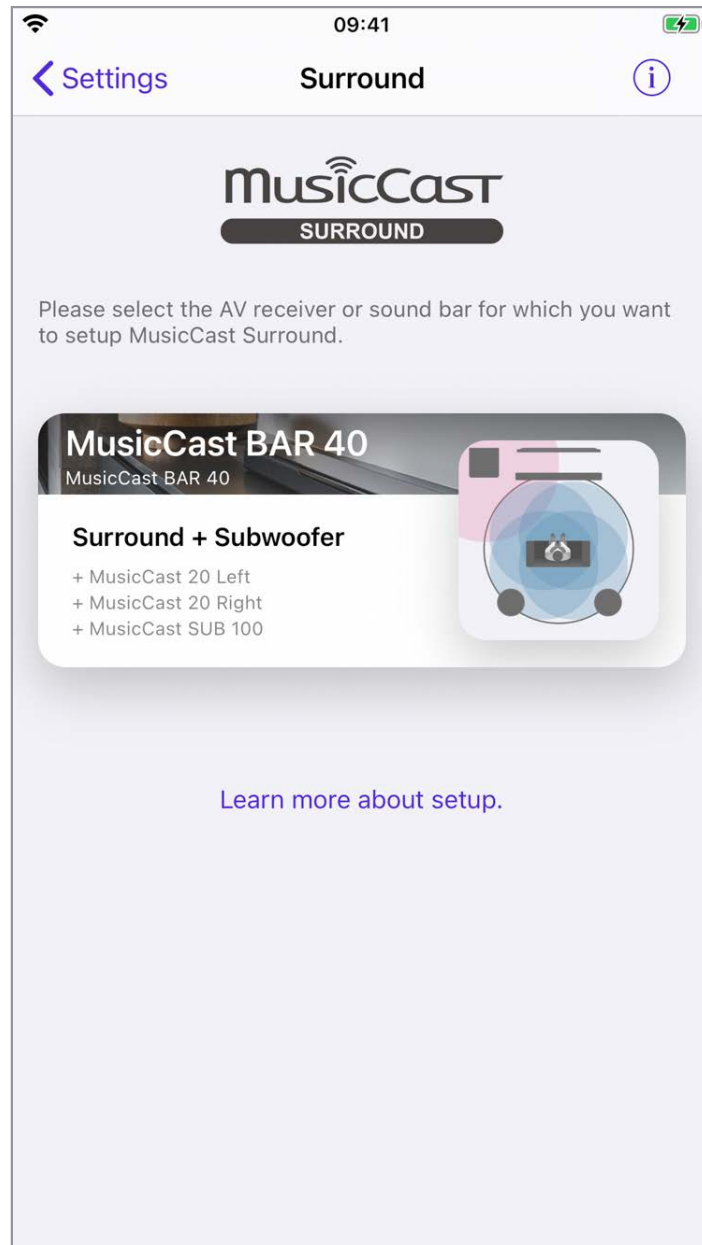

*For enjoying better surround sound, please go to setup menu on your TV or player and set the audio output to “Bitstream.”


“Bitstream” description might differ depending on the devices.

How to set up MusicCast Stereo

Step 1

MusicCast CONTROLLER App


Open the MusicCast Controller app.

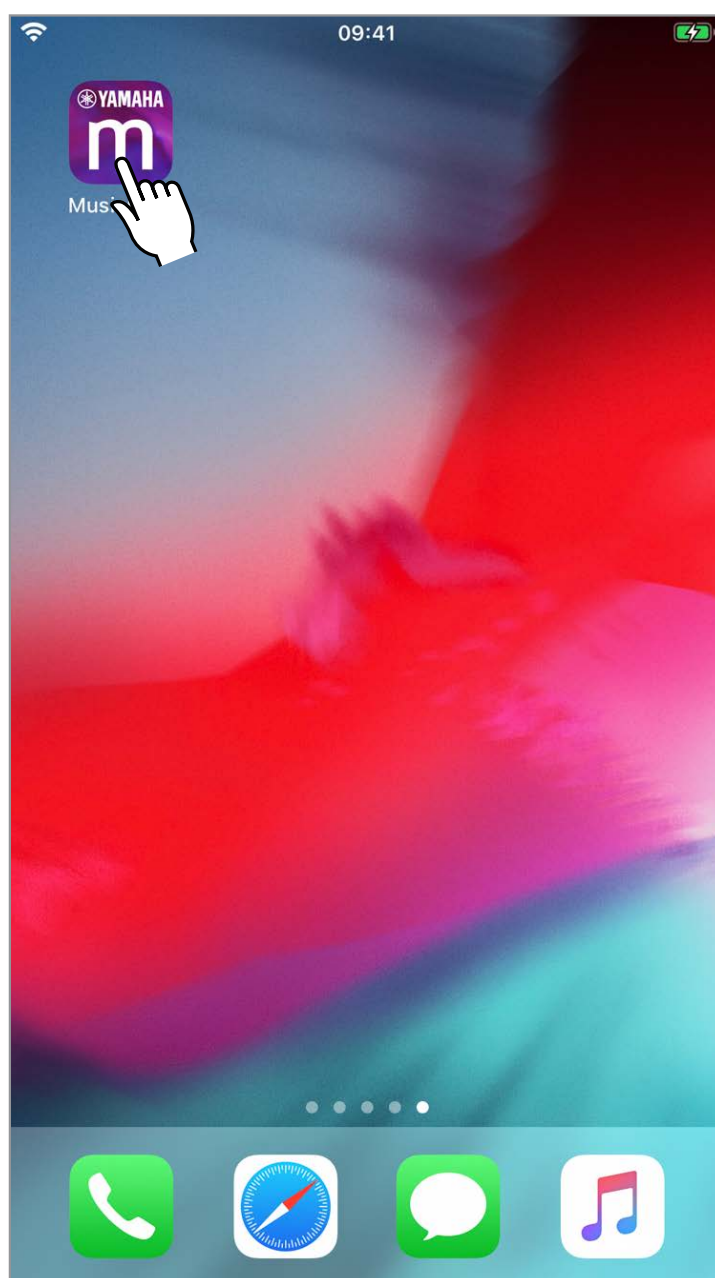

Step 2

MusicCast CONTROLLER App


Tap the settings icon on the home screen to open settings.

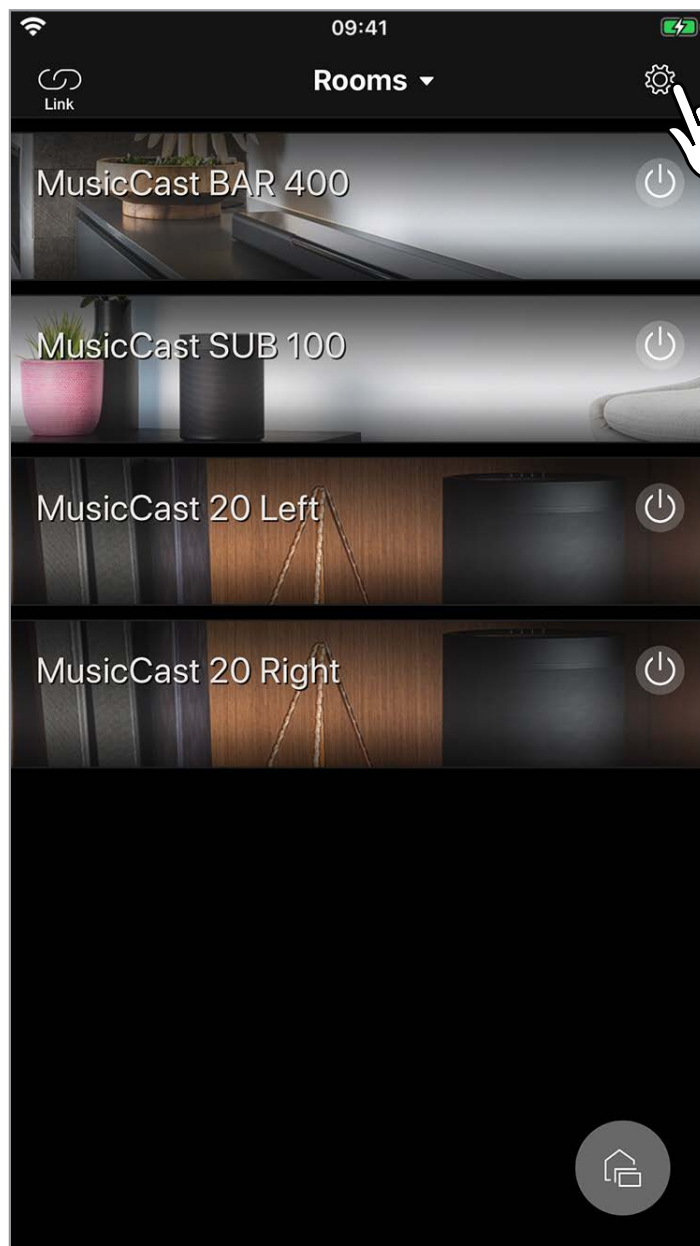

Step 3

MusicCast CONTROLLER App


Check to make sure the firmware for each device is up to date. If the following message appears, tap it since updating is required.

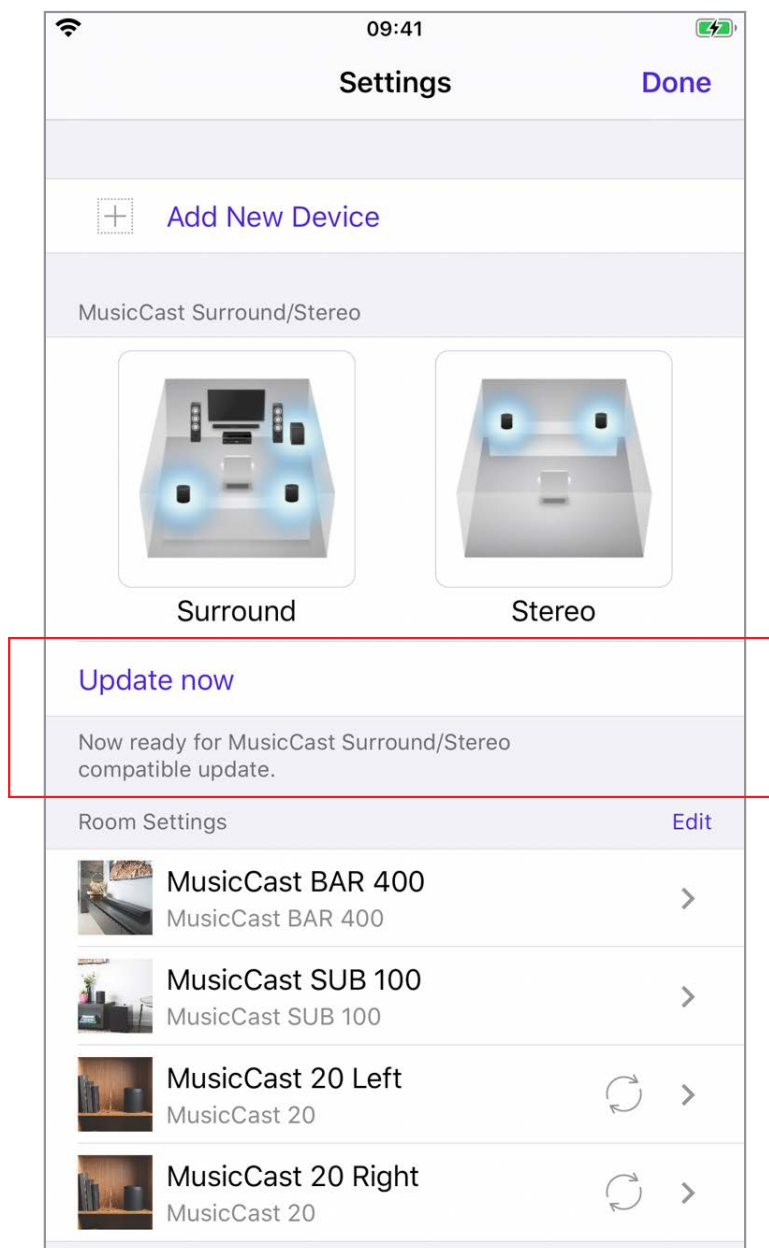

Step 4

MusicCast CONTROLLER App


Tap “MusicCast Surround/Stereo.”

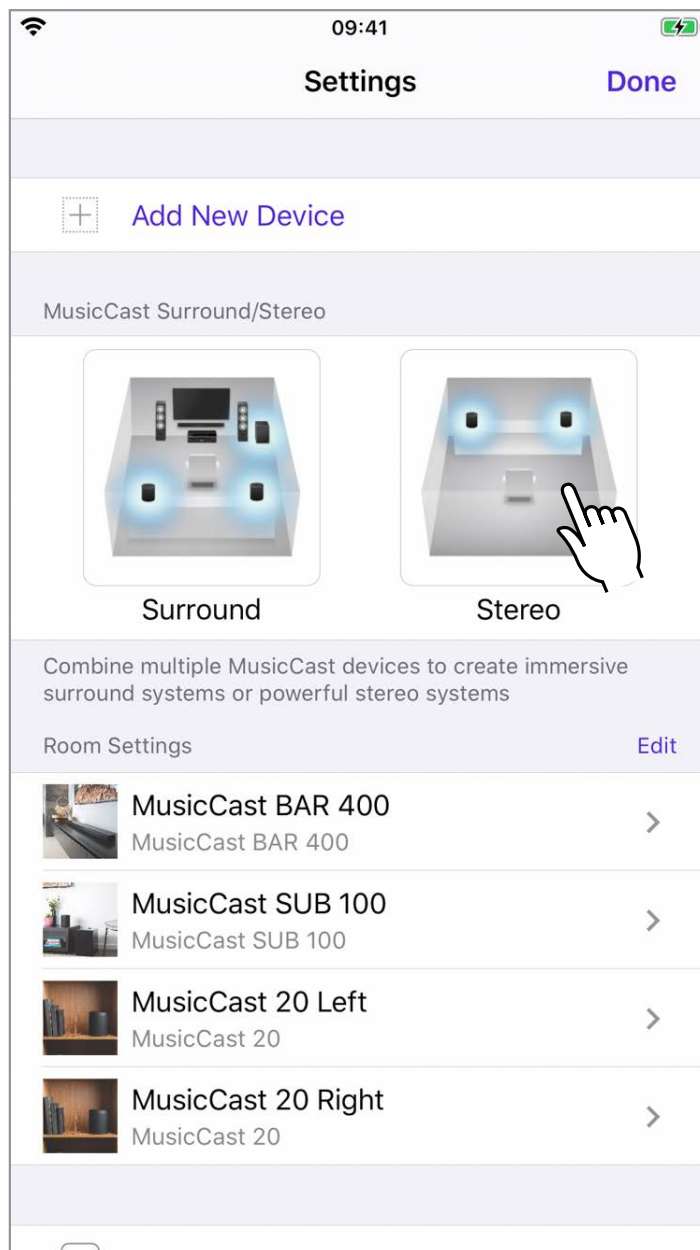

Step 5

MusicCast CONTROLLER App


Select the main device used to build a MusicCast Stereo system.

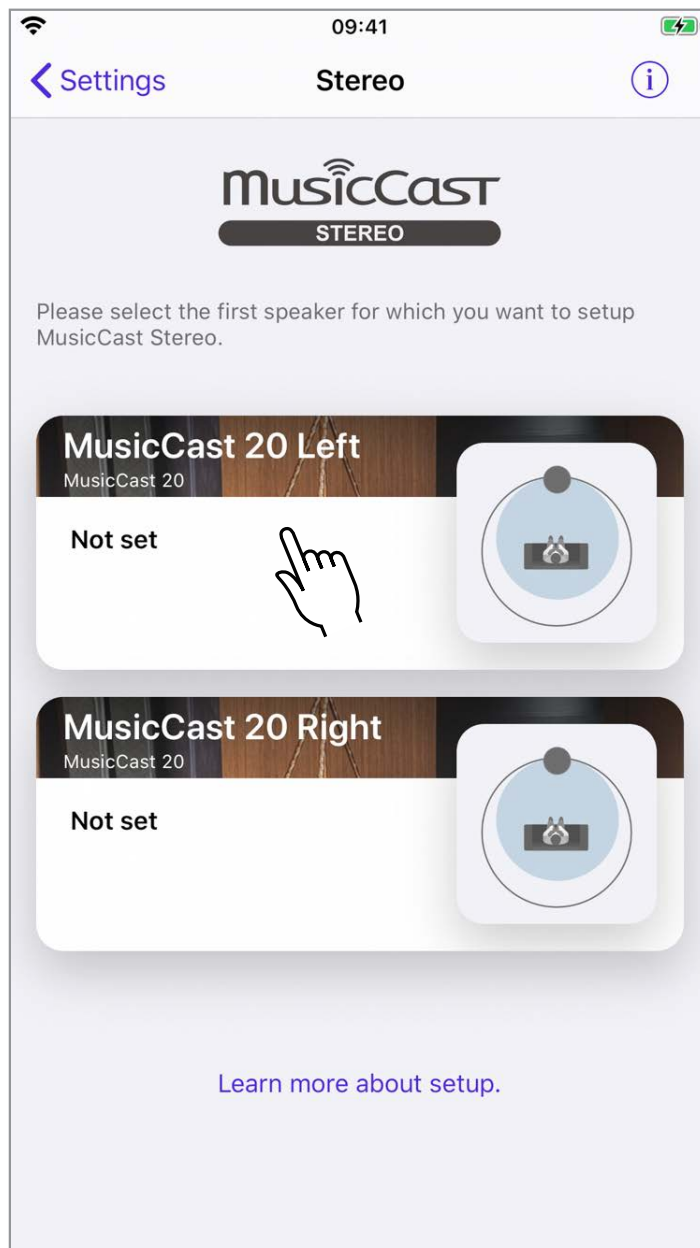

Step 6

MusicCast CONTROLLER App


Tap “Setup Speakers.”

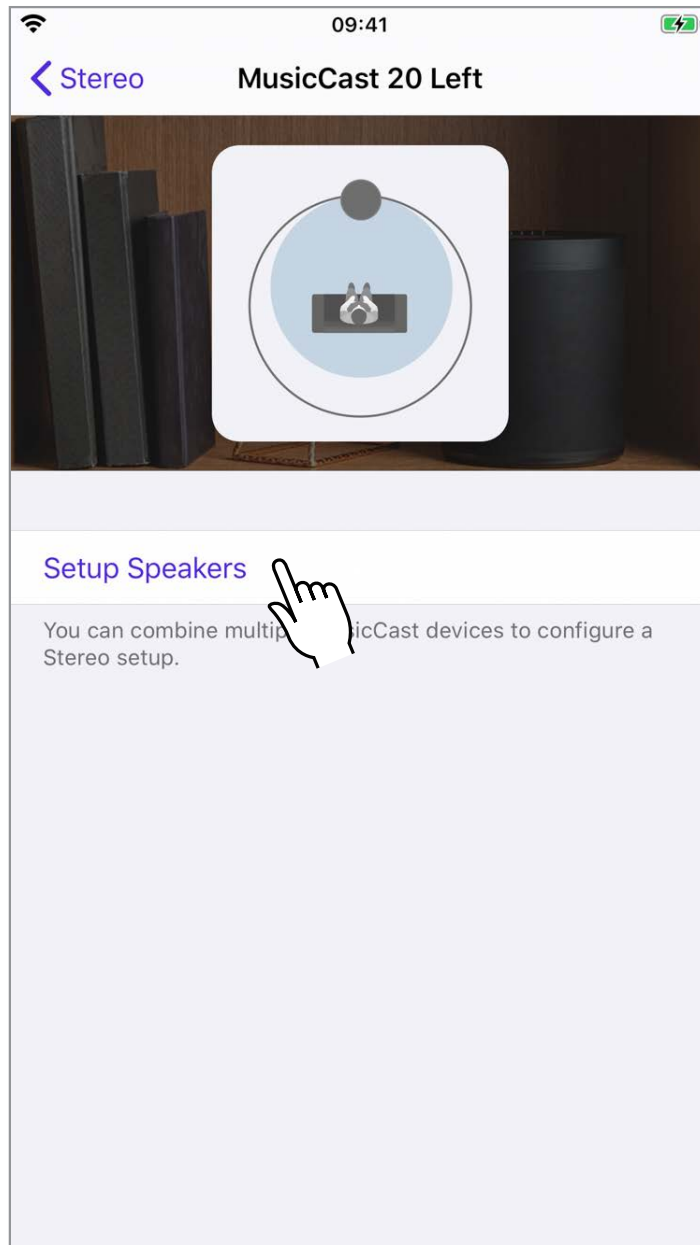

Step 7

MusicCast CONTROLLER App


Tap “Stereo Pair” to enable it.

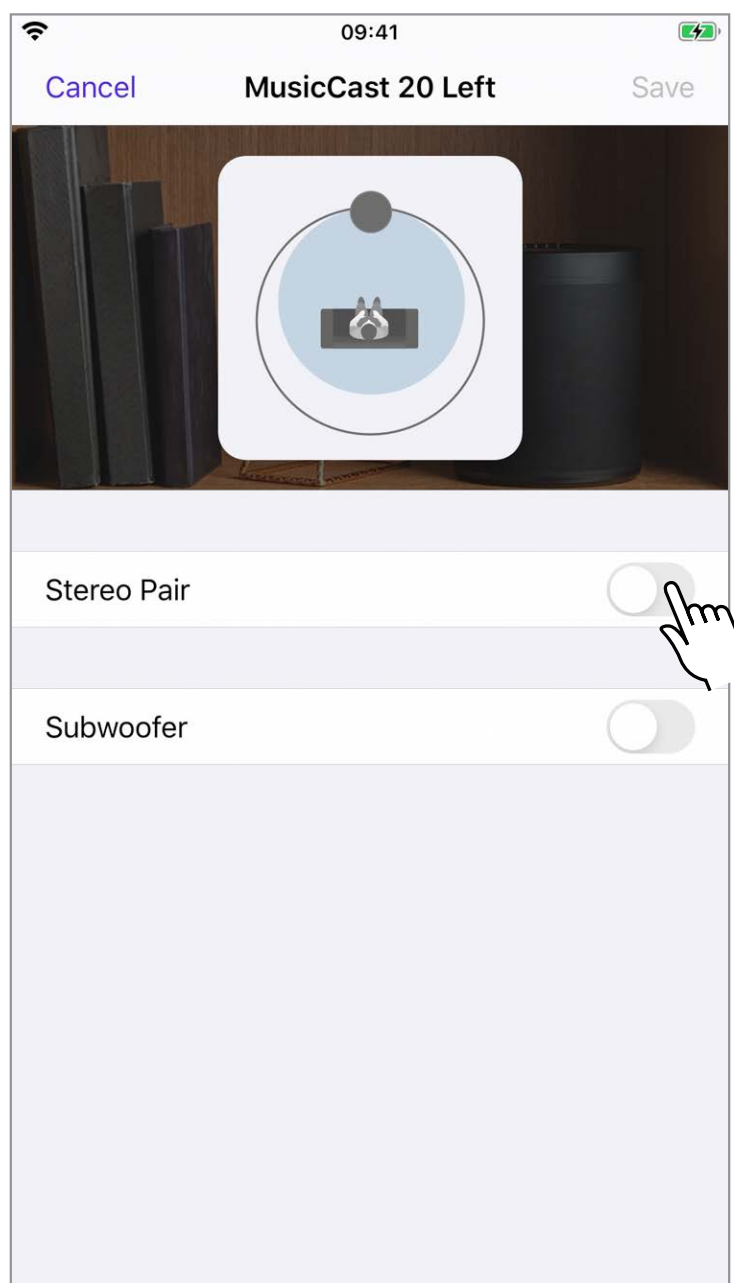

Step 8

MusicCast CONTROLLER App


The first speaker selected will be the master speaker. Confirm it's position in your room. Then, tap “Select speaker” to add the second speaker.

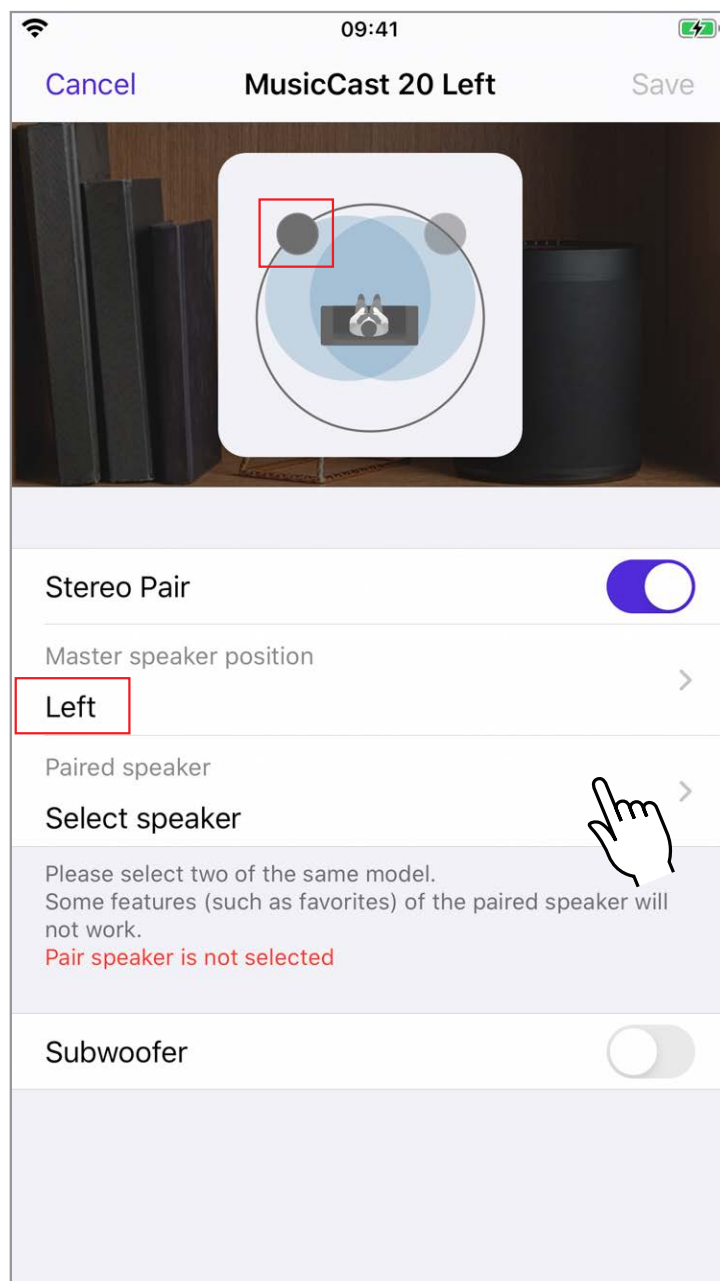

Step 9

MusicCast CONTROLLER App


Select the device for the second speaker.

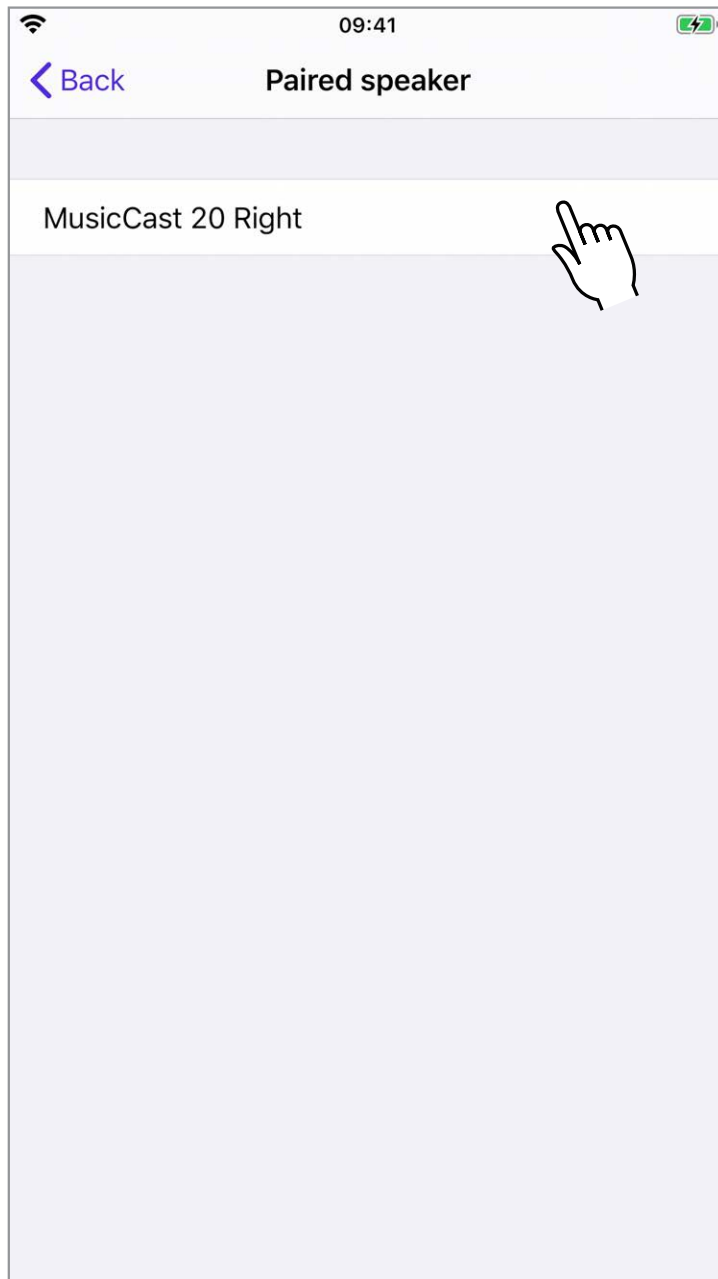

Step 10

MusicCast CONTROLLER App

Tap “Subwoofer” to set up your MusicCast Stereo-capable subwoofer.

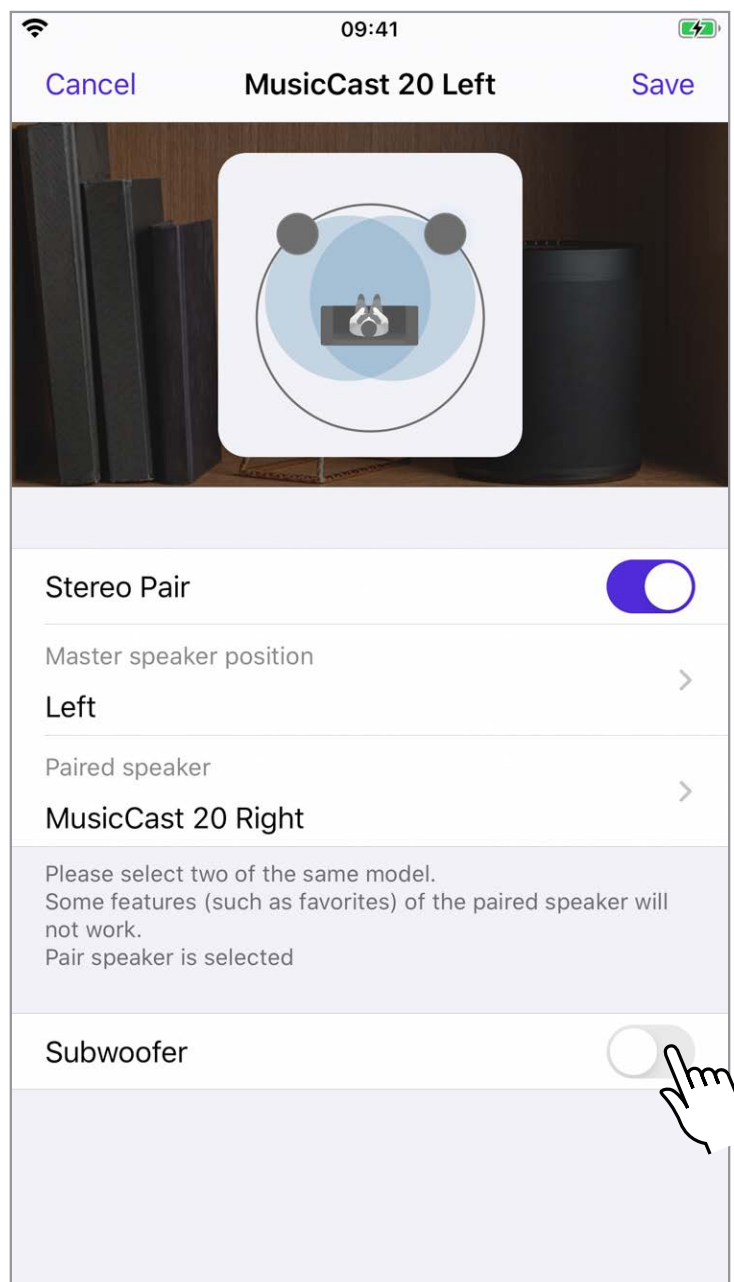


* Tapping ● in the image causes the LEDs of the corresponding device to light up. Doing this allows you to look at the devices to check the position that a speaker is set to.

Step 11

MusicCast CONTROLLER App


Tap “Select speaker.”

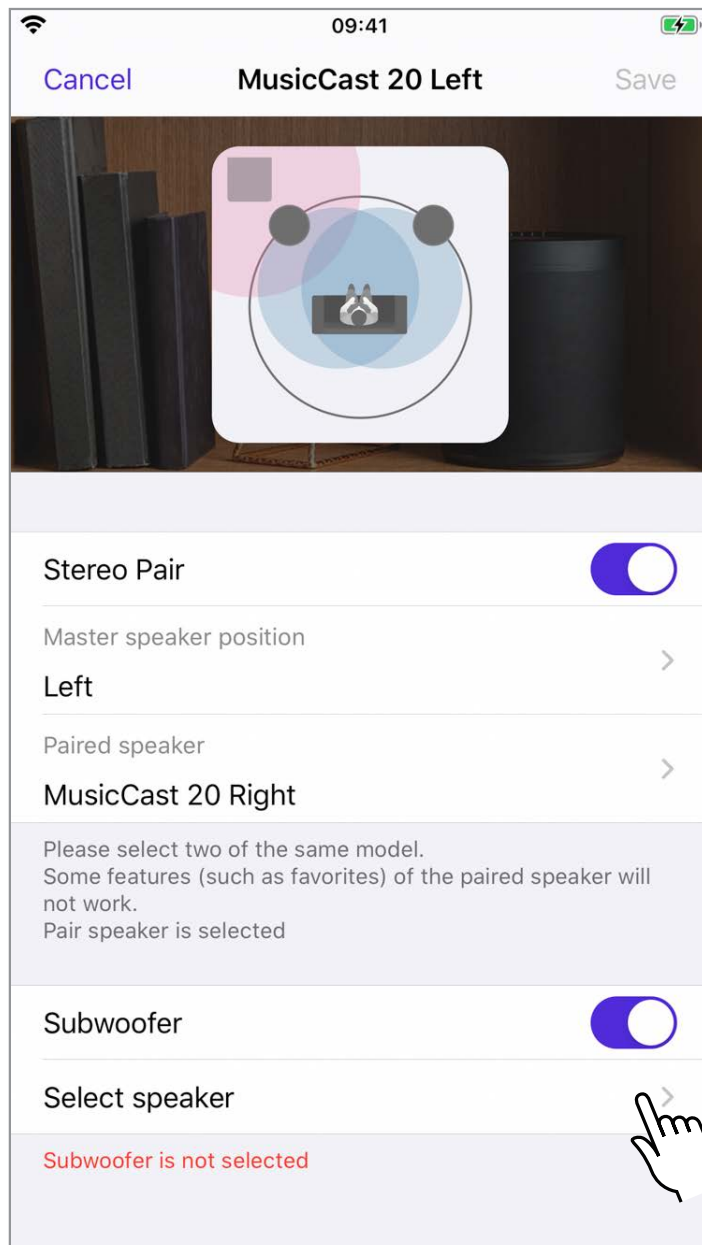

Step 12

MusicCast CONTROLLER App


Select desired subwoofer.

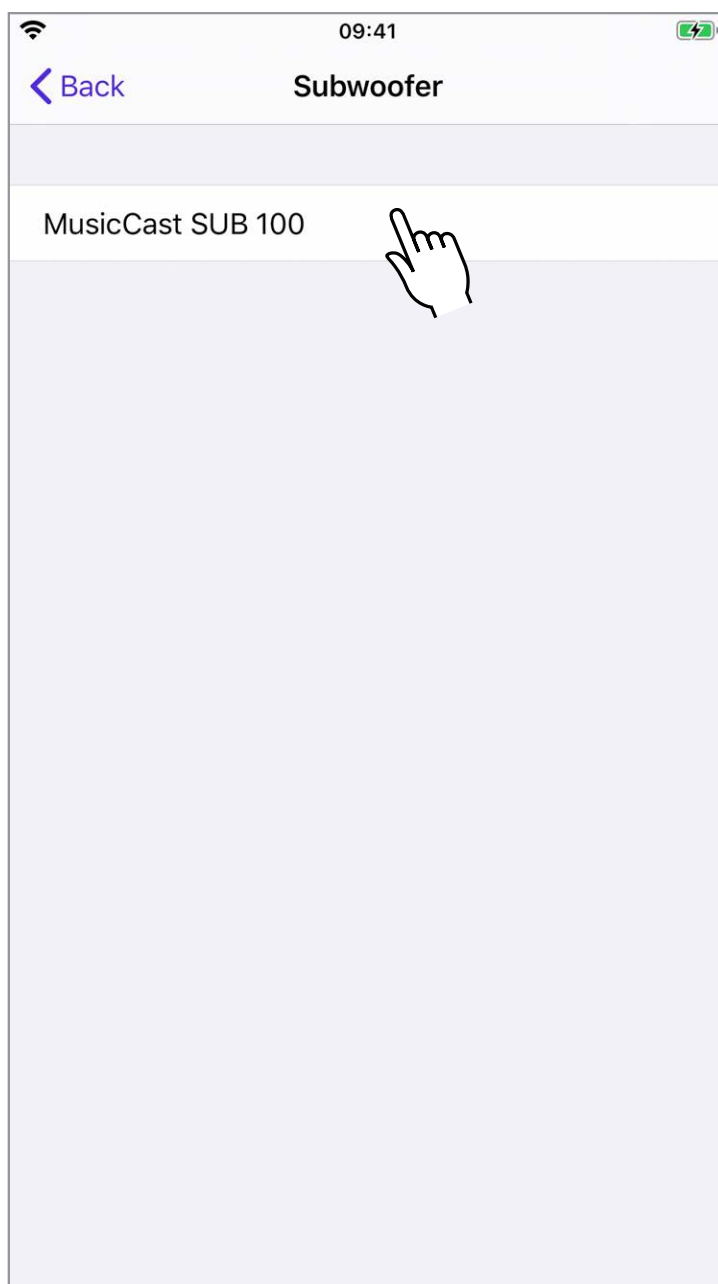

Step 13

MusicCast CONTROLLER App



Tap “Save.”

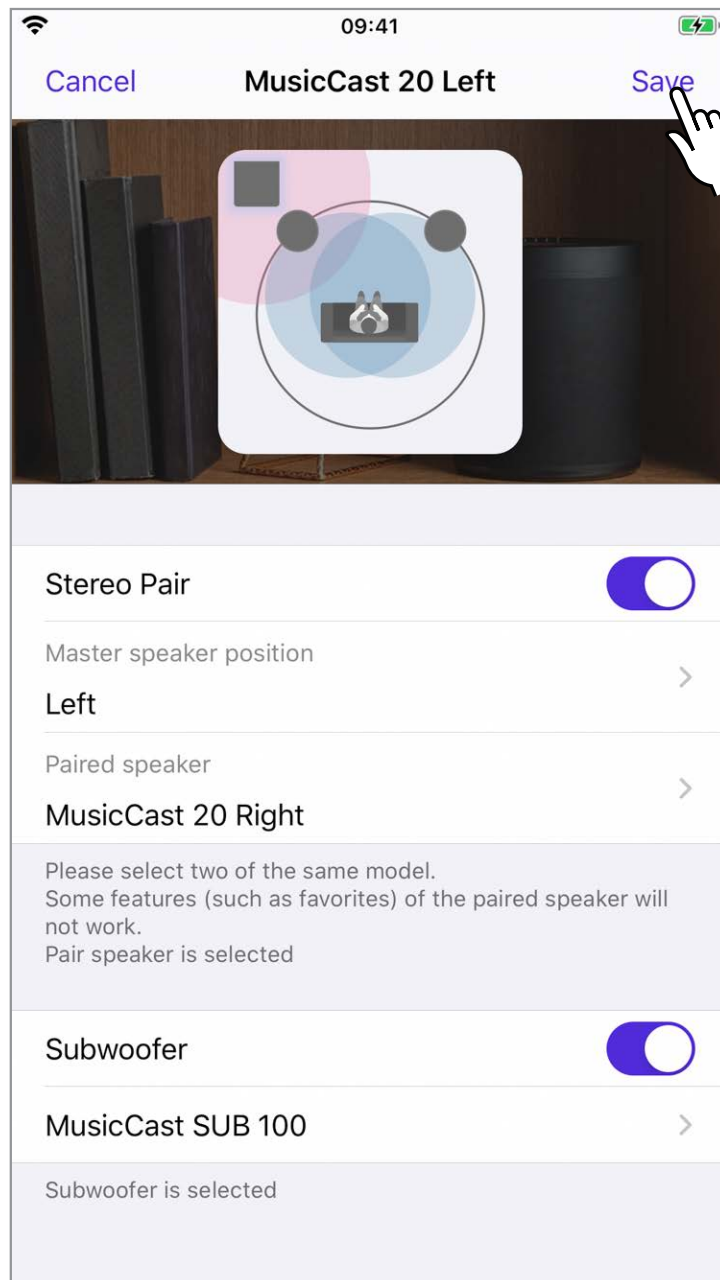

Step 14

MusicCast CONTROLLER App


Your setup will now begin establishing.
Tap OK upon Setup success.

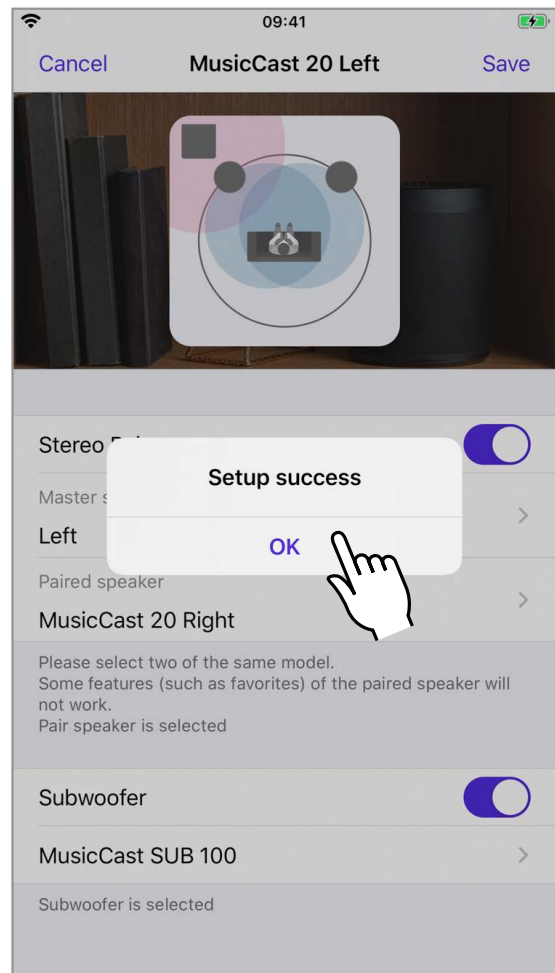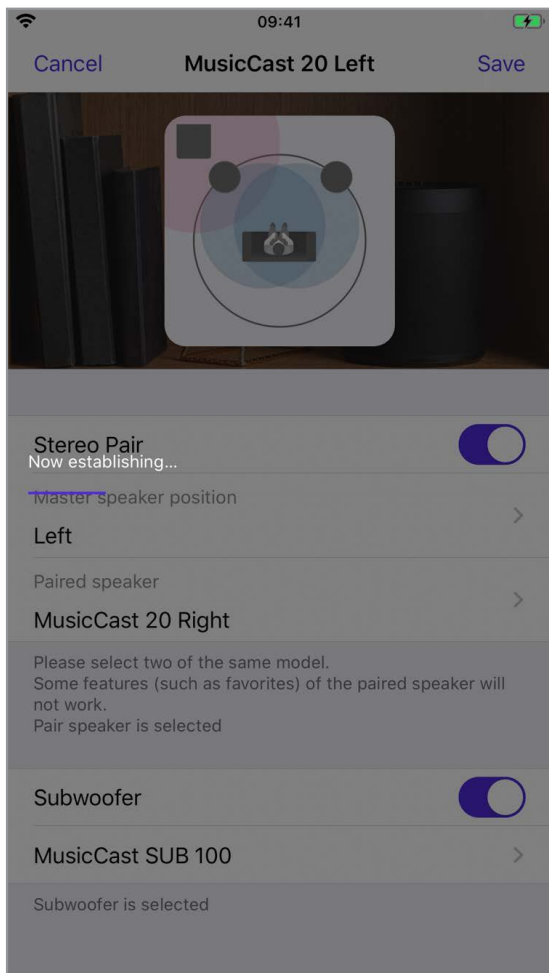

Step 15

MusicCast CONTROLLER App

Tap “Stereo” to close the setup screen.

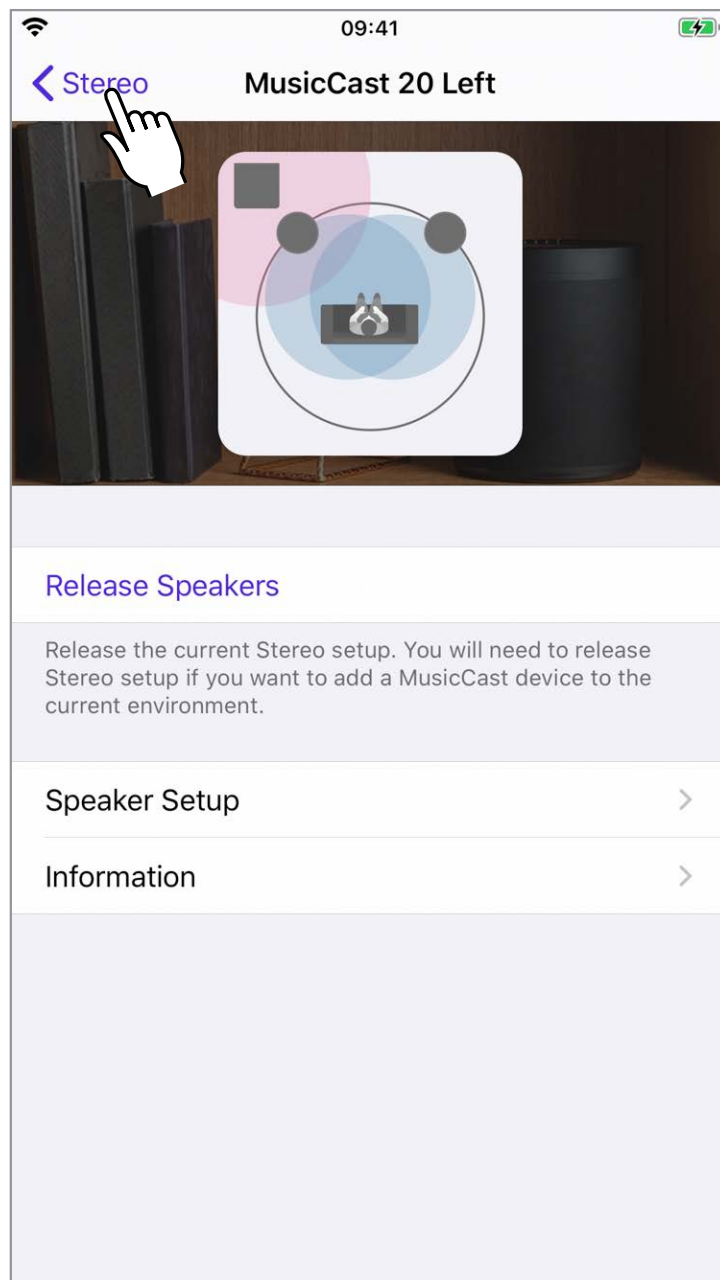


* To cancel the MusicCast Stereo settings, tap “Release Speakers”.

Step 16

MusicCast CONTROLLER App

Setup complete!

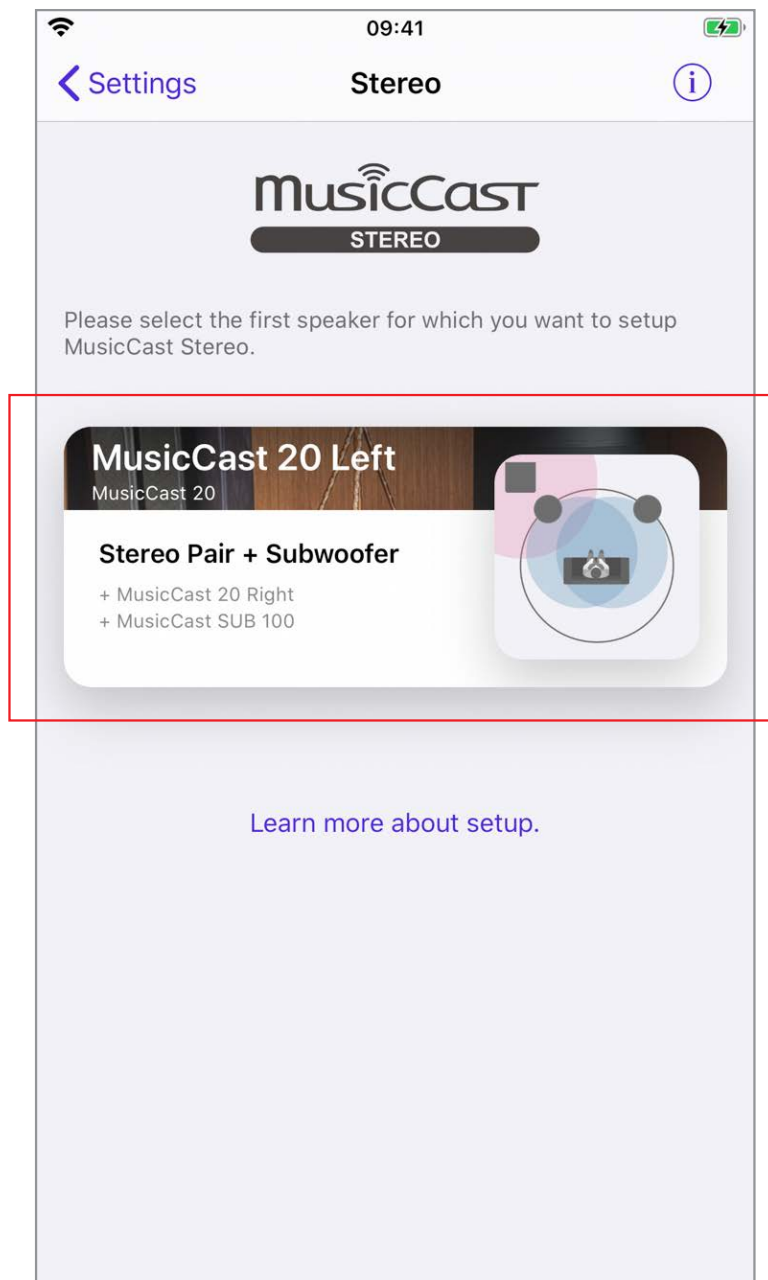

Error Message List (1/2)

If any of the following messages appear, check the solution details and try setting up again.

Message	Solution
Direct Connection Error	<p>The following suggestions may resolve the issue:</p> <ul style="list-style-type: none">• If there is an obstacle or object between MusicCast Surround/Stereo devices, try moving the device(s) to clear the signal path.• Reboot the device(s) by pressing "Reboot."
Device Status Error	<p>The following suggestion may resolve the issue:</p> <ul style="list-style-type: none">• Reboot the device(s) by pressing "Reboot".
Network Connection Error	<p>The following suggestions may resolve the issue:</p> <ul style="list-style-type: none">• Confirm if all devices are connected to the same access point.• Reboot router or access point.• Confirm if the Multicast setting of router or access point is enabled.• Check Wi-Fi signal strength. If the signal level is weak, try connecting to wired LAN.• Reboot the device(s) by pressing "Reboot."
Wireless Device Error	<p>The following suggestion may resolve the issue:</p> <ul style="list-style-type: none">• Reboot the device(s) by pressing "Reboot". <p>Contact Yamaha customer support if Reboot doesn't solve the problem.</p>
Wireless Channel Error	<p>The following suggestion may resolve the issue:</p> <ul style="list-style-type: none">• Reboot the device(s) by pressing "Reboot".• Reboot router or access point.


Error Message List (2/2)

Message	Solution
Internal Error	The following suggestion may resolve the issue: <ul style="list-style-type: none">• Reboot the device(s) by pressing “Reboot”.
Wi-Fi Setting Error	Wireless setting is disabled. Enable Wireless setting or connect all devices that are part of MusicCast Surround/Stereo to wired LAN. Once completed, set Link Control to “Speed Boost.”
Are you sure you want to reset MusicCast Surround/Stereo? This reset will not apply to any missing speaker(s).	This message may also appear if a device is detected that previously failed when canceling the MusicCast Surround/Stereo settings. Set up the device again as a new one by performing a reset according to the instructions in the message.

はじめに

1. MusicCast サラウンド (P43～59)


MusicCast サラウンド対応の AV レシーバーまたはサウンドバーに、対応のストリーミングスピーカーをサラウンドスピーカーとして使用して、ワイヤレスの 5.1ch システムを構築します。

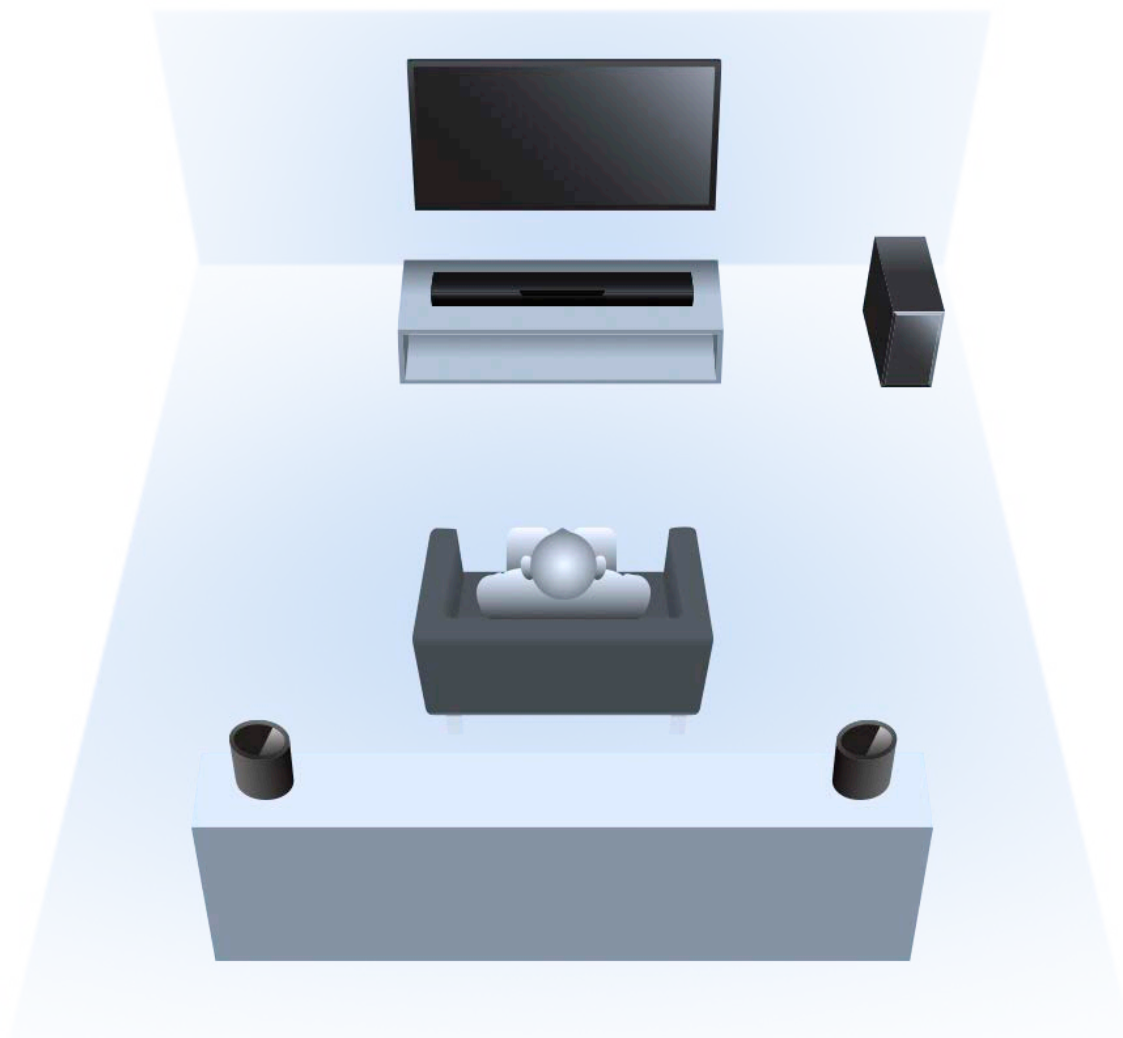

はじめに


2. MusicCast ステレオ (P60~75)

MusicCast ステレオ対応のストリーミングスピーカーを使用して、ワイヤレスの 2.1ch ステレオシステムを構築します。

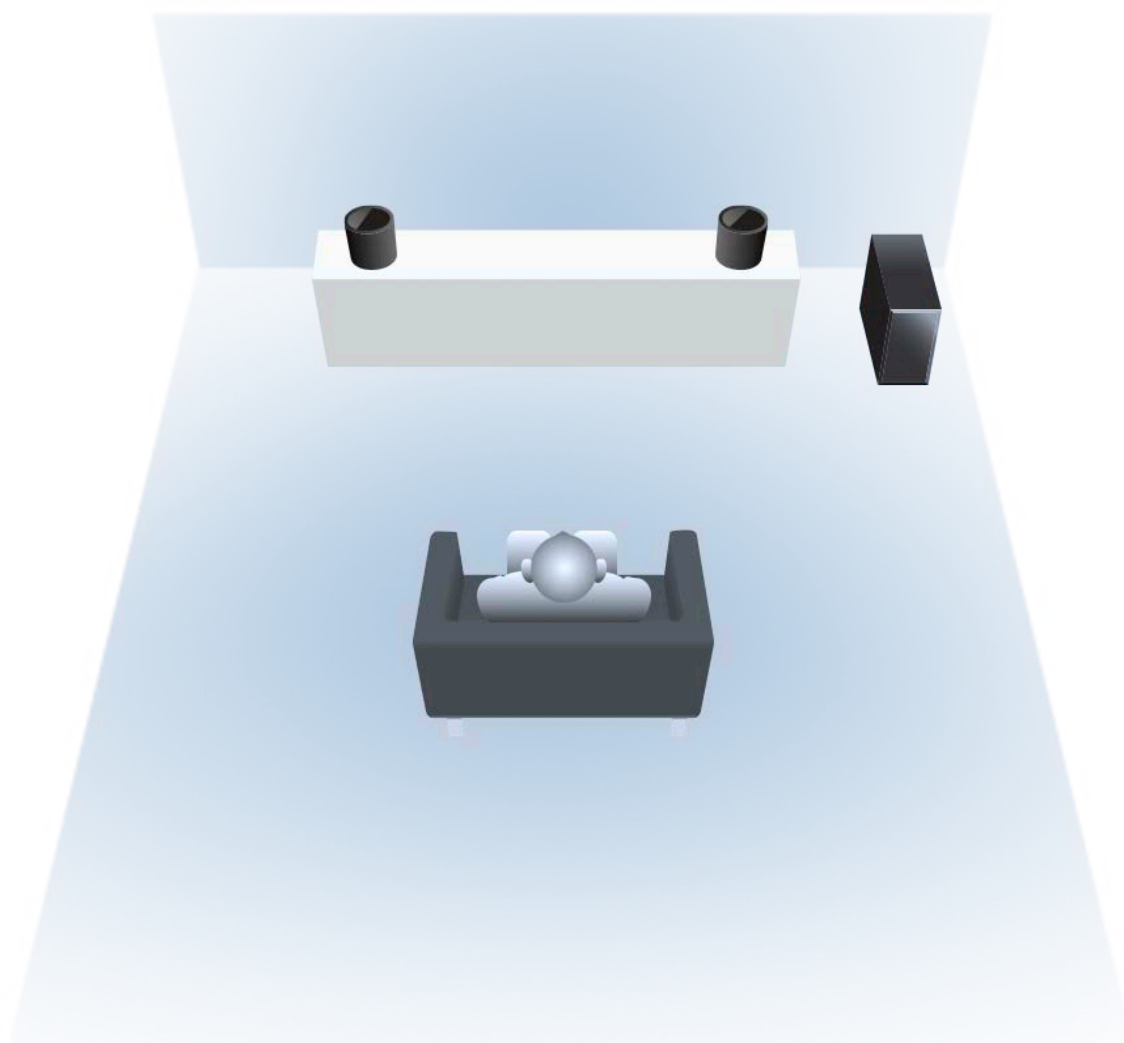


準備をする

1. MusicCast CONTROLLER アプリを最新のバージョンにアップデートする。

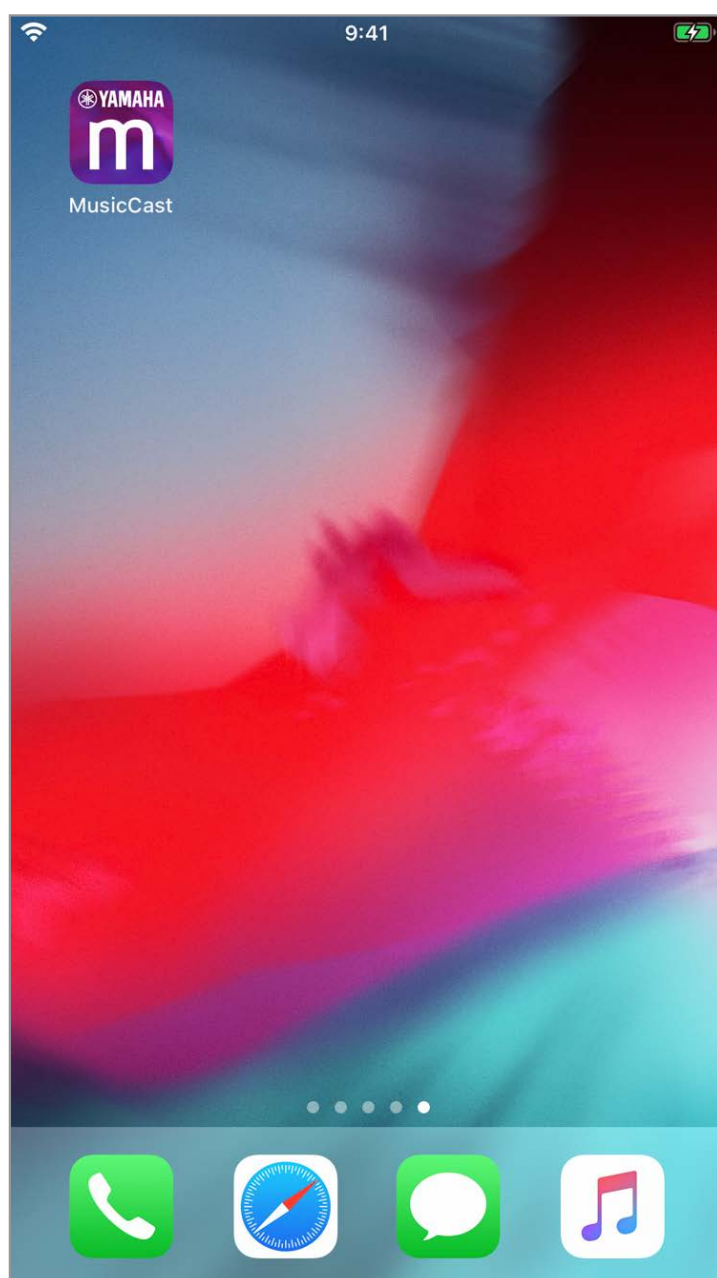

準備をする

2. 下記のようにすべての製品が同じロケーションに登録されていることを確認する。

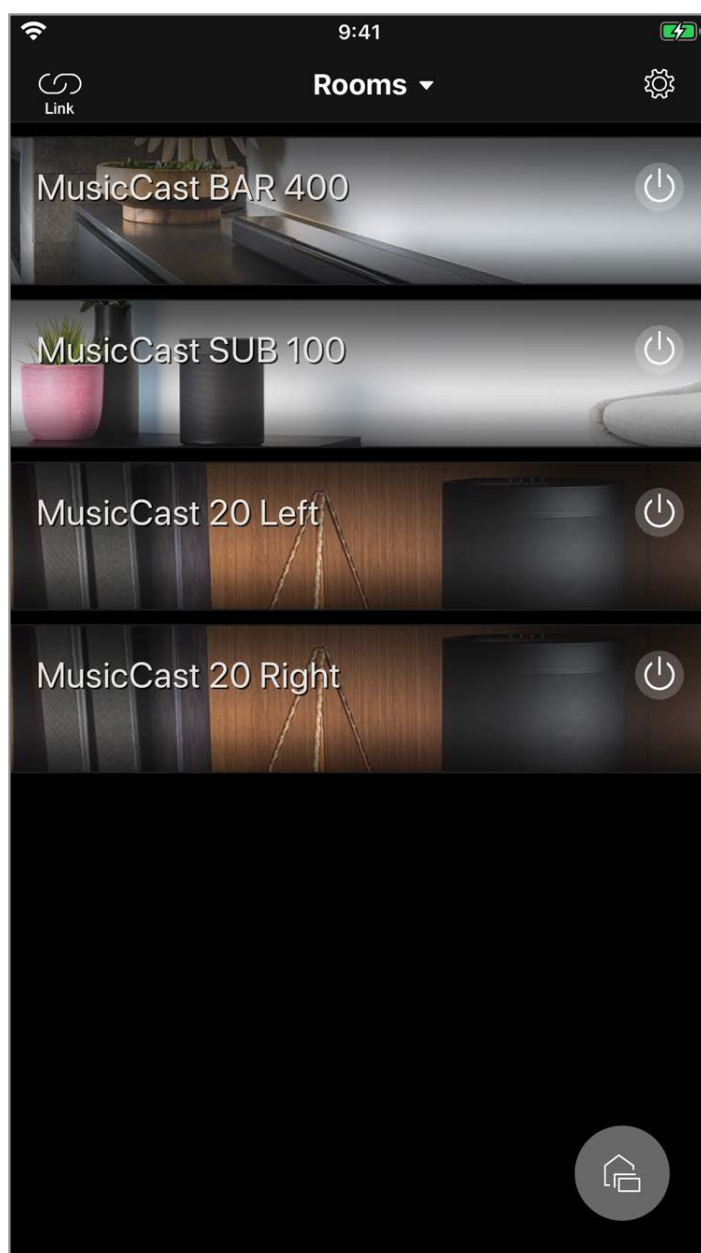


※ “Left” または “Right” など、事前に左右が区別できるように部屋の名前を登録することで、設定時の判別が簡単になります。

MusicCast サラウンドのセットアップ方法

Step 1

MusicCast CONTROLLER アプリ

MusicCast Controller アプリを開く。

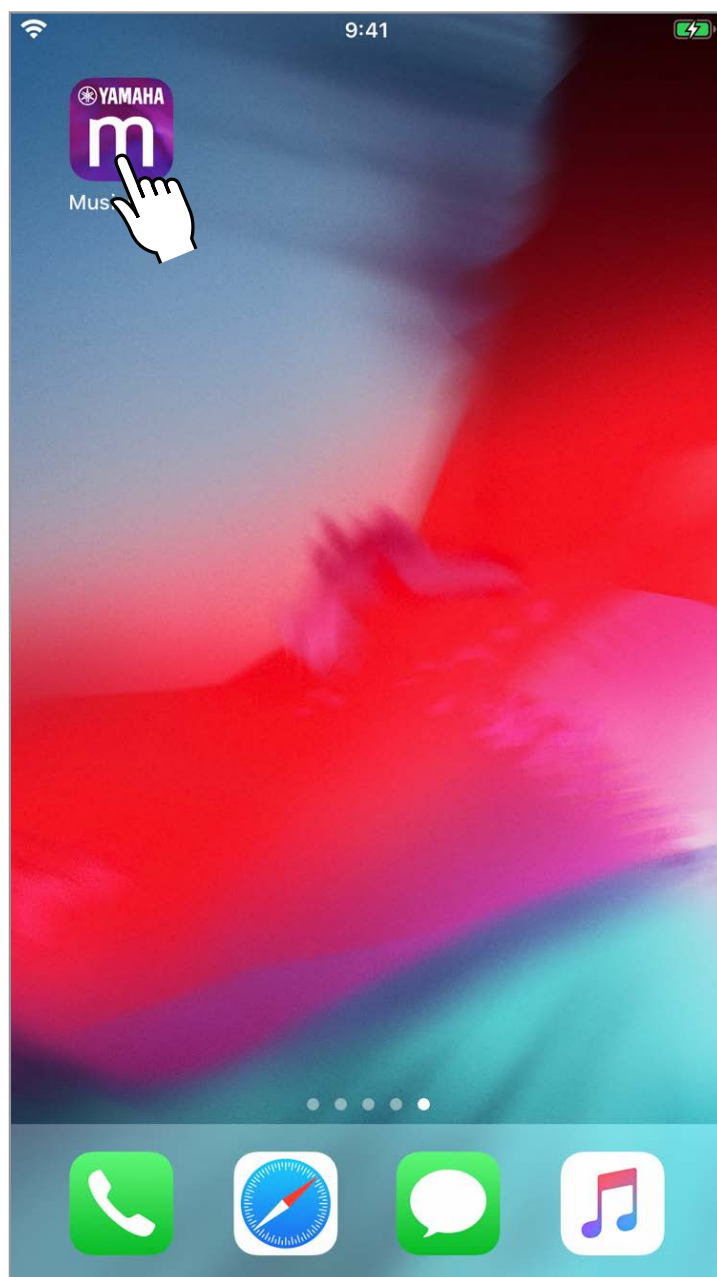


English

日本語

Step 2

MusicCast CONTROLLER アプリ

右上の設定ボタンをタップする。

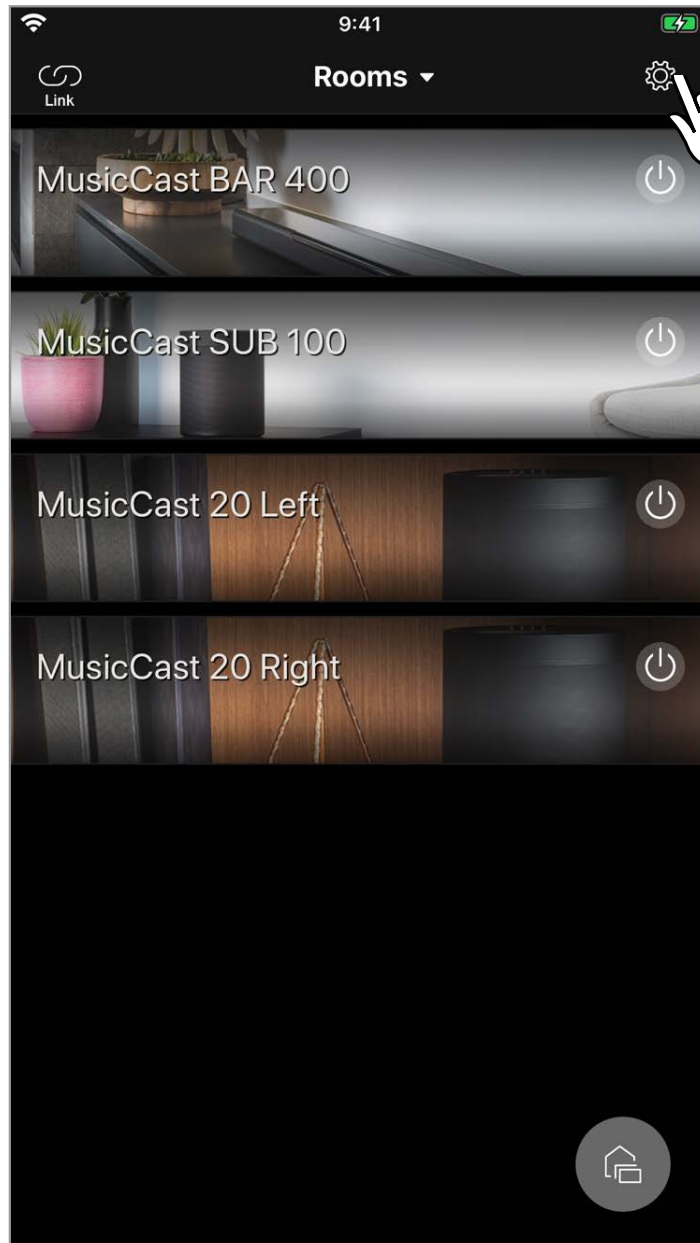

Step 3

MusicCast CONTROLLER アプリ


すべての機器が最新のファームウェアであることを確認する。下記メッセージが表示された場合、アップデートが必要なため、タップする。



Step 4

MusicCast CONTROLLER アプリ

“ サラウンド ” をタップする。

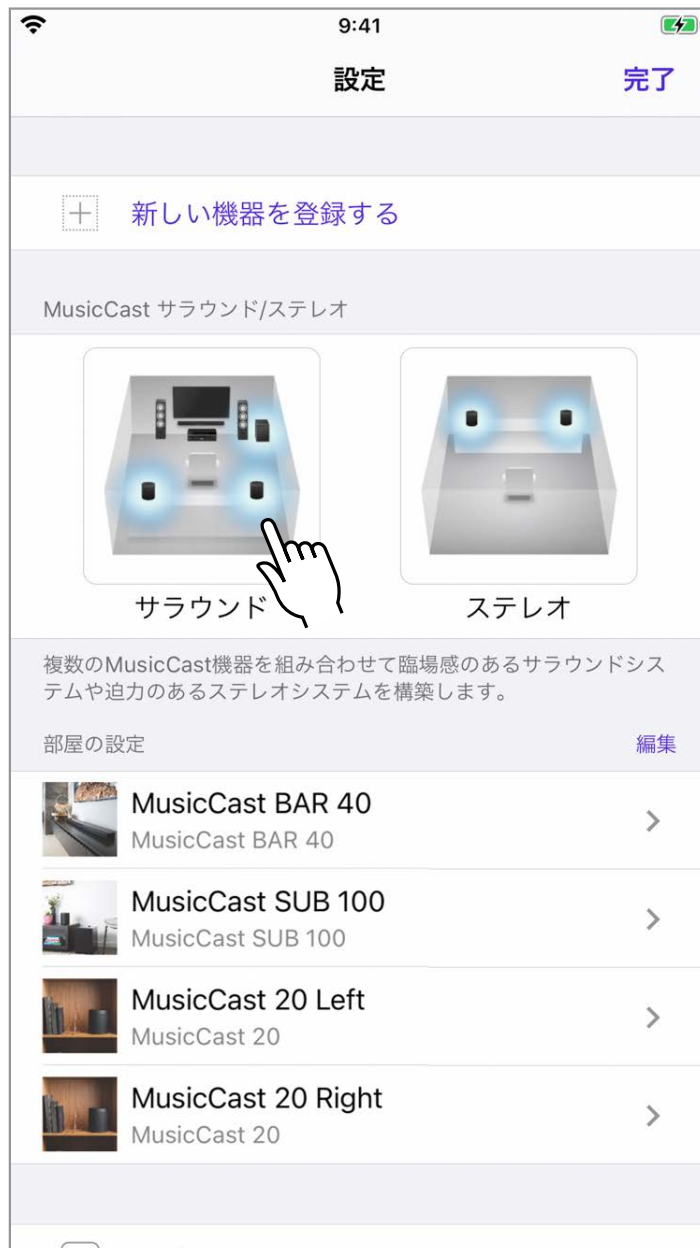

Step 5

MusicCast CONTROLLER アプリ

MusicCast サラウンドを組むときのフロントになる機器を選択する。



Step 6

MusicCast CONTROLLER アプリ

“ セットアップする ” をタップする。



Step 7

MusicCast CONTROLLER アプリ

“サラウンドスピーカー”をタップし、有効にする。



Step 8

MusicCast CONTROLLER アプリ


画面表示に従って、スピーカーの台数とサラウンドスピーカーを設定する。



Step 9

MusicCast CONTROLLER アプリ



事前に MusicCast ネットワークに登録したサラウンドスピーカー左に使用する機器の名前をタップする。

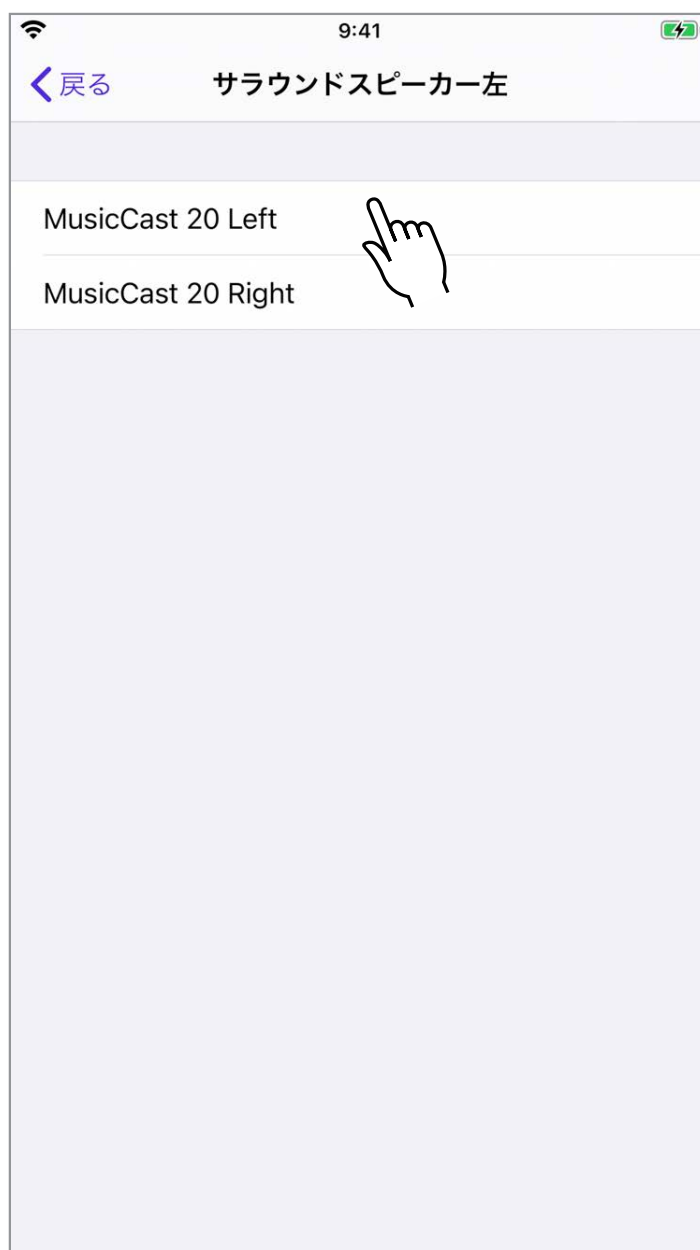

Step 10

MusicCast CONTROLLER アプリ


同様の手順でサラウンドスピーカー右を設定する。

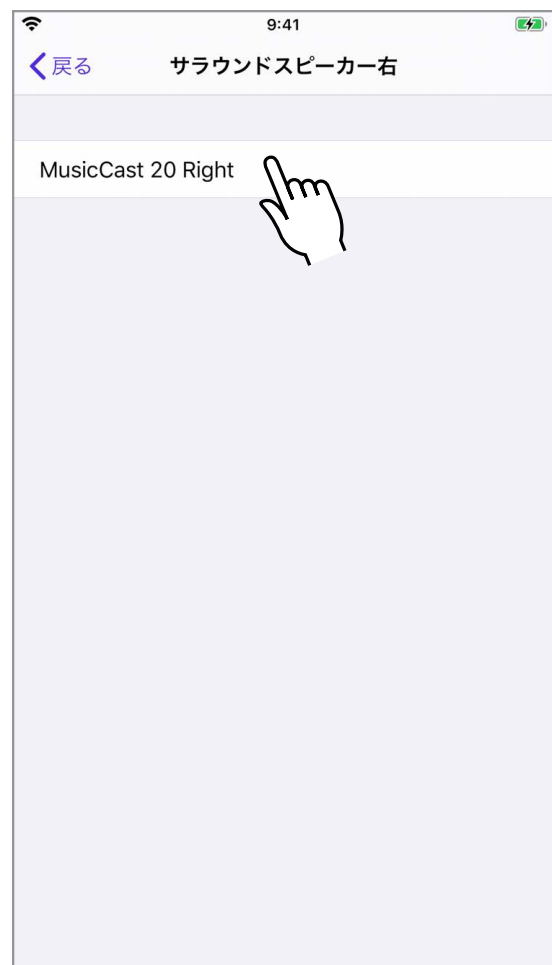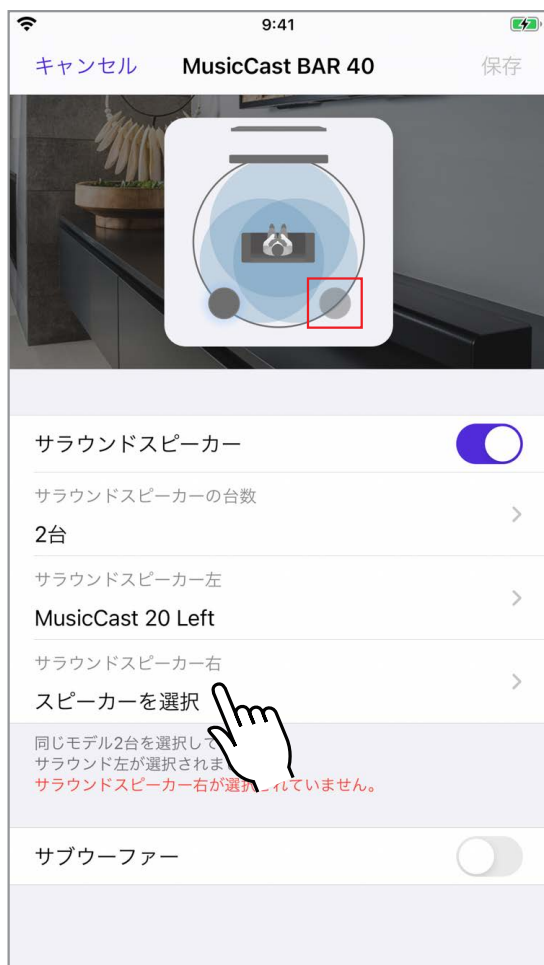

Step 11

MusicCast CONTROLLER アプリ

“サブウーファー”をタップし、MusicCast サラウンド / ステレオ対応サブウーファーを設定する。

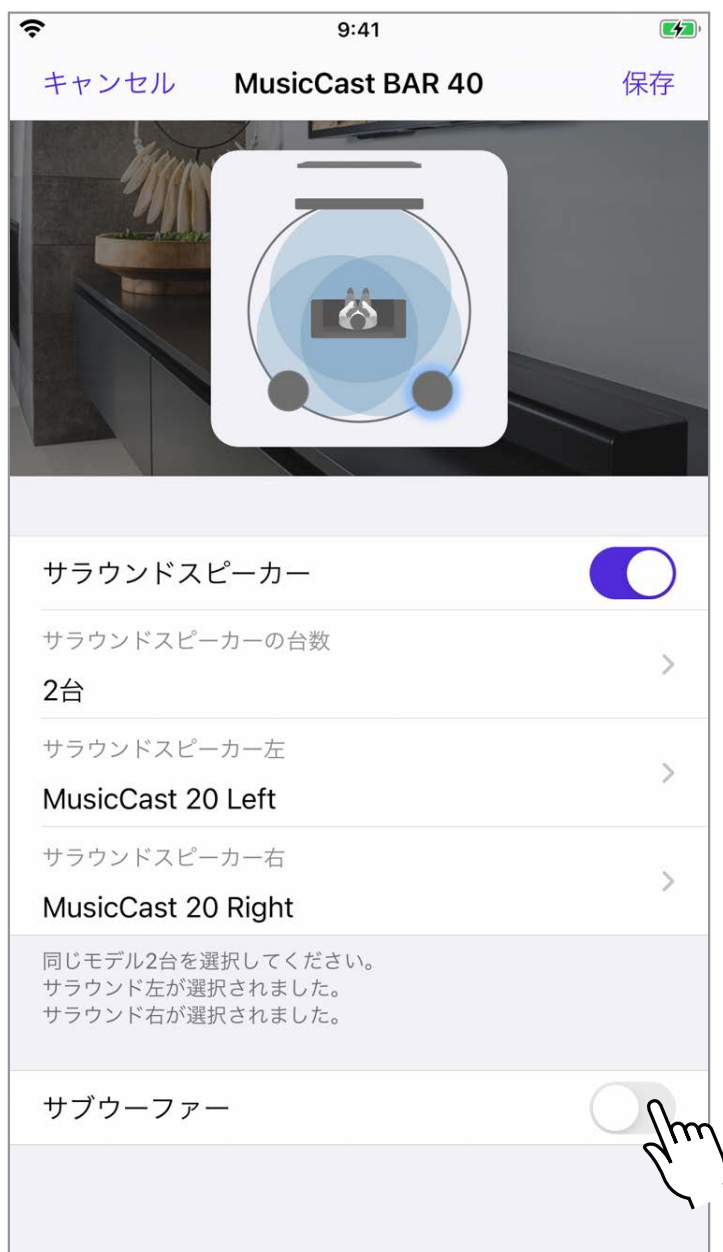


※画像内の●部分をタップすると、対応する機器本体のLEDが点灯します。この操作により、どのスピーカーがどの位置に設定されたか、機器を見ながら確認できます。

Step 12

MusicCast CONTROLLER アプリ


“スピーカーを選択”をタップする。

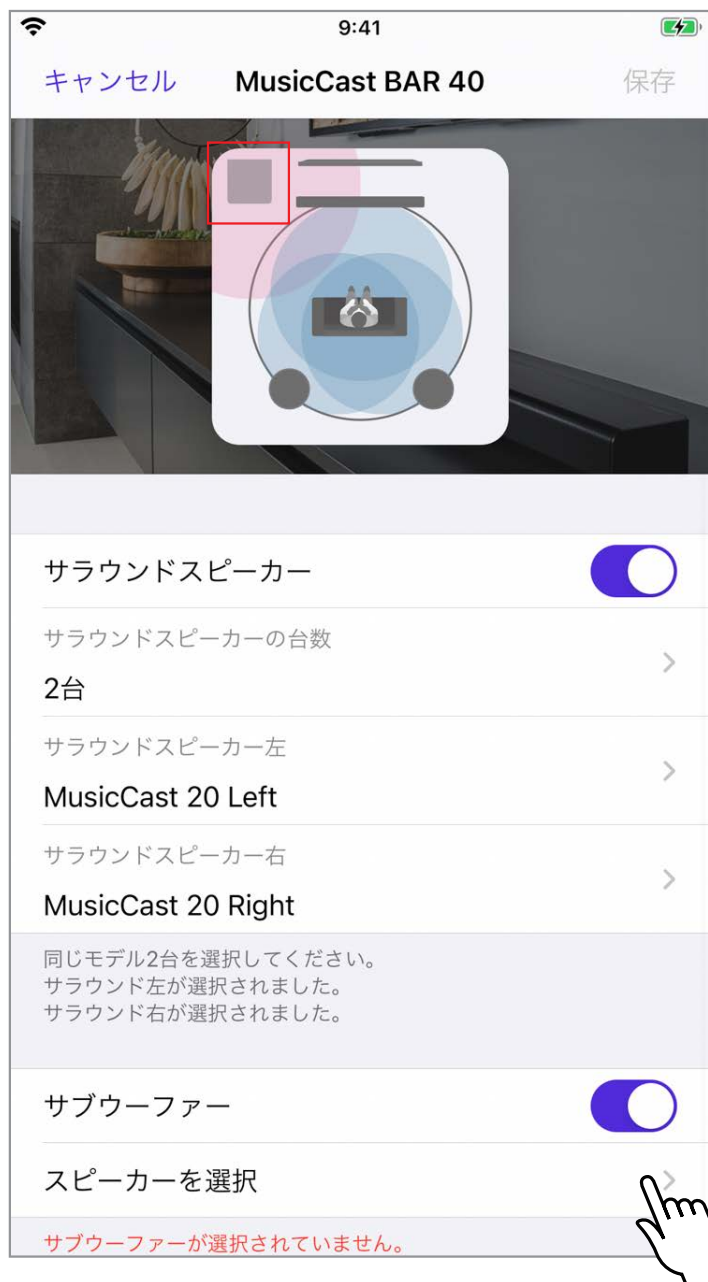

Step 13

MusicCast CONTROLLER アプリ


事前に MusicCast ネットワークに登録した機器を選択する。

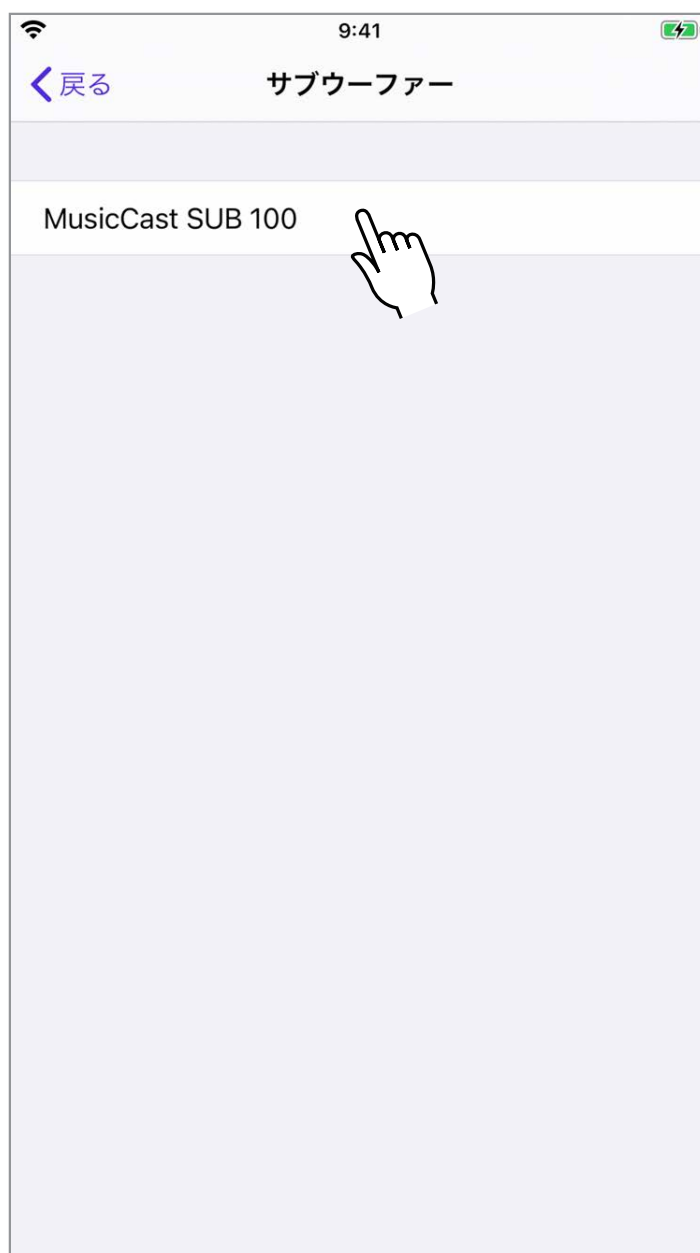

Step 14

MusicCast CONTROLLER アプリ



“保存”をタップして設定を完了する。

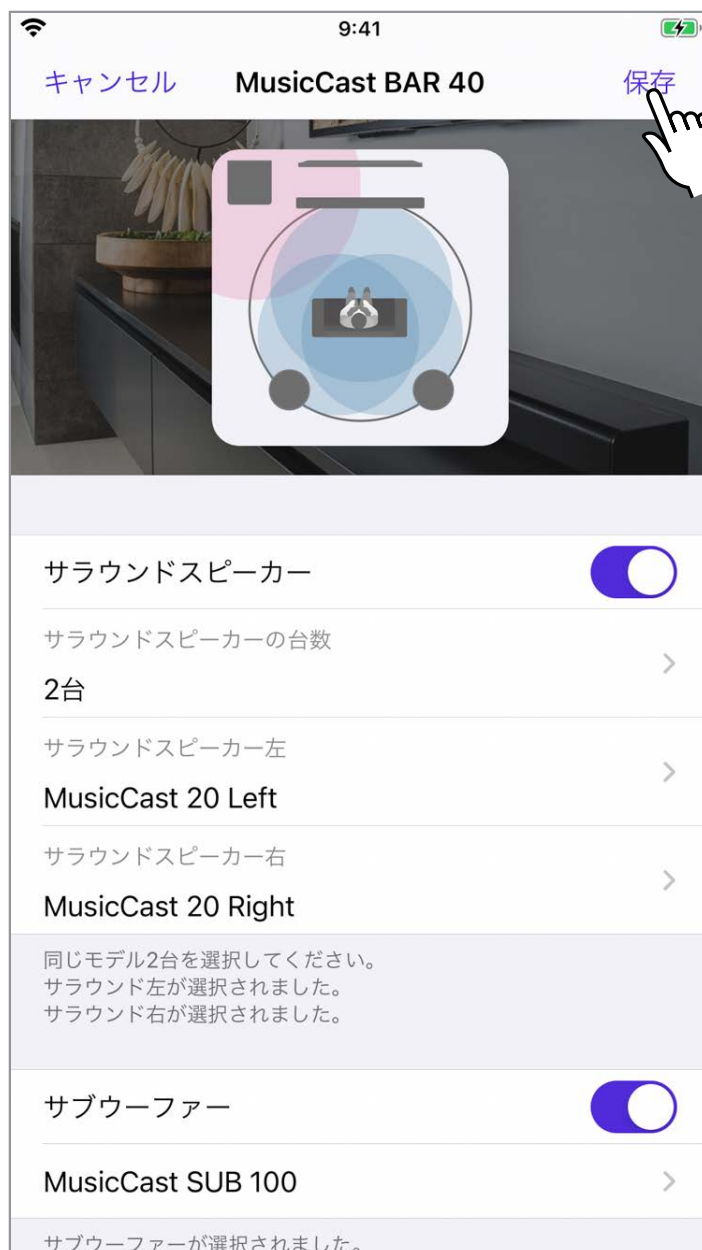

Step 15

MusicCast CONTROLLER アプリ

設定の保存が完了したら、“OK” をタップする。

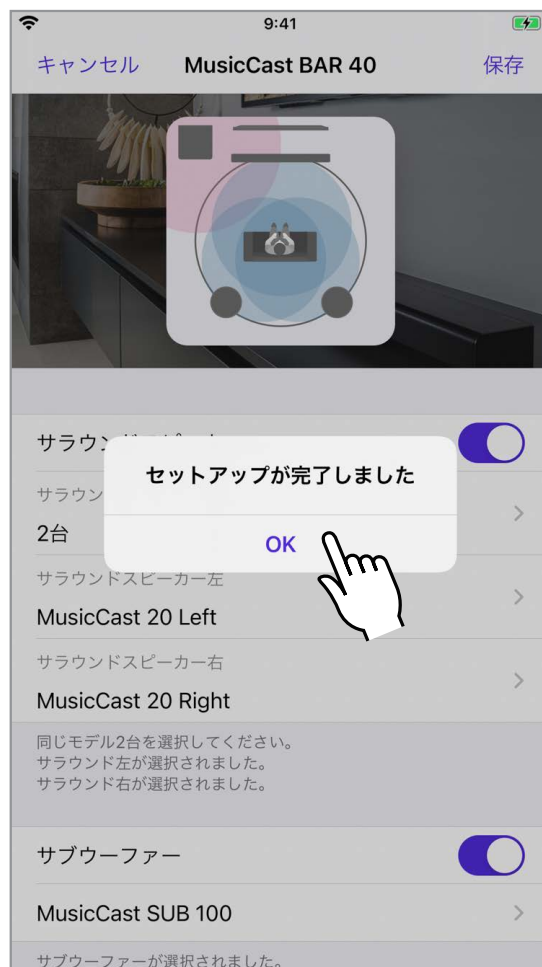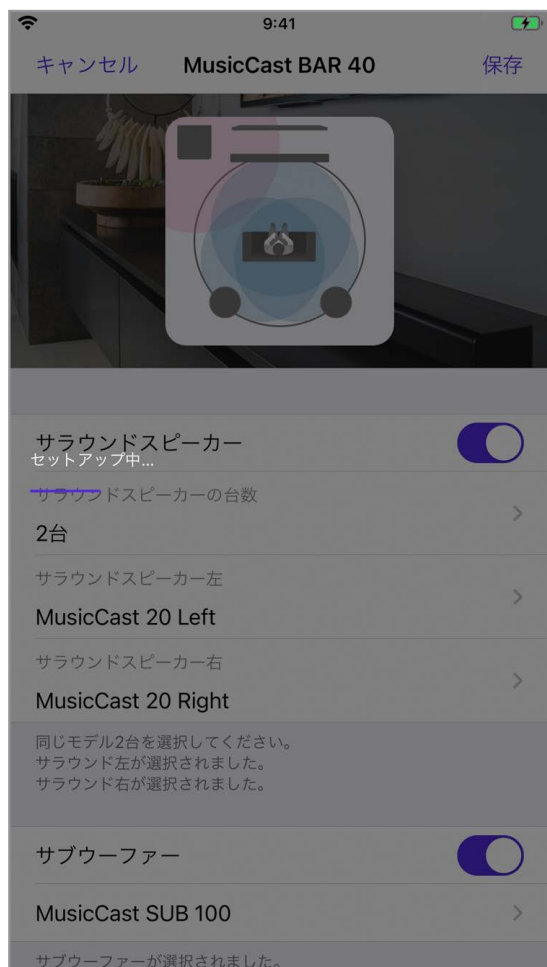

Step 16

MusicCast CONTROLLER アプリ

“ サラウンド ” をタップして設定画面を閉じる。



※ MusicCast サラウンドの設定を解除するには、「解除する」をタップします。

Step 17

MusicCast CONTROLLER アプリ

設定が完了し、構築されたシステムが表示される。




※臨場感を増すために、お持ちのテレビやプレーヤーの音声出力設定をビットストリームに設定することをおすすめします。
(機器によってはビットストリームではなく、別の表現の場合があります。)

MusicCast ステレオのセットアップ方法

Step 1

MusicCast CONTROLLER アプリ


MusicCast Controller アプリを開く。

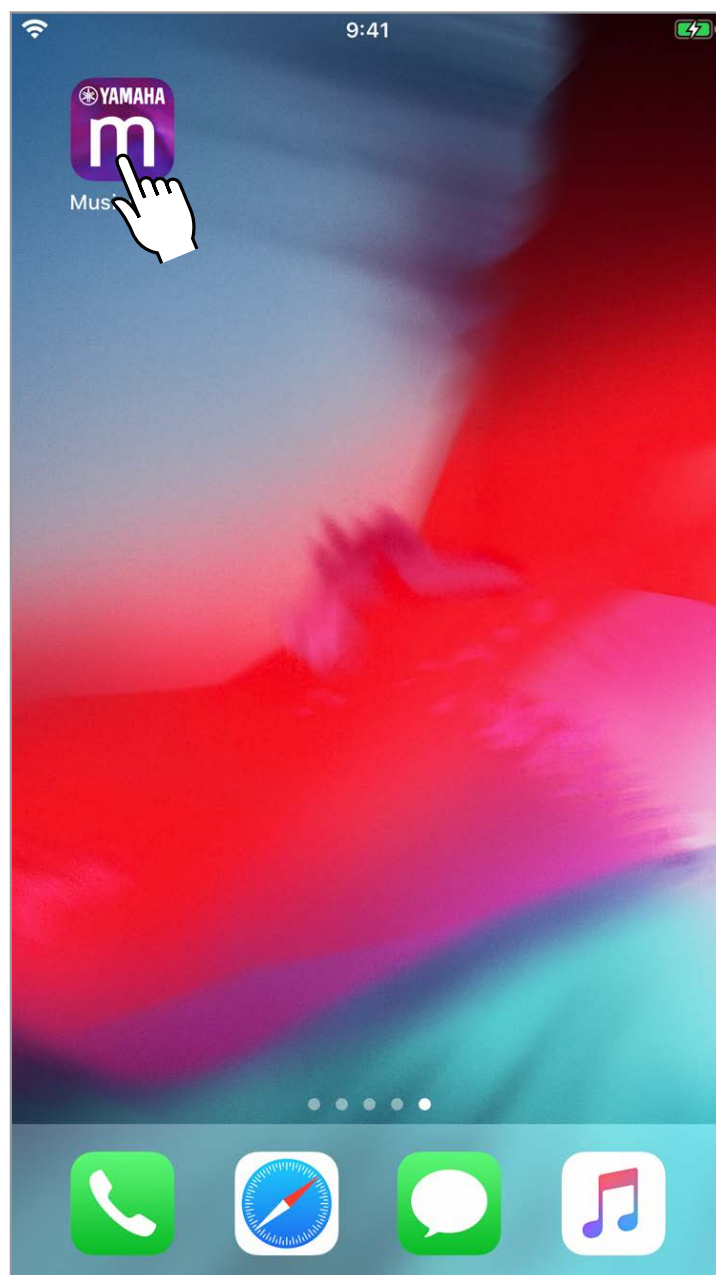

Step 2

MusicCast CONTROLLER アプリ

右上の設定ボタンをタップする。

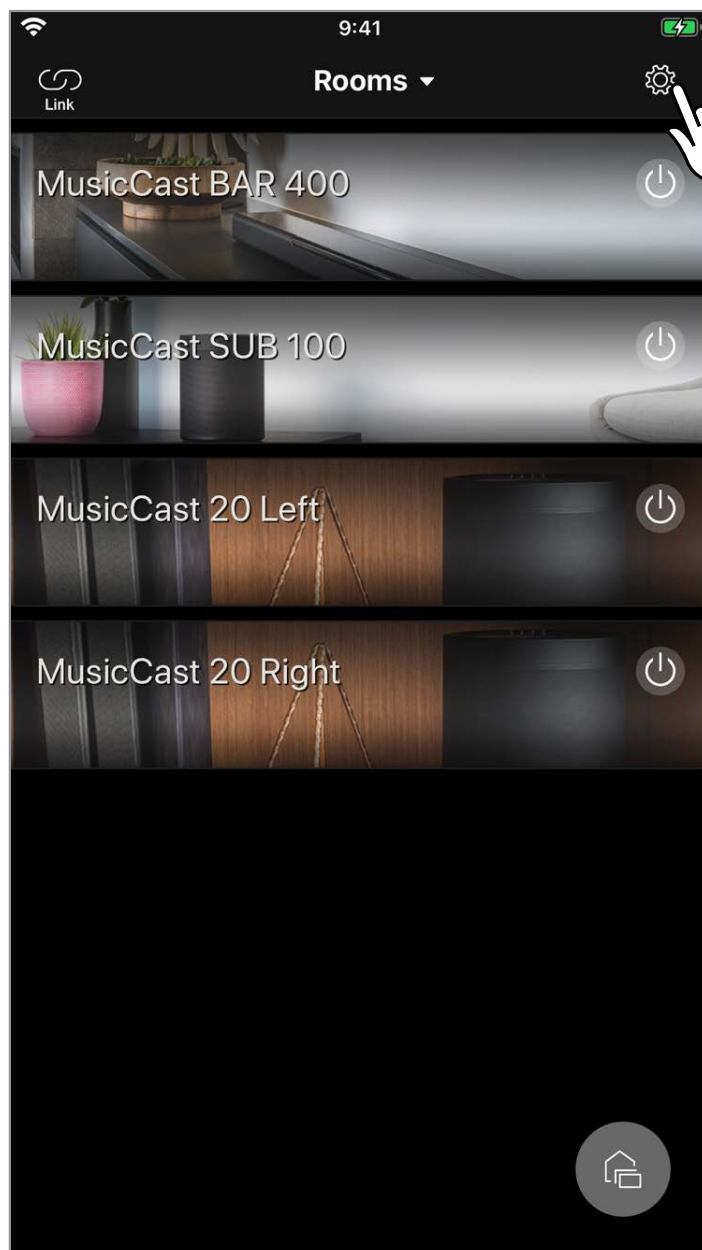

Step 3

MusicCast CONTROLLER アプリ


すべての機器が最新のファームウェアであることを確認する。下記メッセージが表示された場合、アップデートが必要なため、タップする。



Step 4

MusicCast CONTROLLER アプリ

“ステレオ”をタップする。

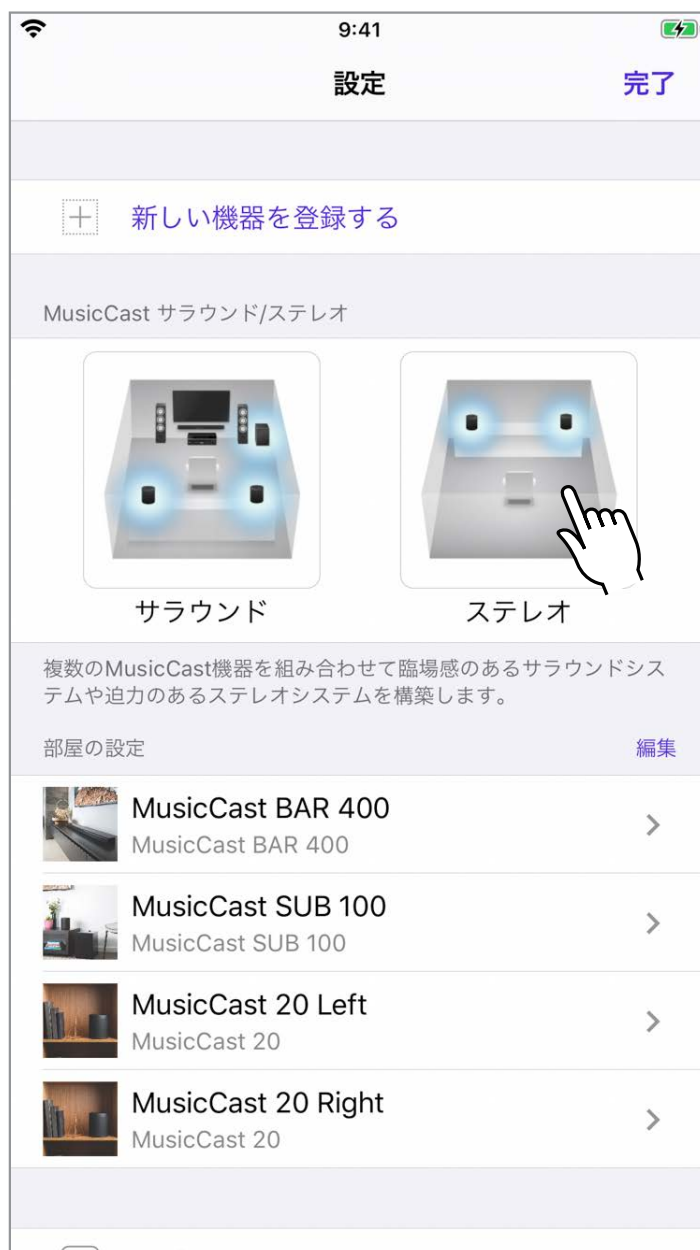

Step 5

MusicCast CONTROLLER アプリ

MusicCast ステレオを組む時のメインとなる機器を選択する。



Step 6

MusicCast CONTROLLER アプリ

“ セットアップする ” をタップ。



Step 7

MusicCast CONTROLLER アプリ

“ステレオペア” をタップし、有効にする。



Step 8

MusicCast CONTROLLER アプリ


設定している機器の位置を確認し、“スピーカーを選択”をタップして逆の位置にあるスピーカーを設定する。



Step 9

MusicCast CONTROLLER アプリ


事前に MusicCast ネットワークに登録したステレオペアで使用する機器を選択する。

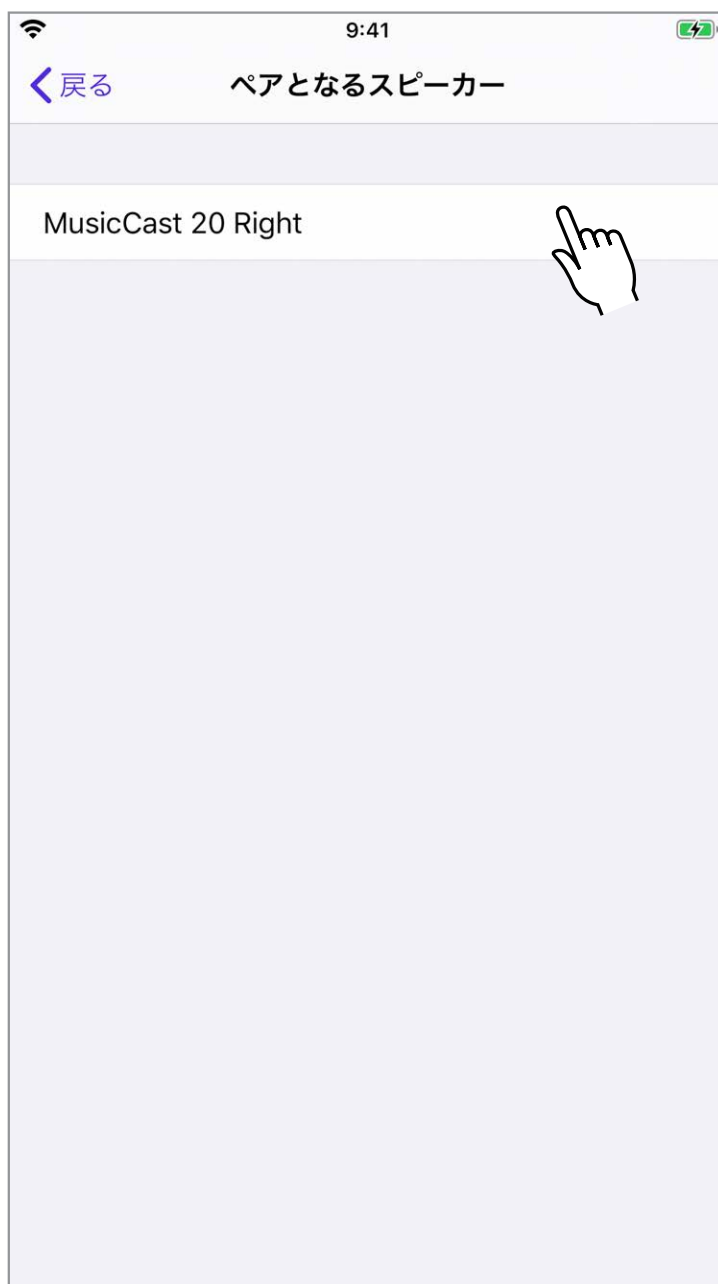

Step 10

MusicCast CONTROLLER アプリ

“サブウーファー”をタップし、MusicCast サラウンド / ステレオ対応サブウーファーを設定する。

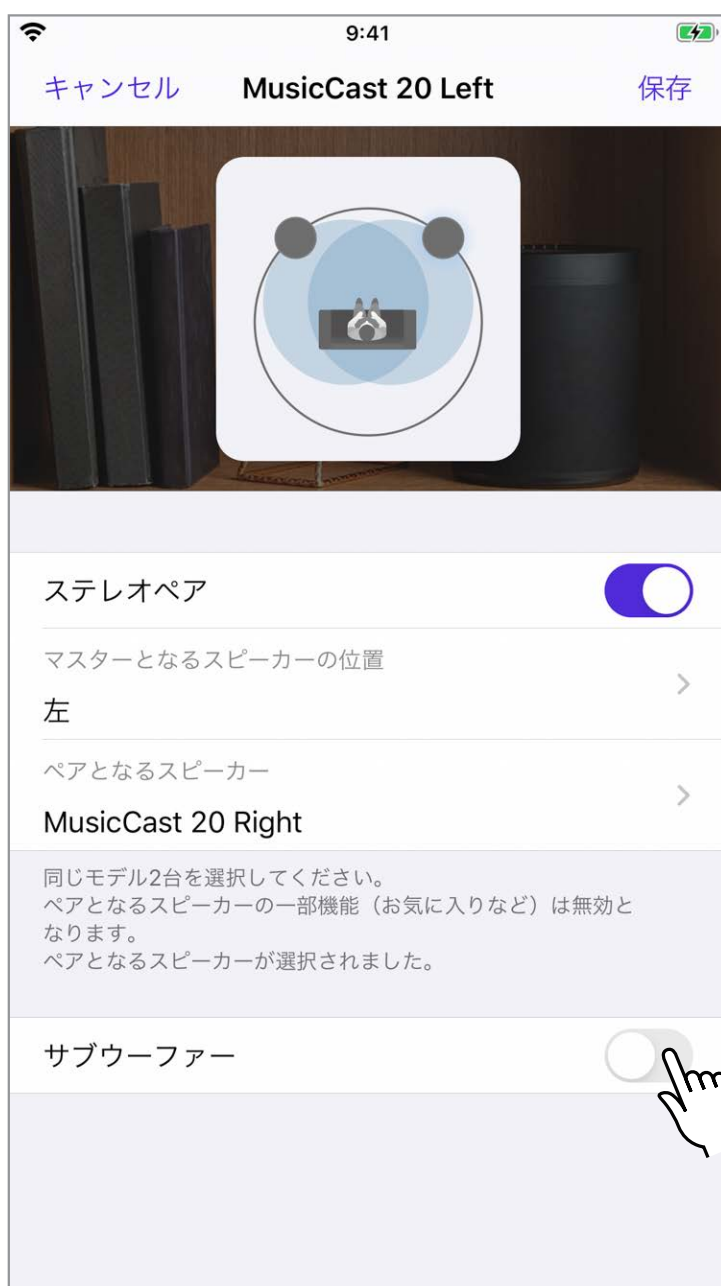


※画像内の●部分をタップすると、対応する機器本体のLEDが点灯します。この操作により、どのスピーカーがどの位置に設定されたか、機器を見ながら確認できます。

Step 11

MusicCast CONTROLLER アプリ


“スピーカーを選択”をタップする。

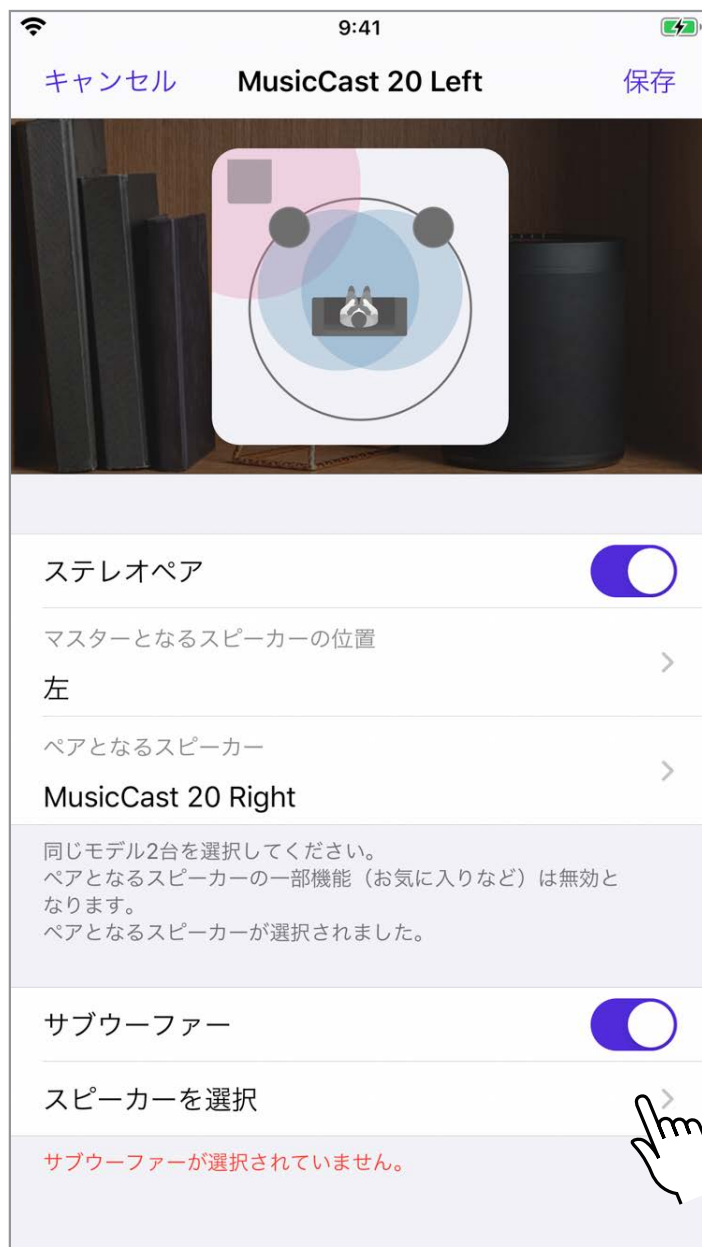

Step 12

MusicCast CONTROLLER アプリ


事前に MusicCast ネットワークに登録した機器を選択する。

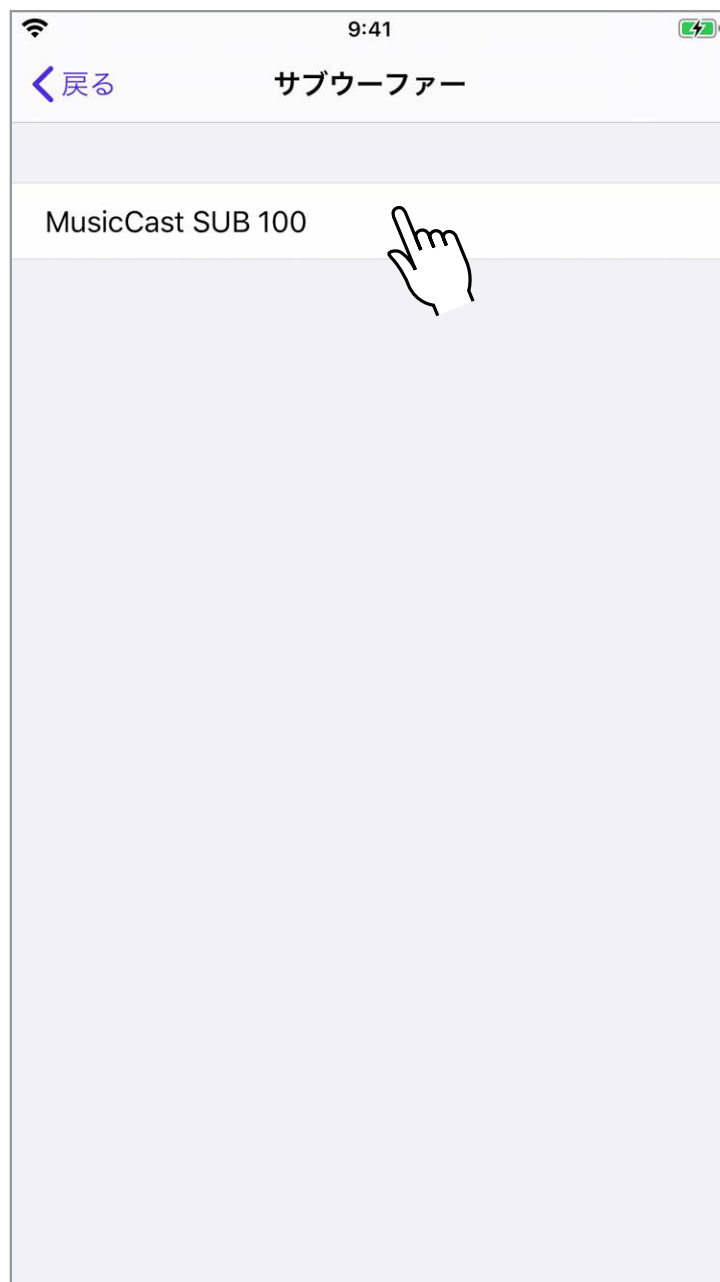

Step 13

MusicCast CONTROLLER アプリ



“保存”をタップして設定を完了する。

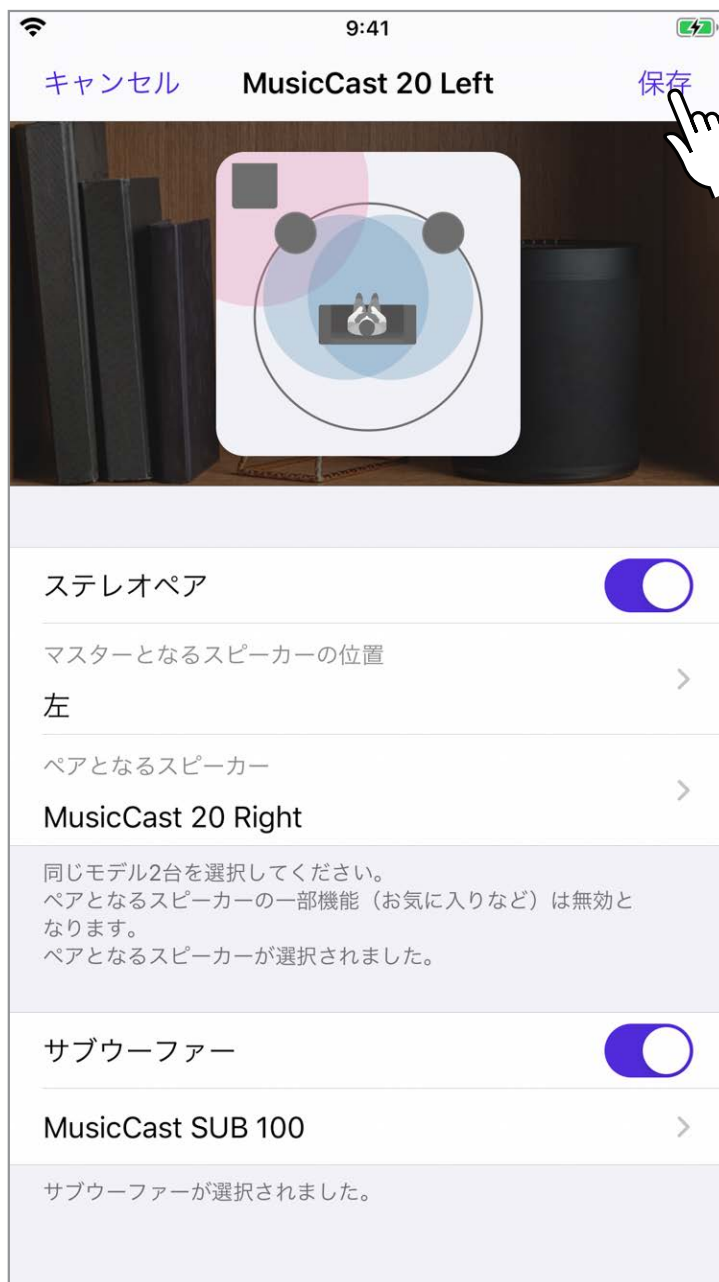

Step 14

MusicCast CONTROLLER アプリ

設定の保存が完了したら、“OK” をタップする。

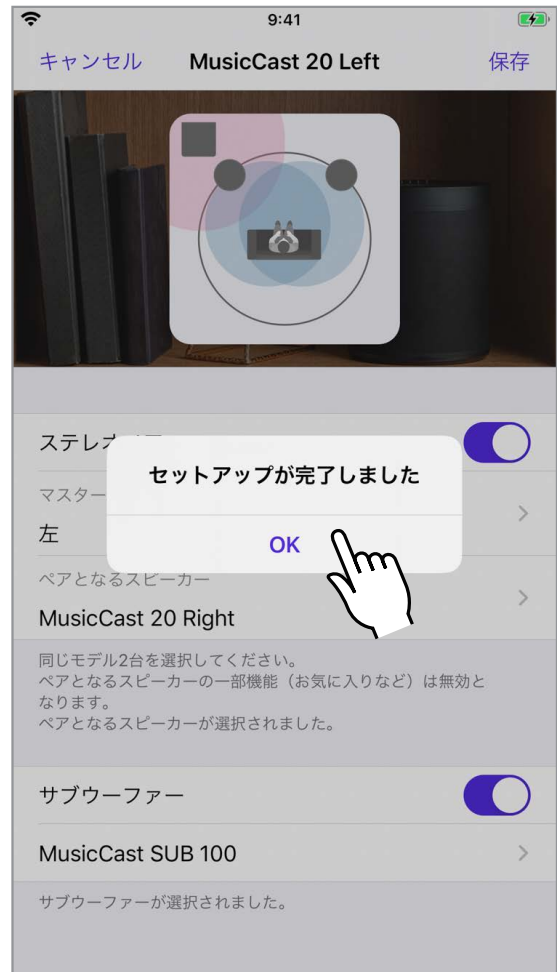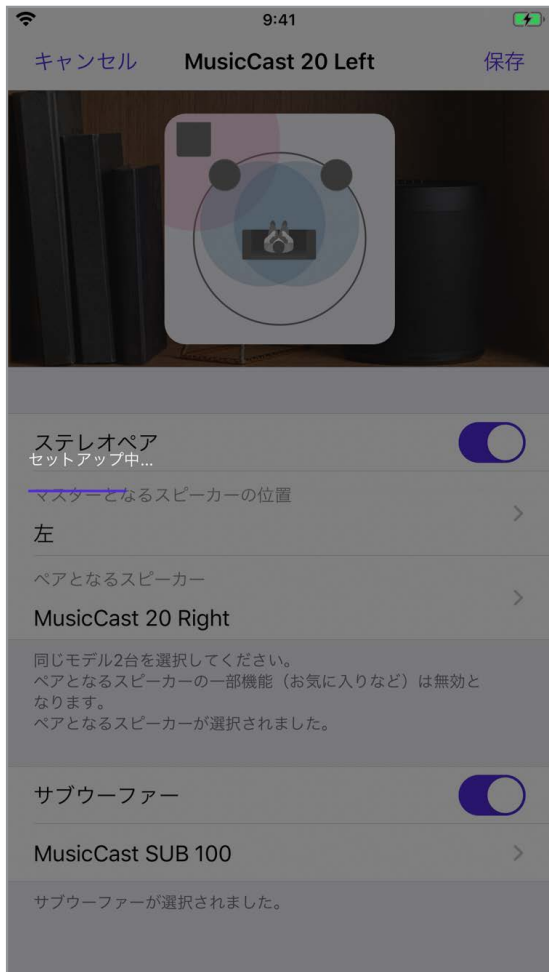

Step 15

MusicCast CONTROLLER アプリ

“ステレオ” をタップして設定画面を閉じる。




※ MusicCast ステレオの設定を解除するには、「解除する」をタップします。

Step 16

MusicCast CONTROLLER アプリ

設定が完了し、構築されたシステムが表示される。

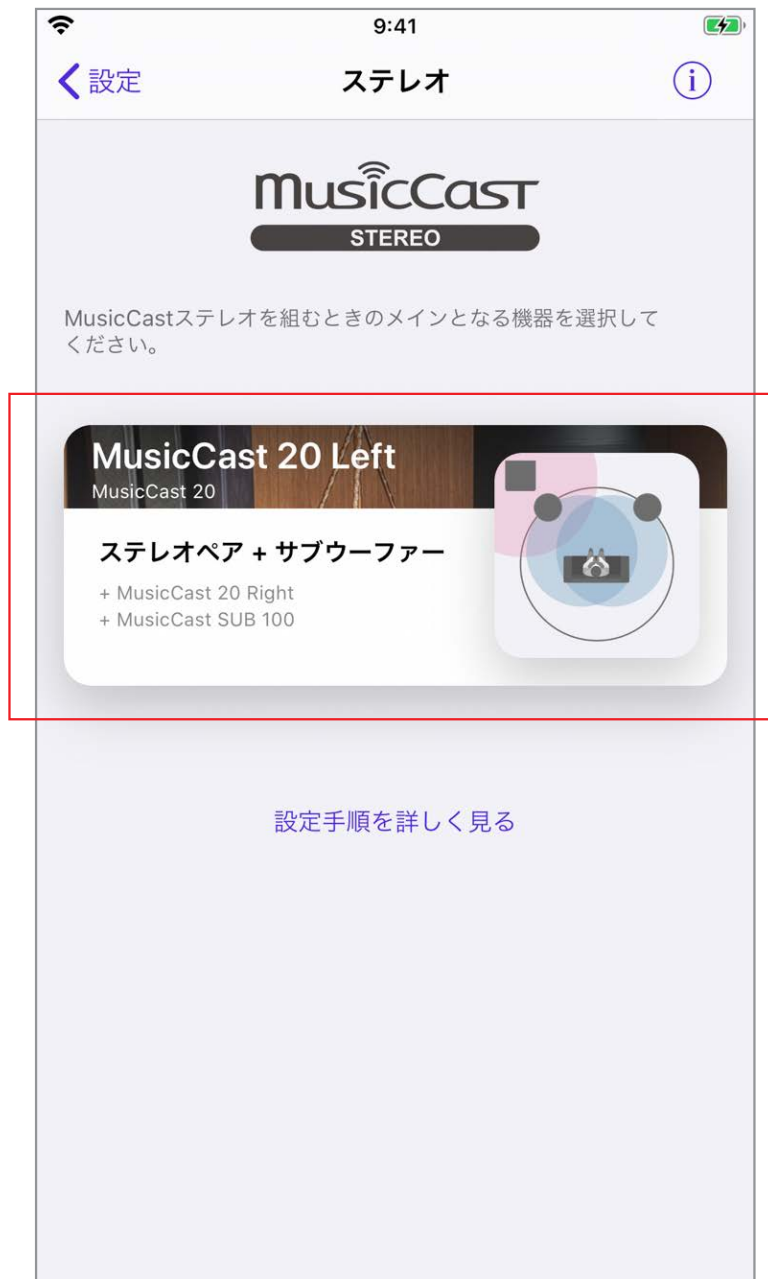

エラーメッセージ一覧 (1/2)

次のようなメッセージが表示された場合は、対策の内容をご確認いただき、再度設定を行ってください。

メッセージ	対策
ダイレクト接続失敗	以下のいずれかの方法で問題が解消される可能性があります。 <ul style="list-style-type: none">・ MusicCast Surround/Stereo を構築する機器間に障害物がないか確認し、障害物がある場合は機器の場所を移動してください。・ 再起動ボタンを押して該当機器を再起動し、再度お試しください。
機器状態異常エラー	以下の方法で問題が解消される可能性があります。 <ul style="list-style-type: none">・ 再起動ボタンを押して該当機器を再起動し、再度お試しください。
ネットワーク接続失敗	以下のいずれかの方法で問題が解消される可能性があります。 <ul style="list-style-type: none">・ すべての機器が同じアクセスポイントに接続されているかご確認ください。・ ルーターやアクセスポイントの再起動をお試しください。・ ルーターやアクセスポイントのマルチキャスト設定が有効になっているかご確認ください。・ 無線 LAN の信号レベルをご確認ください。信号レベルが弱い場合は該当する機器を有線 LAN で接続することをご検討ください。・ 再起動ボタンを押して該当機器を再起動し、再度お試しください。
無線機器異常エラー	以下の方法で問題が解消される可能性があります。 <ul style="list-style-type: none">・ 再起動ボタンを押して該当機器を再起動し、再度お試しください。 上記の方法で解決しない場合は、ヤマハのサポートにお問い合わせください。

エラーメッセージ一覧 (2/2)

メッセージ	対策
無線使用チャンネルエラー	以下のいずれかの方法で問題が解消される可能性があります。 <ul style="list-style-type: none">・再起動ボタンを押して該当機器を再起動し、再度お試しください。・ルーターやアクセスポイントの再起動をお試しください。
内部エラー	以下の方法で問題が解消される可能性があります。 <ul style="list-style-type: none">・再起動ボタンを押して該当機器を再起動し、再度お試しください。
Wi-Fi 設定エラー	本体機器の無線設定が無効になっています。 <ul style="list-style-type: none">・無線設定を有効にするか、MusicCast Surround/Stereo 構築するすべての機器を有線 LAN で接続し、"Link 制御" の設定を "速度優先" に設定して、再度お試しください。
リセットしてもよろしいですか? (このリセットは見つからない機器に対しては無効です)	以前に MusicCast Surround/Stereo の解除に失敗した機器を検出した場合も、このメッセージが表示されることがあります。メッセージに従ってリセットを実行することで再び新しい機器として設定が可能です。